

Commissioning ECOTAP® VPD®

Content:

1. Turn on Tranformer and status VPD
2. Menu navigation
3. Perform an automatic adjustment
4. Perform a manual calibration run with test circuits
5. Control unit in operation

