


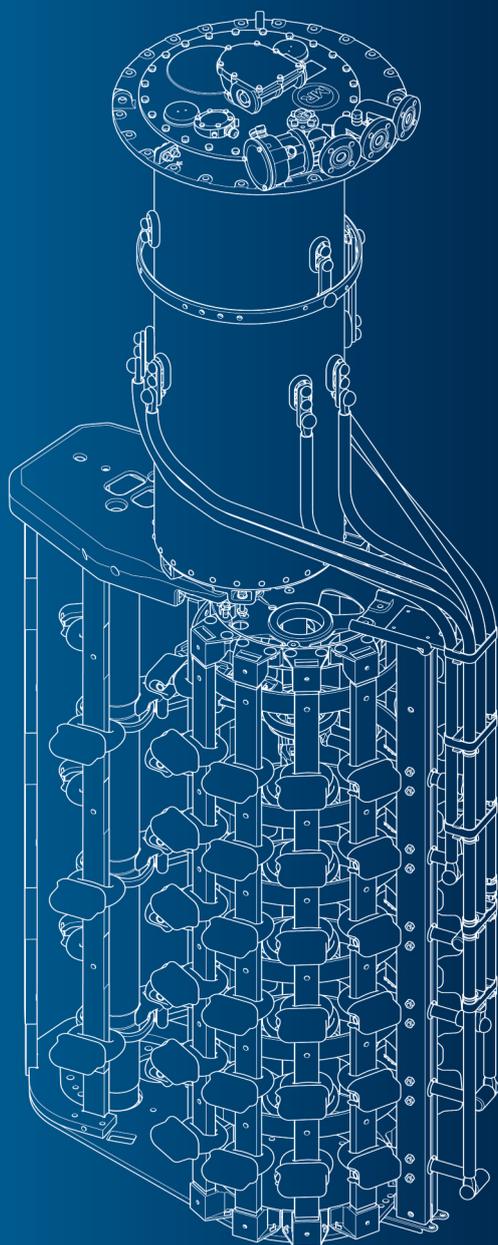

# Installation and commissioning instructions VACUTAP® VR®. On-load tap-changer

I<sub>rm</sub> 1,600 A, selector size E  
8958780/00 EN



© All rights reserved by Maschinenfabrik Reinhausen

Dissemination and reproduction of this document and use and disclosure of its content are strictly prohibited unless expressly permitted.

Infringements will result in liability for compensation. All rights reserved in the event of the granting of patents, utility models or designs.

The product may have been altered since this document was published.

We reserve the right to change the technical data, design and scope of supply.

Generally the information provided and agreements made when processing the individual quotations and orders are binding.

The original operating instructions were written in German.

# Table of contents

<b>1 Introduction .....</b>	<b>5</b>	5.2 Installing the on-load tap-changer in the transformer (standard version) .....	35
1.1 Validity .....	5	5.2.1 Fastening on-load tap-changer to transformer cover .....	35
1.2 Manufacturer .....	5	5.2.2 Connecting the tap winding and on-load tap-changer take-off lead .....	53
1.3 Completeness .....	5	5.2.3 Performing transformer ratio test before drying .....	55
1.4 Safekeeping .....	5	5.2.4 Performing DC resistance measurement on transformer .....	56
1.5 Notation conventions .....	6	5.2.5 Drying on-load tap-changer in autoclave .....	56
1.5.1 Hazard communication system .....	6	5.2.6 Drying on-load tap-changer in transformer tank .....	63
1.5.2 Information system .....	6	5.2.7 Filling the oil compartment of the on-load tap-changer with insulating fluid .....	76
1.5.3 Instruction system .....	6	5.2.8 Performing transformer ratio test after drying .....	77
<b>2 Safety .....</b>	<b>8</b>	5.3 Installing on-load tap-changer in transformer (bell-type tank version) .....	79
2.1 Appropriate use .....	8	5.3.1 Inserting on-load tap-changer into supporting structure .....	79
2.2 Inappropriate use .....	9	5.3.2 Connecting the tap winding and on-load tap-changer take-off lead .....	83
2.3 Fundamental safety instructions .....	9	5.3.3 Performing transformer ratio test before drying .....	85
2.4 Personnel qualification .....	10	5.3.4 Performing DC resistance measurement on transformer .....	86
2.5 Personal protective equipment .....	11	5.3.5 Drying on-load tap-changer in autoclave .....	86
<b>3 Product description .....</b>	<b>12</b>	5.3.6 Lifting top part of on-load tap-changer head off supporting flange (bottom part) .....	93
3.1 Scope of delivery .....	12	5.3.7 Attaching the bell-type tank and connecting the on-load tap-changer to the top part of the on-load tap-changer head .....	98
3.2 On-load tap-changer .....	12	5.3.8 Drying on-load tap-changer in transformer tank .....	107
3.2.1 Function description .....	12	5.3.9 Filling the oil compartment of the on-load tap-changer with insulating fluid .....	121
3.2.2 Design/versions .....	13	5.3.10 Performing transformer ratio test after drying .....	122
3.2.3 Nameplate and serial number .....	17		
3.2.4 Protective devices .....	18		
3.3 Drive shaft .....	24		
3.3.1 Function description .....	24		
3.3.2 Design/versions .....	24		
<b>4 Packaging, transport and storage .....</b>	<b>29</b>		
4.1 Packaging .....	29		
4.1.1 Suitability .....	29		
4.1.2 Markings .....	30		
4.2 Transportation, receipt and handling of shipments .....	31		
4.3 Storage of shipments .....	32		
4.4 Unpacking shipments and checking for transportation damages .....	32		
<b>5 Mounting .....</b>	<b>33</b>		
5.1 Preparatory work .....	33		
5.1.1 Fitting mounting flange on transformer cover .....	33		
5.1.2 Fitting stud bolts on mounting flange .....	34		

5.4 Fitting protective devices and drive components.....	124	<b>9 Technical data .....</b>	<b>210</b>
5.4.1 Electrically connecting the temperature sensor.....	124	9.1 Technical data for on-load tap-changer .....	210
5.4.2 Connecting the tap-change supervisory device .....	124	9.1.1 On-load tap-changer properties.....	210
5.4.3 Installing protective relay in piping and connecting .....	124	9.1.2 Permissible ambient conditions.....	210
5.4.4 Installing and connecting the pressure monitoring device .....	134	9.1.3 Height of the oil conservator.....	211
5.4.5 Fitting motor-drive unit .....	137	9.1.4 Installation height above sea level.....	212
5.4.6 Fitting drive shaft.....	137	9.1.5 Step capacity diagrams .....	212
5.4.7 Centering on-load tap-changer and motor-drive unit .....	189	9.2 Technical data for protective relay .....	214
5.4.8 Making the electrical connections for the motor-drive unit .....	189	9.3 Special models of protective relay .....	216
<b>6 Commissioning.....</b>	<b>190</b>	9.3.1 Protective relay with CO change-over contact as tripping switch .....	216
6.1 Commissioning the on-load tap-changer at the transformer manufacturer's site .....	190	9.3.2 Protective relay with several dry-reed magnetic switches .....	216
6.1.1 Bleeding on-load tap-changer head and suction pipe .....	190	9.4 Technical data for pressure monitoring device.....	218
6.1.2 Grounding the on-load tap-changer.....	192	9.5 Limit values for dielectric strength and water content of insulating fluids.....	219
6.1.3 Checking motor-drive unit.....	193	9.6 On-load tap-changer for Y connection with open neutral point.....	220
6.1.4 High-voltage tests on the transformer .....	193	<b>10 Drawings.....</b>	<b>221</b>
6.2 Transporting transformer to the operating site.....	195	10.1 Dimensional drawings.....	221
6.2.1 Transport with drive removed.....	195	10.1.1 10171473 .....	222
6.2.2 Transport with full transformer tank and without oil conservator.....	195	10.2 On-load tap-changer head .....	223
6.2.3 Transport with empty transformer tank .....	196	10.2.1 893899 .....	224
6.3 Commissioning transformer at operating site .....	197	10.2.2 720781 .....	225
6.3.1 Filling the oil compartment of the on-load tap-changer with insulating fluid.....	197	10.2.3 895168 .....	226
6.3.2 Bleeding on-load tap-changer head and suction pipe .....	198	10.2.4 892916.....	227
6.3.3 Checking motor-drive unit .....	199	10.2.5 890183 .....	228
6.3.4 Checking protective relay.....	200	10.2.6 723015 .....	229
6.3.5 Checking pressure monitoring device.....	201	10.2.7 720845.....	230
6.3.6 Commissioning the transformer .....	202	10.2.8 766161 .....	231
<b>7 Fault elimination .....</b>	<b>203</b>	10.3 Adjustment plans .....	232
7.1 Tripping the protective relay and re-commissioning the transformer .....	205	10.3.1 10171249 .....	233
7.1.1 Flap valve in OPERATION position .....	205	10.3.2 10171250.....	234
7.1.2 Flap valve in OFF position.....	206	<b>Glossary.....</b>	<b>235</b>
7.1.3 Re-commissioning the transformer.....	206		
7.2 Tripping the pressure monitoring device and putting the transformer back into operation.....	207		
7.2.1 Sensor in the OPERATION position.....	207		
7.2.2 Sensor in the OFF position .....	207		
7.2.3 Re-commissioning the transformer .....	208		
<b>8 Disposal.....</b>	<b>209</b>		

# 1 Introduction

This technical file contains detailed descriptions of the safe and proper installation, connection, and commissioning of the product.

It also includes safety instructions and general information about the product.

Information about operation can be found in the operating instructions.

This technical file is intended solely for specially trained and authorized personnel.

## 1.1 Validity

This technical file applies to the VACUTAP® VRL III 1600 on-load tap-changer.

## 1.2 Manufacturer

Maschinenfabrik Reinhausen GmbH  
Falkensteinstrasse 8  
93059 Regensburg  
Germany

Tel.: +49 941 4090-0  
E-mail: sales@reinhausen.com  
Internet: www.reinhausen.com  
MR Reinhausen customer portal: <https://portal.reinhausen.com>

Further information on the product and copies of this technical file are available from this address if required.

## 1.3 Completeness

This technical file is incomplete without the supporting documents.

The following documents are considered supporting documents:

- Unpacking instructions
- Supplement
- Routine test report
- Connection diagrams
- Dimensional drawings
- Order confirmation

## 1.4 Safekeeping

Keep this technical file and all supporting documents ready at hand and accessible for future use at all times.

## 1.5 Notation conventions

### 1.5.1 Hazard communication system

Warnings in this technical file are displayed as follows.

#### 1.5.1.1 Warning relating to section

Warnings relating to sections refer to entire chapters or sections, sub-sections or several paragraphs within this technical file. Warnings relating to sections use the following format:

 **WARNING**



##### Type of danger!

Source of the danger and outcome.

- > Action
- > Action

#### 1.5.1.2 Embedded warning information

Embedded warnings refer to a particular part within a section. These warnings apply to smaller units of information than the warnings relating to sections. Embedded warnings use the following format:

 **DANGER!** Instruction for avoiding a dangerous situation.

#### 1.5.1.3 Signal words in warning notices

Signal word	Meaning
DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates measures to be taken to prevent damage to property.

Table 1: Signal words in warning notices

### 1.5.2 Information system

Information is designed to simplify and improve understanding of particular procedures. In this technical file it is laid out as follows:



Important information.

### 1.5.3 Instruction system

This technical file contains single-step and multi-step instructions.

#### Single-step instructions

Instructions which consist of only a single process step are structured as follows:

Aim of action

- ✓ Requirements (optional).
- > Step 1 of 1.
  - » Result of step (optional).
  - » Result of action (optional).

### **Multi-step instructions**

Instructions which consist of several process steps are structured as follows:

Aim of action

- ✓ Requirements (optional).
- 1. Step 1.
  - » Result of step (optional).
- 2. Step 2.
  - » Result of step (optional).
  - » Result of action (optional).

# 2 Safety

- Read this technical file through to familiarize yourself with the product.
- This technical file is a part of the product.
- Read and observe the safety instructions provided in this chapter.
- Read and observe the warnings in this technical file in order to avoid function-related dangers.
- The product is manufactured on the basis of state-of-the-art technology. Nevertheless, risks to life and limb for the user or impairment of the product and other material assets due to the function may arise in the event of improper use.

## 2.1 Appropriate use

The product is an on-load tap-changer and adjusts the transmission ratio of transformers without interrupting the load flow. The product is designed solely for use in electrical energy systems and facilities. If used as intended and in compliance with the requirements and conditions specified in this technical file as well as the warning notices in this technical file and attached to the product, then the product does not present any danger to people, property or the environment. This applies throughout the service life of the product, from delivery, installation and operation to removal and disposal.

The following is considered appropriate use:

- Use the product only with the transformer/motor-drive unit specified in the order.
- The serial numbers of on-load tap-changer and on-load tap-changer accessories (drive, drive shaft, bevel gear, protective relay, etc.) must match if the on-load tap-changer and on-load tap-changer accessories are supplied as a set for one order.
- You will find the standard valid for the product and the year of issue on the nameplate.
- Operate the product in accordance with this provided technical file, the agreed delivery conditions and technical data.
- Ensure that all necessary work is performed by qualified personnel only.
- Only use the equipment and special tools included in the scope of delivery for the intended purpose and in accordance with the specifications of this technical file.
- The on-load tap-changer is not intended to be used with an oil filter unit.

### Permitted electrical operating conditions

In addition to the design data in accordance with the order confirmation, observe the following limits for the through-current and the step voltage:

In the standard version, the on-load tap-changer is designed for sinusoidal 50/60 Hz alternating current with a curve form symmetrical to the zero axis and can switch 2 times the rated through-current  $I_r$  at its rated step voltage  $U_{ir}$ .

Exceeding the rated step voltage  $U_{ir}$  by up to 10% for a short period is permitted as long as the rated step capacity  $P_{STN}$  permissible for this step voltage is not exceeded.

## 2.2 Inappropriate use

Use is considered inappropriate if the product is used in a way other than as described in the "Appropriate use" section. In addition, observe the following:

### Prohibited electrical operating conditions

All operating conditions that do not comply with the design data in accordance with the order confirmation are prohibited.

Prohibited operating conditions may arise due to short circuits as well as due to inrush current impulses when energizing transformers or other electrical machines. This applies to the affected transformer itself just as it does to transformers electrically connected in parallel or serially or other electrical machines.

Higher voltages may occur due to transformer overexcitation following load shedding, for example.

Operations outside of the permitted operating conditions can lead to injury to persons and damage to the product.

- Prevent any such operations outside of the permitted operating conditions by taking suitable measures.

## 2.3 Fundamental safety instructions

To prevent accidents, disruptions and damage as well as unacceptable adverse effects on the environment, those responsible for transport, installation, operation, maintenance and disposal of the product or parts of the product must ensure the following:

### Personal protective equipment

Loosely worn or unsuitable clothing increases the danger of becoming trapped or caught up in rotating parts and the danger of getting caught on protruding parts. This poses a danger to life and limb.

- Wear appropriate personal protective equipment such as a helmet, work gloves, etc. for the respective activity.
- Never wear damaged personal protective equipment.
- Never wear rings, necklaces, or other jewelry.
- If you have long hair, wear a hairnet.

### Work area

Untidy and poorly lit work areas can lead to accidents.

- Keep the work area clean and tidy.
- Make sure that the work area is well lit.
- Observe the applicable laws for accident prevention in the relevant country.

### Working during operation

The product may only be operated in a sound, operational condition. Otherwise it poses a danger to life and limb.

- Regularly check the operational reliability of safety equipment.
- Comply with the inspection work, maintenance work and maintenance intervals described in this technical file.

### Explosion protection

Highly flammable or explosive gases, vapors and dusts can cause serious explosions and fire. This increases the danger to life and limb.

- Do not install, operate or perform maintenance work on the product in areas where a risk of explosion is present.

### Safety markings

Warning signs and safety information plates are safety markings on the product. They are an important aspect of the safety concept.

- Observe all safety markings on the product.
- Make sure all safety markings on the product remain intact and legible.
- Replace safety markings that are damaged or missing.

### Ambient conditions

To ensure reliable and safe operation, the product must only be operated under the ambient conditions specified in the technical data.

- Observe the specified operating conditions and requirements for the installation location.

### Auxiliary materials and operating materials

Auxiliary materials and operating materials not approved by the manufacturer can lead to personal injury, damage to property and malfunctions of the product.

- Only use insulating fluids [► Section 9.1.2, Page 210] approved by the manufacturer.
- Only use conductive and grounded hoses, pipes and pump equipment that are approved for flammable liquids.
- Only use lubricants and auxiliary materials approved by the manufacturer.
- Contact the manufacturer.

### Modifications and conversions

Unauthorized or inappropriate changes to the product may lead to personal injury, material damage and operational faults.

- Only modify the product after consultation with Maschinenfabrik Reinhausen GmbH.

### Spare parts

Spare parts not approved by Maschinenfabrik Reinhausen GmbH may lead to physical injury, damage to the product and malfunctions.

- Only use spare parts that have been approved by Maschinenfabrik Reinhausen GmbH.
- Contact Maschinenfabrik Reinhausen GmbH.

## 2.4 Personnel qualification

The person responsible for assembly, commissioning, operation, maintenance and inspection must ensure that the personnel are sufficiently qualified.

### Electrically skilled person

The electrically skilled person has a technical qualification and therefore has the required knowledge and experience, and is also conversant with the applicable standards and regulations. The electrically skilled person is also proficient in the following:

- Can identify potential dangers independently and is able to avoid them.
- Is able to perform work on electrical systems.

- Is specially trained for the working environment in which (s)he works.
- Must satisfy the requirements of the applicable statutory regulations for accident prevention.

### Electrically trained persons

An electrically trained person receives instruction and guidance from an electrically skilled person in relation to the tasks undertaken and the potential dangers in the event of inappropriate handling as well as the protective devices and safety measures. The electrically trained person works exclusively under the guidance and supervision of an electrically skilled person.

### Operator

The operator uses and operates the product in line with this technical file. The operating company provides the operator with instruction and training on the specific tasks and the associated potential dangers arising from improper handling.

### Technical Service

We strongly recommend having maintenance, repairs and retrofitting carried out by our Technical Service department. This ensures that all work is performed correctly. If maintenance is not carried out by our Technical Service department, please ensure that the personnel who carry out the maintenance are trained and authorized by Maschinenfabrik Reinhausen GmbH to carry out the work.

### Authorized personnel

Authorized personnel are trained by Maschinenfabrik Reinhausen GmbH to carry out special maintenance.

## 2.5 Personal protective equipment

Personal protective equipment must be worn during work to minimize risks to health.

- Always wear the personal protective equipment required for the job at hand.
- Never wear damaged personal protective equipment.
- Observe information about personal protective equipment provided in the work area.

<b>Protective clothing</b>	Close-fitting work clothing with a low tearing strength, with tight sleeves and with no protruding parts. It mainly serves to protect the wearer against being caught by moving machine parts.
<b>Safety shoes</b>	To protect against falling heavy objects and slipping on slippery surfaces.
<b>Safety glasses</b>	To protect the eyes from flying parts and splashing liquids.
<b>Visor</b>	To protect the face from flying parts and splashing liquids or other dangerous substances.
<b>Hard hat</b>	To protect against falling and flying parts and materials.
<b>Hearing protection</b>	To protect against hearing damage.
<b>Protective gloves</b>	To protect against mechanical, thermal, and electrical hazards.

Table 2: Personal protective equipment

# 3 Product description

## 3.1 Scope of delivery

The product is packaged with protection against moisture and is usually delivered as follows:

- Diverter switch (oil compartment with diverter switch insert)
- Selector
- Motor-drive unit
- Drive shaft with coupling parts and bevel gear
  
- Protective devices
- Technical files

Please refer to the delivery slip for full details of the scope of delivery.



On-load tap-changers can also be provided as an on-load tap-changer set with a common motor-drive unit.

Note the following information:

- Check the shipment for completeness on the basis of the shipping documents.
- Store the parts in a dry place until installation
- The product must remain in its airtight, protective wrapping and may only be removed immediately before installation

You will find more information in the "Packaging, transport, and storage" [► Section 4, Page 29] chapter.

## 3.2 On-load tap-changer

### 3.2.1 Function description

On-load tap-changers are used to adjust the transmission ratio of transformers without interrupting the load flow. This makes it possible to compensate for aspects such as fluctuations in voltage occurring in the power transmission grid. For this purpose, on-load tap-changers are fitted in transformers and connected to the active part of the transformer.

A motor-drive unit which receives a control impulse (e.g. from a voltage regulator) changes the operating position of the on-load tap-changer, as a result of which the transformer's transmission ratio is adapted to the prevailing operating requirements.

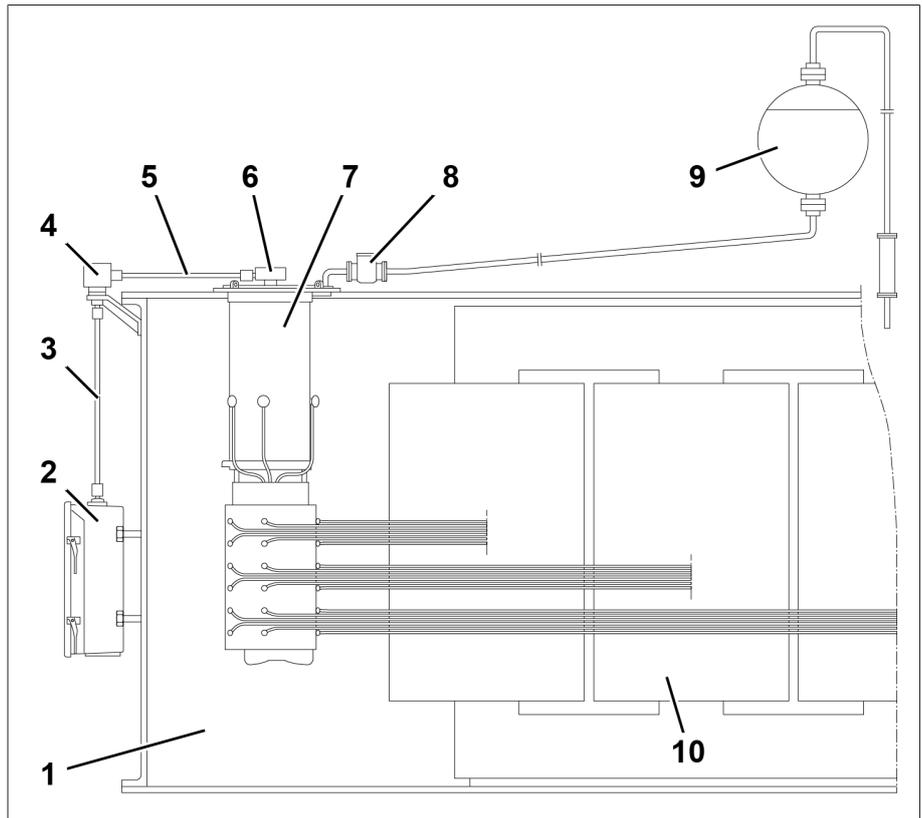


Figure 1: System overview of on-load tap-changer, transformer

1	Transformer tank	6	Upper gear unit
2	Motor-drive unit	7	On-load tap-changer
3	Vertical drive shaft	8	Protective relay
4	Bevel gear	9	Oil conservator
5	Horizontal drive shaft	10	Active part of the transformer

### 3.2.2 Design/versions

The following drawing shows the main components of the on-load tap-changer.

You will find a detailed drawing of the on-load tap-changer in the "Drawings [▶ Section 10, Page 221]" section.

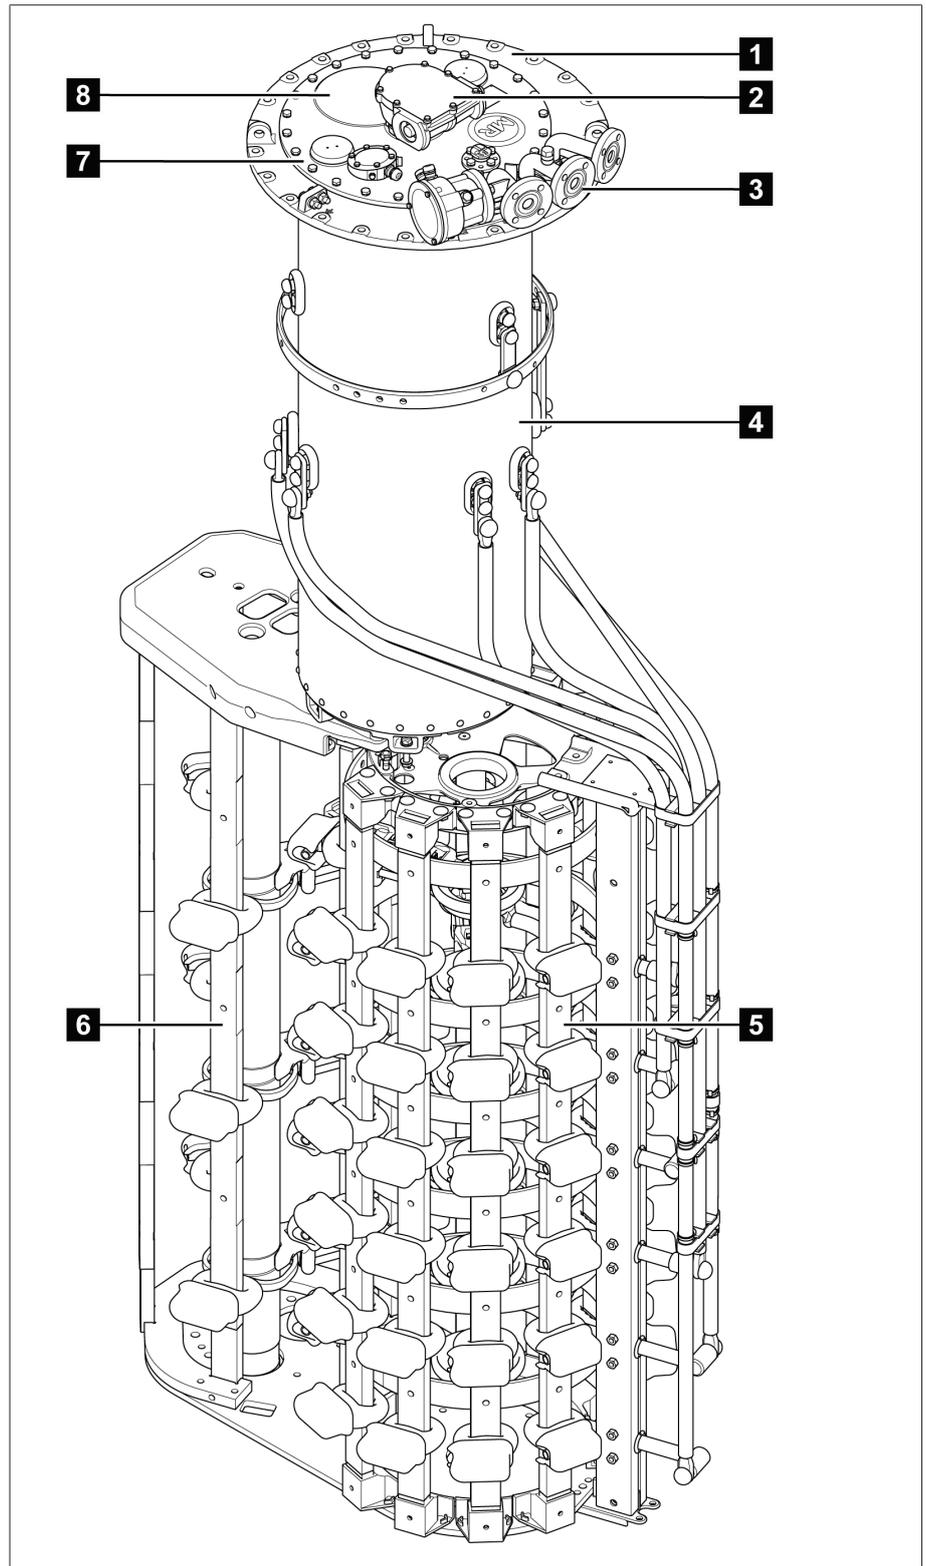


Figure 2: On-load tap-changer design

1	On-load tap-changer head	2	Upper gear unit
3	Pipe bend	4	Oil compartment
5	Tap selector	6	Change-over selector (optional)
7	On-load tap-changer head cover	8	Rupture disk

### 3.2.2.1 Pipe connections

The on-load tap-changer head features 4 pipe connections for different purposes.

Depending on the order, some or all of these pipe connections are fitted with pipe bends ex factory. All pipe bends without terminal box for the tap-change supervisory control can be freely swiveled once the pressure ring is loosened.

The on-load tap-changer head features 4 pipe connections for different purposes.

Depending on the order, some or all of these pipe connections are fitted with pipe bends ex factory. All pipe bends can be freely swiveled once the pressure ring is loosened.

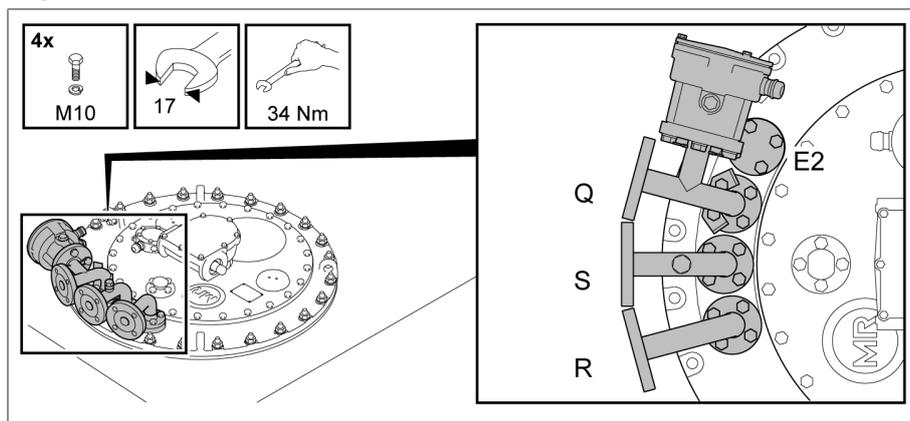


Figure 3: Pipe connections with pipe bends

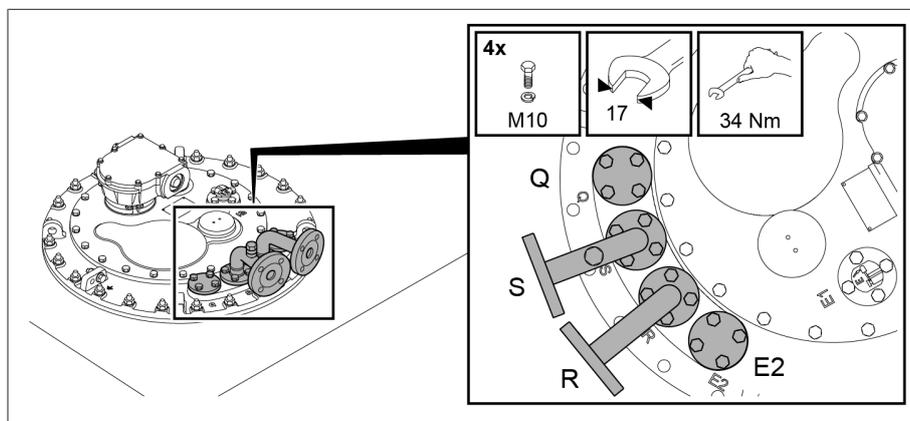


Figure 4: Pipe connections with pipe bends

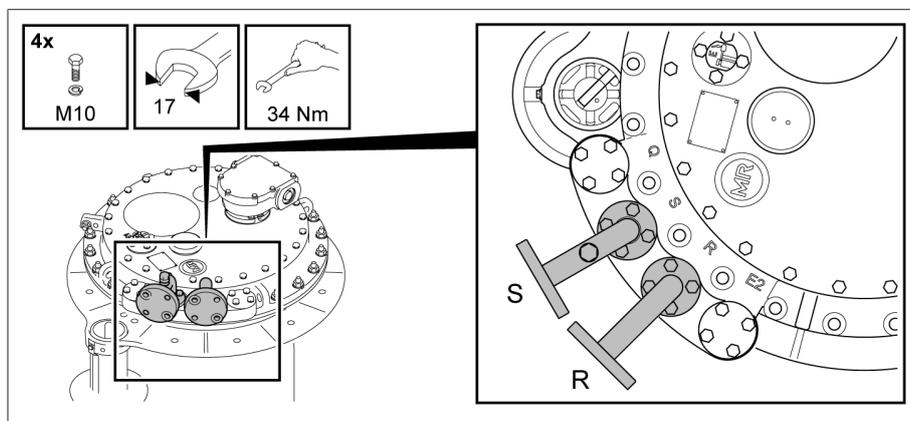


Figure 5: Pipe connections with pipe bends

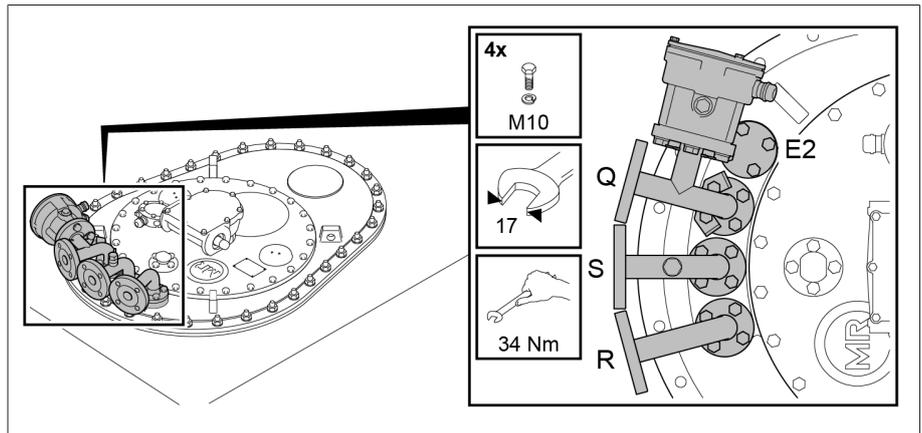


Figure 6: Pipe connections with pipe bends

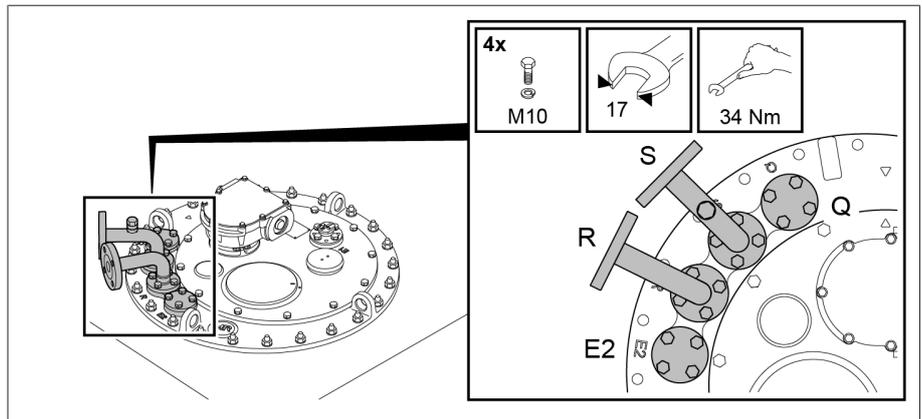


Figure 7: Pipe connections with pipe bends

### Pipe connection Q

The pipe connection Q is closed with a blank cover. Depending on the on-load tap-changer type, either the connection cables of the tap-change supervisory device delivered as an option are routed through the pipe connection, or the oil filter unit is connected to the pipe connection.

- The functions of the R and Q pipe connections can be interchanged.

### Pipe connection Q

The pipe connection Q is closed with a blank cover. If the on-load tap-changer is equipped with a tap-change supervisory device, the connection cables for the tap-change supervisory device are fed through the pipe connection.

- The functions of the R and Q pipe connections can be interchanged.

### Pipe connection Q

The pipe connection Q is closed with a blank cover.

- The functions of the R and Q pipe connections can be interchanged.

### Pipe connection Q

Pipe connection Q is closed with a blank cover and is intended for connecting the oil filter unit.



The functions of the R and Q pipe connections can be interchanged.

### Pipe connection S

The pipe bend on pipe connection S features a vent screw and can be connected to a pipe that ends with a drain valve on the side of the transformer tank at operating height. If the on-load tap-changer is fitted with an oil suction pipe, the on-load tap-changer can be completely emptied via pipe connection S.

### Pipe connection R

Pipe connection R is intended for attachment of the protective relay and connection of the on-load tap-changer oil conservator and can be interchanged with pipe connection Q.

### Pipe connection E2

Pipe connection E2 is sealed off with a blank cover. It leads into the oil tank of the transformer, directly under the on-load tap-changer head and can be connected to a collective pipe for the Buchholz relay, if necessary. This pipe connection serves a further purpose, namely to equalize the pressure between the transformer tank and oil compartment of the on-load tap-changer, which is necessary for drying, filling with insulating fluid and transportation of the transformer.

## 3.2.3 Nameplate and serial number

The nameplate with serial number is on the on-load tap-changer head cover.

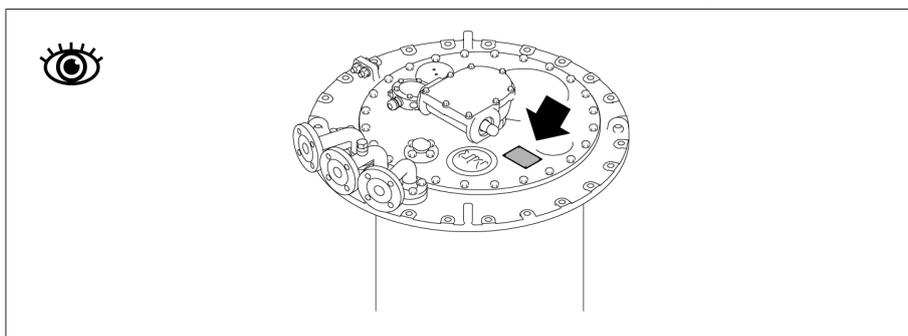


Figure 8: Nameplate

The serial number can also be found on the selector.

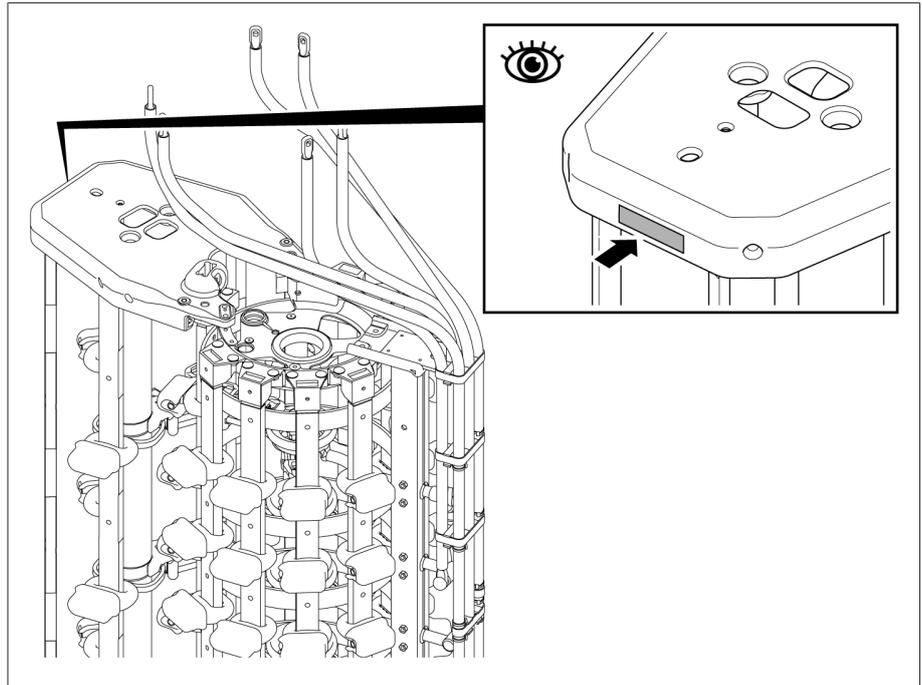


Figure 9: Serial number

### 3.2.4 Protective devices

The on-load tap-changer is equipped with the following protective devices.

#### 3.2.4.1 Protective relay

##### 3.2.4.1.1 Function description

The protective relay is looped into the circuit breaker tripping circuit. It is tripped when the specified speed of flow from the on-load tap-changer head to the oil conservator is exceeded due to a fault. The flowing insulating fluid actuates the flap valve which tips over into position OFF. The contact in the dry-reed magnetic switch is thereby actuated, the circuit breakers are tripped, and the transformer is de-energized.

The protective relay is a component of an on-load tap-changer filled with insulating fluid and its properties conform to the respective applicable version of IEC publication 60214-1.

- Diverter switch operations at rated switching capacity or at permissible overload will not cause the protective relay to trip.
- The protective relay responds to flow, not to gas accumulated in the protective relay. It is not necessary to bleed the protective relay when filling the transformer with insulating fluid. Gas accumulation in the protective relay is normal.

### 3.2.4.1.2 Design/versions

Front view

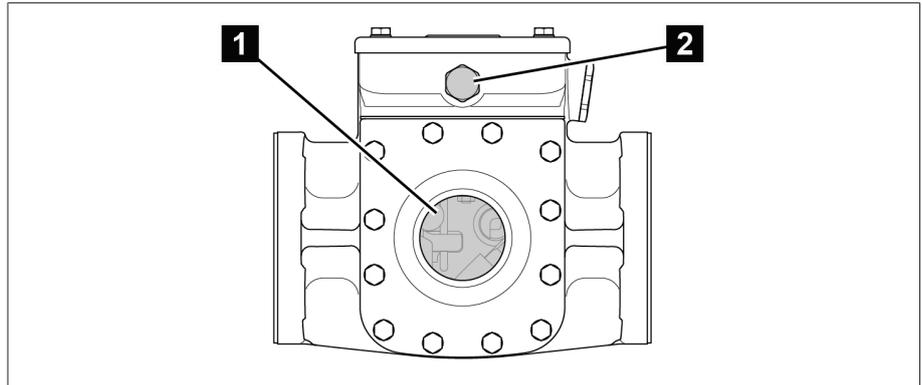


Figure 10: Protective relay RS 2001

1	Inspection window	2	Pressure equalization element
---	-------------------	---	-------------------------------

Rear view

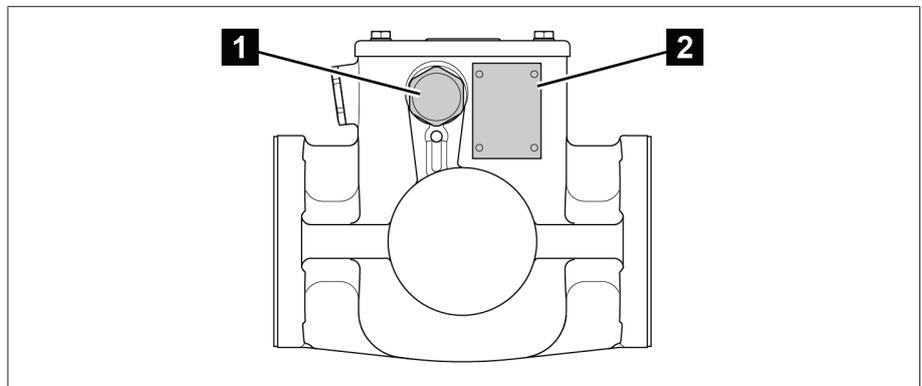


Figure 11: Protective relay RS 2001

1	Dummy plug	2	Nameplate
---	------------	---	-----------

• The protective relay RS 2001/R has an extra inspection window on the rear.

View from above

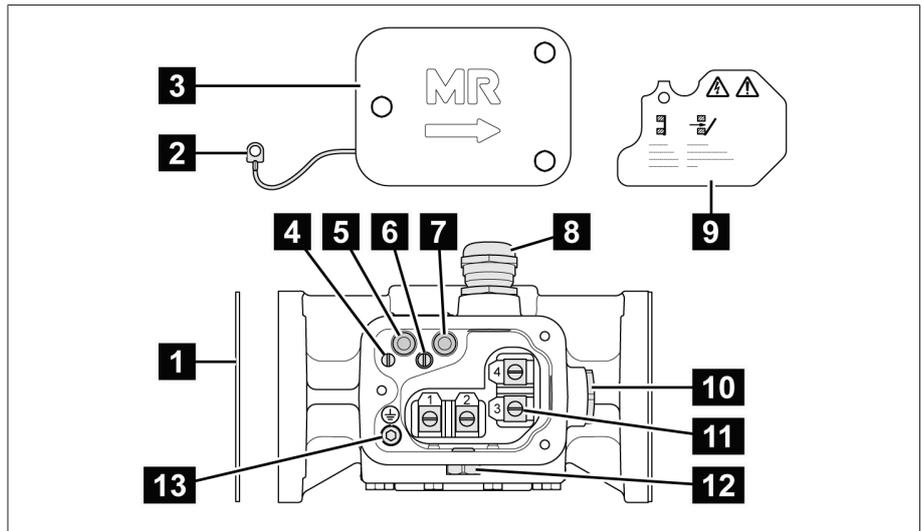


Figure 12: Protective relay RS 2001

1	Gasket	2	Potential tie-in
3	Terminal box cover	4	Slotted head screw for potential tie-in
5	OPERATION (reset) test button	6	Slotted head screw for protective cover
7	OFF (test tripping) test button	8	Cable gland
9	Protective cover	10	Dummy plug
11	Connection terminal	12	Pressure equalization element
13	Cylinder head screw for protective conductor connection		



The protective relays RS 2003 and RS 2004 have a 1/2"-14NPT adapter in place of the cable gland.

### 3.2.4.1.3 Nameplate

The nameplate is on the back of the protective relay.

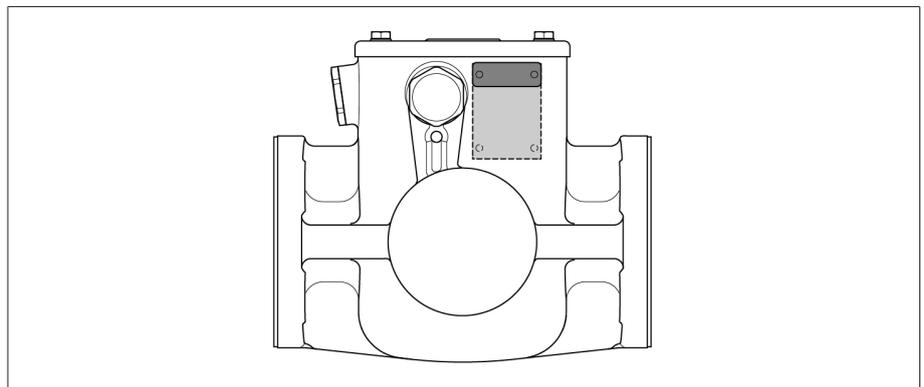


Figure 13: Nameplate

### 3.2.4.1.4 Safety markings

The following safety markings are used on the product:

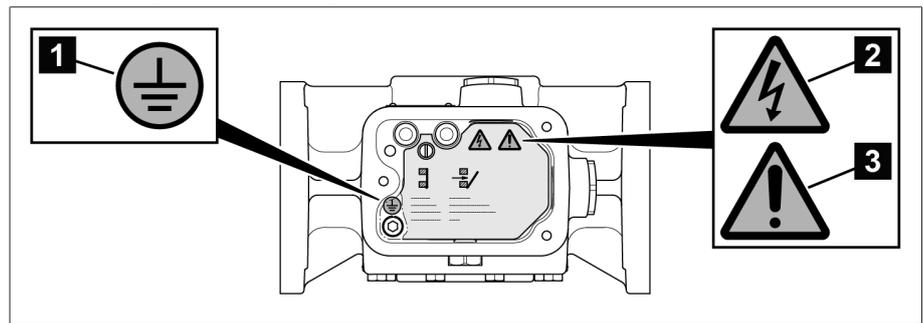


Figure 14: Safety markings overview

1	Protective conductor connection	2	Warning of dangerous electrical voltage
3	Read the documentation		

### 3.2.4.2 Pressure monitoring device DW

#### 3.2.4.2.1 Function description

The DW 2000 pressure monitoring device protects the on-load tap-changer from impermissible pressure increases, contributing to the safety of the transformer. The pressure monitoring device is installed on the outside of the on-load tap-changer and is tripped by impermissible static and dynamic pressures in the on-load tap-changer oil compartment.

The pressure monitoring device uses a concept where a corrugated tube acts as a barometer together with a spring providing counter force. This assembly is mechanically linked to the sensor on the snap-action switch.

The pressure increase activates the sensor on the snap-action switch, which flips into the OFF position. This triggers the circuit breaker and de-energizes the transformer. The sensor on the snap-action switch has to be reset to the initial position by hand after tripping.

Low-energy interference does not cause the pressure monitoring device to trip since the required tripping pressure is not reached. The tripping pressure is set at the factory and prevented from being changed.

The pressure monitoring device responds to large pressure increases faster than the protective relay. The protective relay is part of the standard MR protection system and comes as standard.

- Additional use of a pressure monitoring device also requires installation of the provided protective relay.

The features and characteristics of the pressure monitoring device comply with the respective applicable version of IEC publication 60214-1.

- Diverter switch operations at the rated switching capacity or permitted overload do not cause the pressure-operated relay to trip.



The pressure-operated relay responds to a pressure change and not to gas accumulation under the pressure-operated relay. Gas accumulation under the pressure-operated relay is normal.

### 3.2.4.2.2 Design/versions

There are two variants of the pressure monitoring device:

- DW 2000 for vertical installation
- DW 2000 for horizontal installation

The housing and the cover cap of the pressure monitoring device consist of lightweight, corrosion-resistant metal.

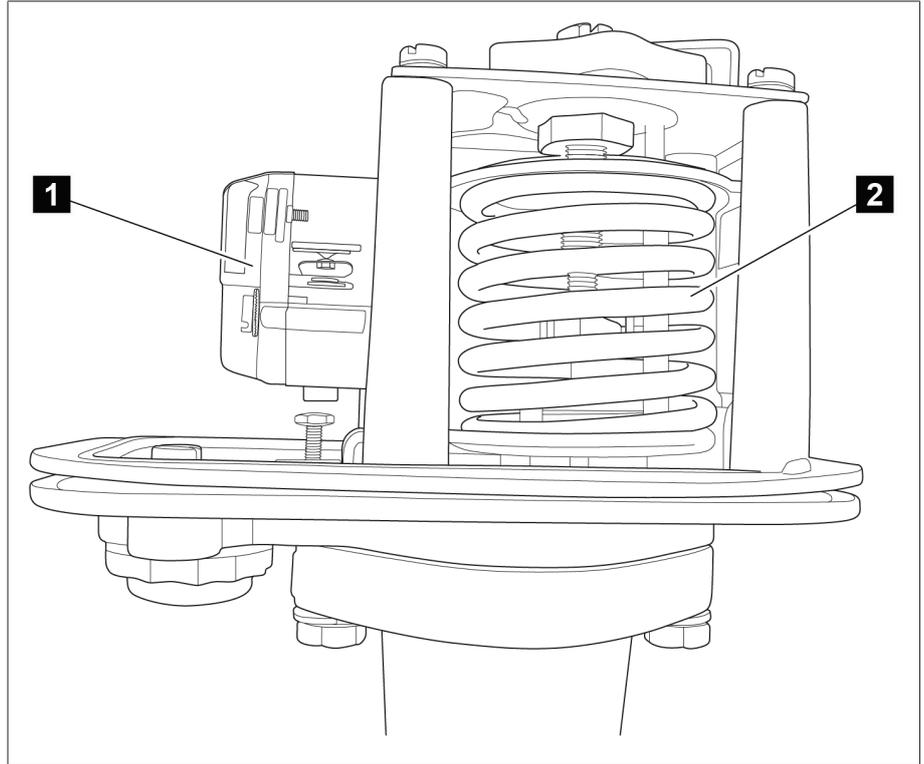


Figure 15: Snap-action switch and pressure measuring element

1	Snap-action switch	2	Pressure measuring element
---	--------------------	---	----------------------------

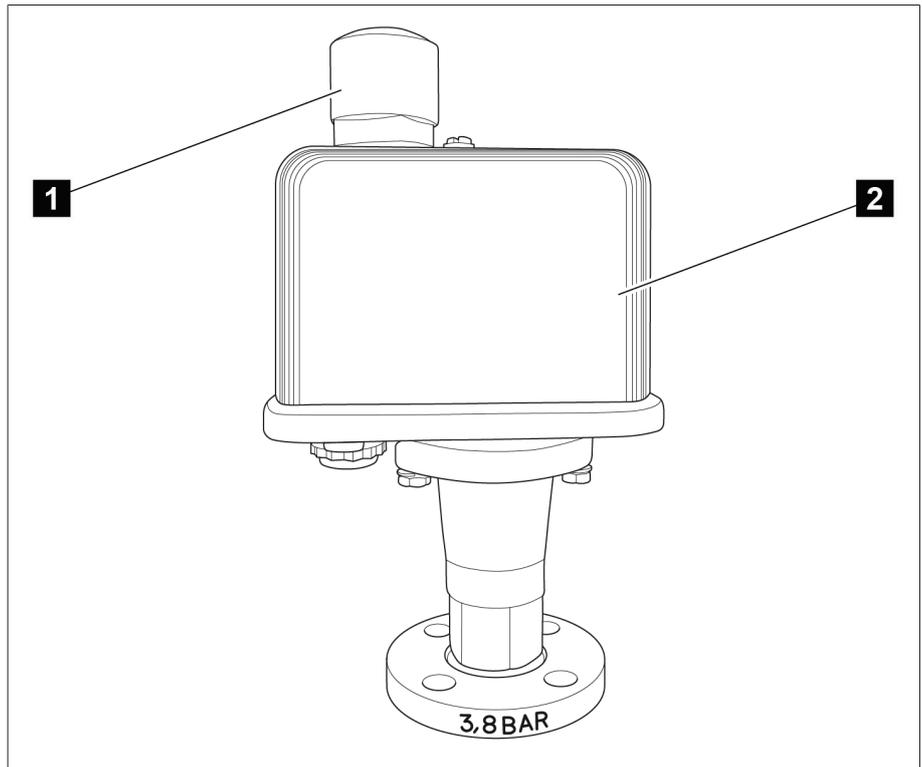


Figure 16: Pressure monitoring device with cover cap and ventilation

1	Ventilation	2	Cover cap
---	-------------	---	-----------

### 3.2.4.3 Rupture disk

The rupture disk is a pressure relief device without signaling contact in accordance with IEC 60214-1 and is located in the on-load tap-changer head cover.

The rupture disk responds to a defined overpressure in the oil compartment of the on-load tap-changer.

### 3.2.4.4 Pressure relief device MPREC®

On request, MR will supply a pre-fitted MPREC® pressure relief device in place of the rupture disk. This device responds to a defined overpressure in the oil compartment of the on-load tap-changer.

The on-load tap-changer therefore meets the requirements of IEC 60214-1 regarding pressure relief devices.

### 3.2.4.5 Tap-change supervisory device

The tap-change supervisory device monitors both the drive shaft between on-load tap-changer(s) and motor-drive unit and the correct switching of the diverter switch.

### 3.2.4.6 Temperature monitoring

The temperature monitoring system monitors the temperature of the insulating fluid in the oil compartment of the on-load tap-changer.

## 3.3 Drive shaft

### 3.3.1 Function description

The drive shaft is the mechanical connection between the drive and the on-load tap-changer/de-energized tap-changer.

The bevel gear changes the direction from vertical to horizontal.

Accordingly, the vertical drive shaft has to be mounted between drive and bevel gear, and the horizontal drive shaft between bevel gear and on-load tap-changer or de-energized tap-changer.

### 3.3.2 Design/versions

The drive shaft consists of a square tube and is coupled at each end by two coupling brackets and one coupling bolt to the driving or driven shaft end of the device to be connected.

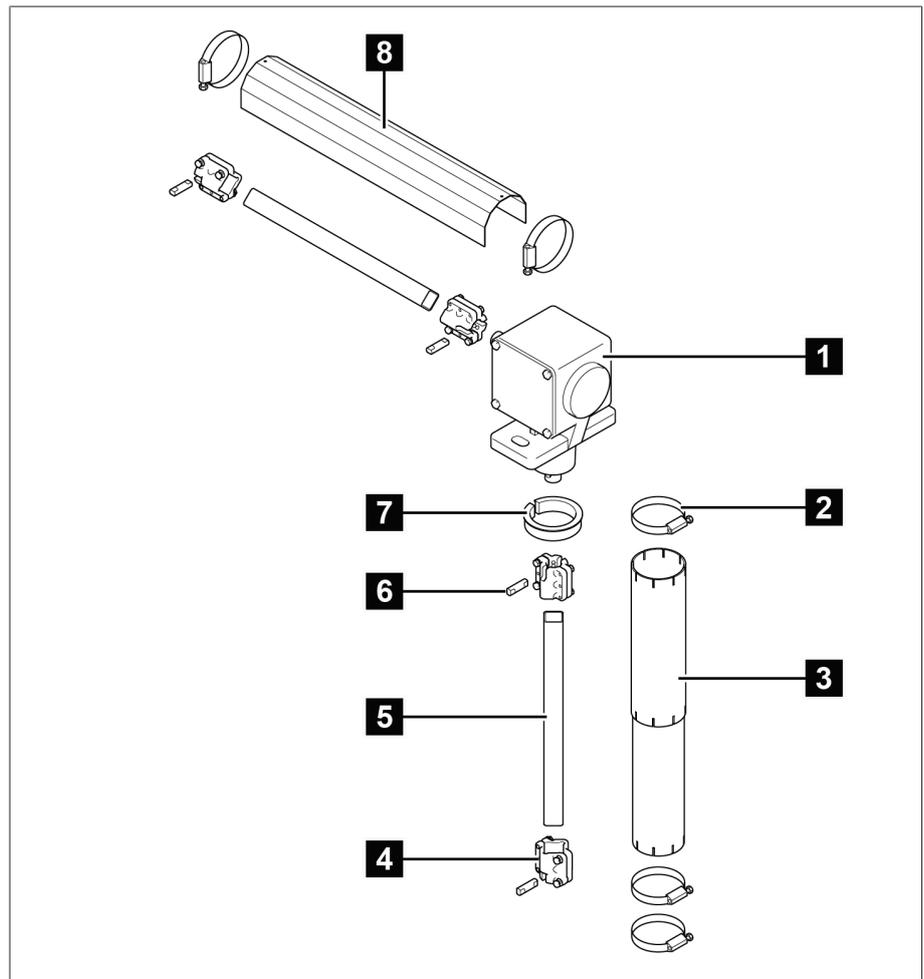


Figure 17: Components of the drive shaft

1	Bevel gear	2	Hose clip
3	Telescopic protective tube	4	Coupling bracket
5	Square tube	6	Coupling bolt
7	Adapter ring	8	Protective cover

### 3.3.2.1 Drive shaft without cardan joint and without insulator

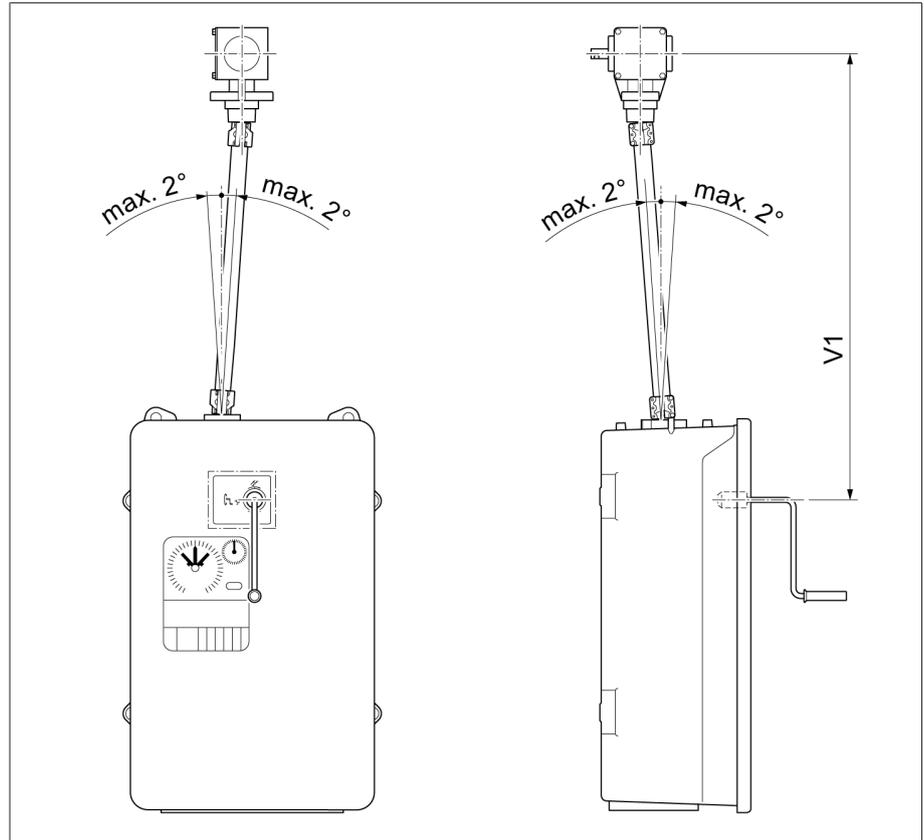


Figure 18: Drive shaft without cardan joint and without insulator (= standard version)

Configuration	V 1 min	Intermediate bearing
Middle of hand crank – middle of bevel gear (maximum permissible axial offset 2°)	536 mm	When the maximum value of 2472 mm is exceeded, it is necessary to use an intermediate bearing. $V 1 \leq 2472$ mm (without intermediate bearing) $V 1 > 2472$ mm (with intermediate bearing)

### 3.3.2.2 Drive shaft without cardan joint and with insulator

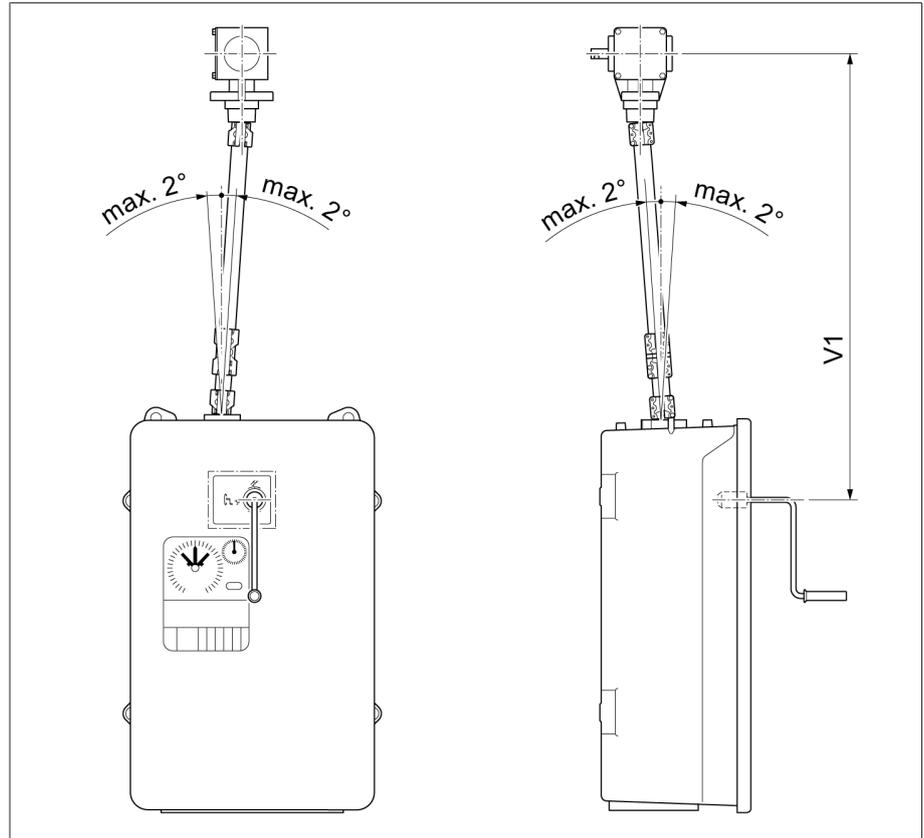


Figure 19: Drive shaft without cardan joint and with insulator (= special model)

Configuration	V 1 min	Intermediate bearing
Middle of hand crank – middle of bevel gear (maximum permissible axial offset 2°)	706 mm	When the maximum value of 2472 mm is exceeded, it is necessary to use an intermediate bearing. $V 1 \leq 2472$ mm (without intermediate bearing) $V 1 > 2472$ mm (with intermediate bearing)

### 3.3.2.3 Drive shaft with cardan joints, without insulator

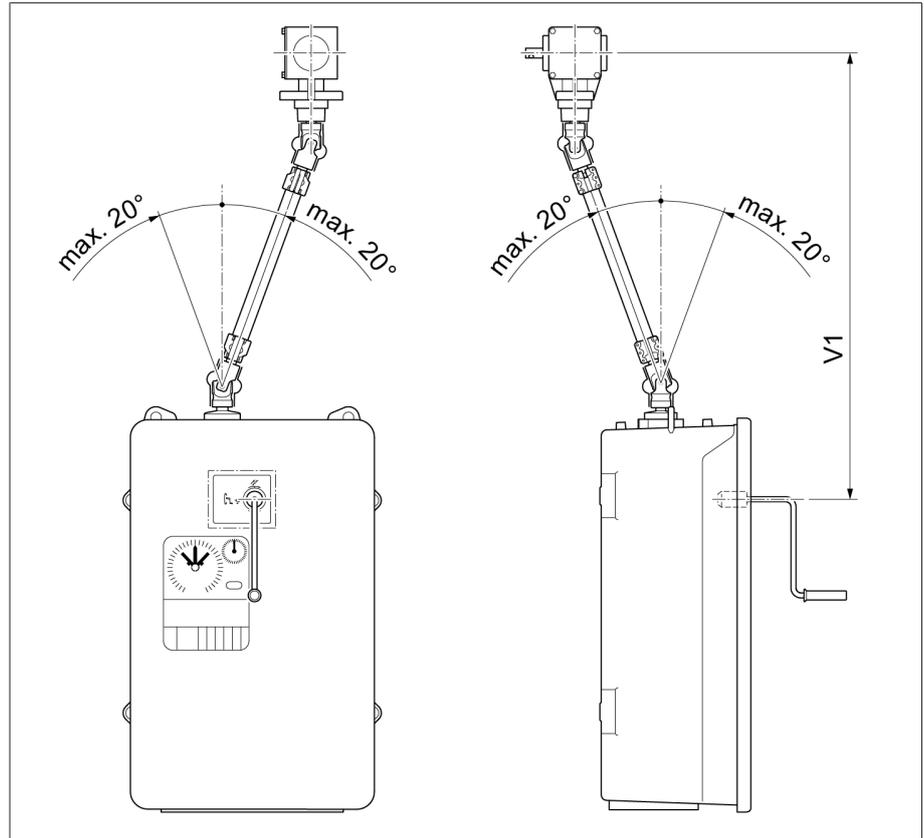


Figure 20: Drive shaft with cardan joints, without insulator (= special model)

Configuration	V 1 min [mm]	Intermediate bearing for [mm]
Middle of hand crank – middle of bevel gear (maximum permissible axial offset 20°)	798	V 1 > 2564

### 3.3.2.4 Drive shaft with cardan joints, with insulator

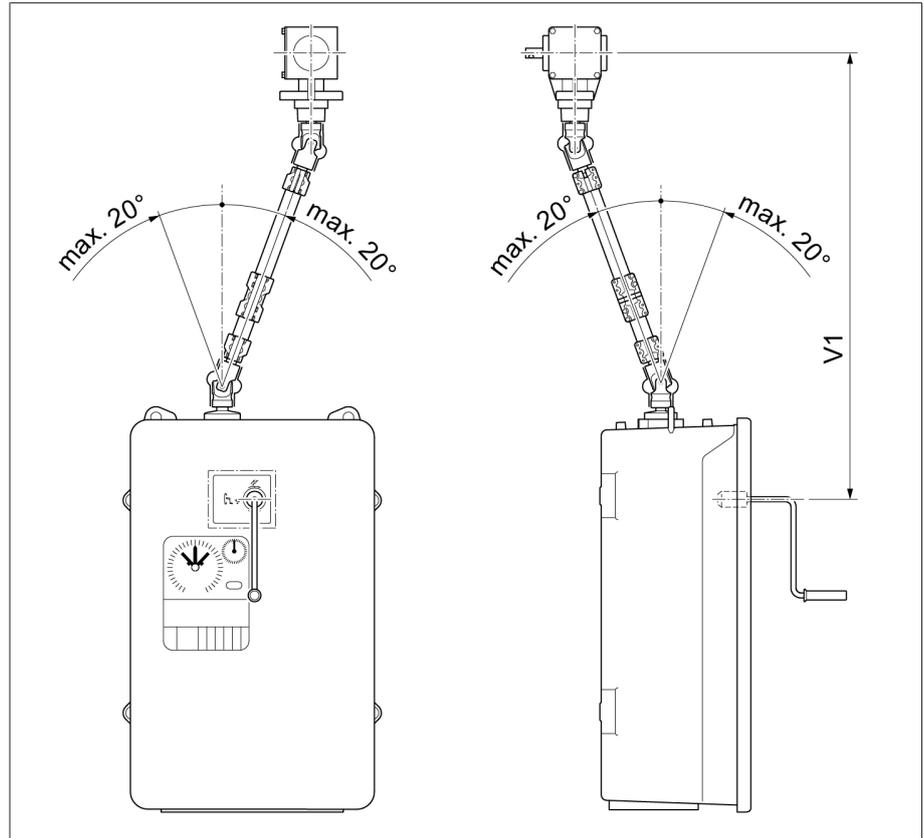


Figure 21: Drive shaft with cardan joints, with insulator (= special model)

Configuration	V 1 min [mm]	Intermediate bearing for [mm]
Middle of hand crank – middle of bevel gear (maximum permissible axial offset 20°)	978	V 1 > 2772

# 4 Packaging, transport and storage

## 4.1 Packaging

The products are sometimes supplied with sealed packaging and sometimes in a dry state, depending on requirements.

Sealed packaging surrounds the packaged goods with plastic foil on all sides.

Products that have also been dried are identified by a yellow label on the sealed packaging. In the dry state, delivery is also possible in a transport container.

The information in the following sections should be applied as appropriate.

### 4.1.1 Suitability

#### NOTICE

#### Property damage due to incorrectly stacked crates!

Stacking the crates incorrectly can lead to damage to the packaged goods.

- › The outer marking on the packaging states if, for example, the on-load tap-changer or selector has been packed upright. Never stack these crates.
- › General rule: Do not stack crates above a height of 1.5 m.
- › For other crates: Only stack up to 2 equally sized crates on top of one another.

The packaging is suitable to ensure undamaged and fully functional means of transportation in compliance with local transportation laws and regulations.

The packaged goods are packed in a sturdy crate. This crate ensures that, when in the intended transportation position, the packaged goods are stabilized to prevent impermissible changes in position, and that none of the parts touch the loading surface of the means of transport or touch the ground after unloading.

Sealed packaging surrounds the packaged goods with plastic foil on all sides. The packaged goods are protected from humidity using a desiccant. The plastic foil was bonded after the desiccant is added.

## 4.1.2 Markings

The packaging bears a signature with instructions for safe transport and correct storage. The following symbols apply to the shipment of non-hazardous goods. Adherence to these symbols is mandatory.

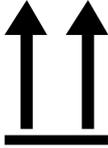
				
Protect against moisture	Top	Fragile	Attach lifting gear here	Center of mass

Table 3: Shipping pictograms

## 4.2 Transportation, receipt and handling of shipments

### ▲ WARNING



#### Danger of death or severe injury!

Danger of death or serious injuries due to tipping or falling load.

- > Only transport the crate when closed.
- > Do not remove the securing material used in the crate during transport.
- > If the product is delivered on a pallet, secure it sufficiently.
- > Only trained and authorized persons may select the sling gear and secure the load.
- > Do not walk under the suspended load.
- > Use means of transport and lifting gear with a sufficient carrying capacity in accordance with the weight stated on the delivery slip.

In addition to oscillation stress, jolts must also be expected during transportation. In order to prevent possible damage, avoid dropping, tipping, knocking over and colliding with the product.

If a crate tips over, falls from a certain height (e.g. when slings tear) or experiences an unbroken fall, damage must be expected regardless of the weight.

Every delivered shipment must be checked for the following by the recipient before acceptance (acknowledgment of receipt):

- Completeness based on the delivery slip
- External damage of any type

The checks must take place after unloading when the crate or transport container can be accessed from all sides.

- Visible damage** If external transport damage is found upon receipt of the shipment, proceed as follows:
- Immediately record the identified transport damage in the shipping documents and have this countersigned by the carrier.
  - In the event of severe damage, total loss or high damage costs, immediately notify the manufacturer and the relevant insurance company.
  - After identifying damage, do not modify the condition of the shipment further and retain the packaging material until an inspection decision has been made by the transport company or the insurance company.
  - Record the details of the damage immediately on site together with the carrier involved. This is essential for any claim for damages.
  - Photograph damage to packaging and packaged goods. This also applies to signs of corrosion on the packaged goods due to moisture inside the packaging (rain, snow, condensation).
  - **NOTICE!** Damage to packaged goods due to damaged sealed packaging. If the product is delivered in sealed packaging, check the sealed packaging immediately. If the sealed packaging is damaged, do not under any circumstances install or commission the packaged goods. Either re-dry the dried packaged goods as per the operating instructions, or contact the manufacturer to agree on how to proceed.
  - Identify the damaged parts.
- Hidden damage** When damages are not determined until unpacking after receipt of the shipment (hidden damage), proceed as follows:
- Make the party responsible for the damage liable as soon as possible by telephone and in writing, and prepare a damage report.
  - Observe the time periods applicable to such actions in the respective country. Inquire about these in good time.

With hidden damage, it is very hard to make the transportation company (or other responsible party) liable. Any insurance claims for such damages can only be successful if relevant provisions are expressly included in the insurance terms and conditions.

## 4.3 Storage of shipments

### Packaged goods dried by Maschinenfabrik Reinhausen

Upon receipt of the shipment, immediately remove the packaged goods dried by Maschinenfabrik Reinhausen from the sealed packaging and store air-tight in dry insulating fluid until used if the packaged goods were not supplied in insulating fluid.

### Non-dried packaged goods

Non-dried packaged goods but with a functional sealed packaging can be stored outdoors when the following conditions are complied with.

When selecting and setting up the storage location, ensure the following:

- Protect stored goods against moisture (flooding, water from melting snow and ice), dirt, pests such as rats, mice, termites and so on, and against unauthorized access.
- Store the crates on timber beams and planks as a protection against rising damp and for better ventilation.
- Ensure sufficient carrying capacity of the ground.
- Keep entrance paths free.
- Check stored goods at regular intervals. Also take appropriate action after storms, heavy rain or snow and so on.

Protect the packaging foil from direct sunlight so that it does not disintegrate under the influence of UV rays, which would cause the packaging to lose its sealing function.

If the product is installed more than 6 months after delivery, suitable measures must be taken without delay. The following measures can be used:

- Correctly regenerate the drying agent and restore the sealed packaging.
- Unpack the packed goods and store in a suitable storage space (well ventilated, as dust-free as possible, humidity < 50% where possible).

## 4.4 Unpacking shipments and checking for transportation damages

- **NOTICE!** Damage to packaged goods due to ineffectively sealed packaging. Transport the packaged crate to the place where the packaged goods are to be installed. Do not open the sealed packaging until just before installation.
- **▲ WARNING!** Serious injuries and damage to the packaged goods due to the packaged goods tipping out. Place the packaged goods in an upright crate and protect it from tipping out.
- Unpack the packaged goods and check the condition.
- Check the completeness of the accessories kit using the delivery slip.

# 5 Mounting

## ⚠ WARNING



### Risk of crushing!

When the on-load tap-changer undertakes a tap-change operation, components – some of which are freely accessible – move on the selector, change-over selector, and potential connection unit. Reaching into the selector, change-over selector, or potential connection unit during a tap-change operation may result in serious injuries.

- > Keep at a safe distance of at least 1 m during tap-change operations.
- > Do not reach into the selector, change-over selector, or potential connection unit during tap-change operations.
- > Do not switch the on-load tap-changer during work on the selector, change-over selector, or potential connection unit.

## 5.1 Preparatory work

Perform the work stated below before installing the on-load tap-changer in the transformer.

### 5.1.1 Fitting mounting flange on transformer cover

A mounting flange is required for fitting the on-load tap-changer head on the transformer cover. This can be supplied as an option or can be produced by the customer. Mounting flanges made by the customer must comply with the installation drawings in the appendix.

- > **NOTICE!** Fit mounting flange on transformer cover (pressure tight). Ensure that the sealing face makes complete contact and is not damaged.

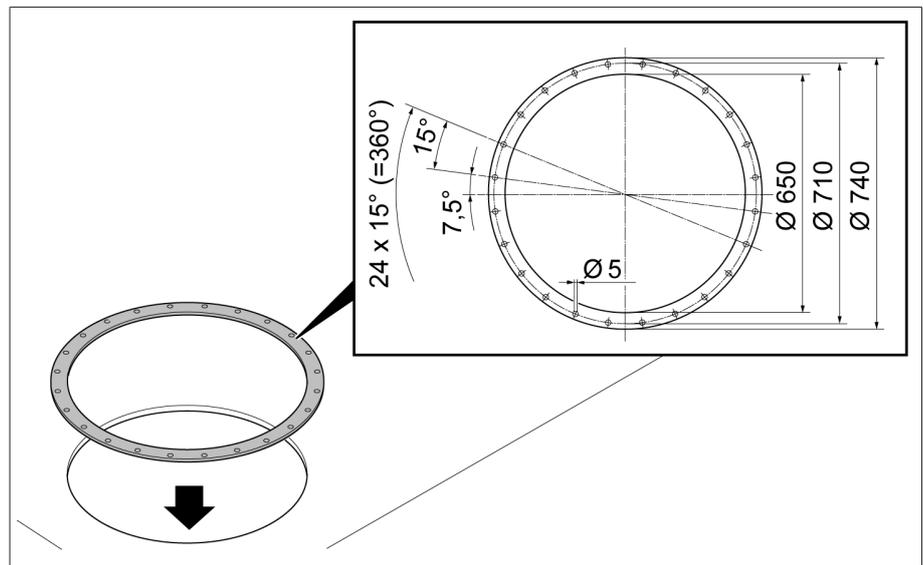


Figure 22: Mounting flange

## 5.1.2 Fitting stud bolts on mounting flange

To attach the stud bolts to the mounting flange, use a tracing template. This can be provided upon request free of charge for the initial installation of the on-load tap-changer.

1. Place tracing template on mounting flange and use the four markings to align.
2. Fit stud bolts on mounting flange.

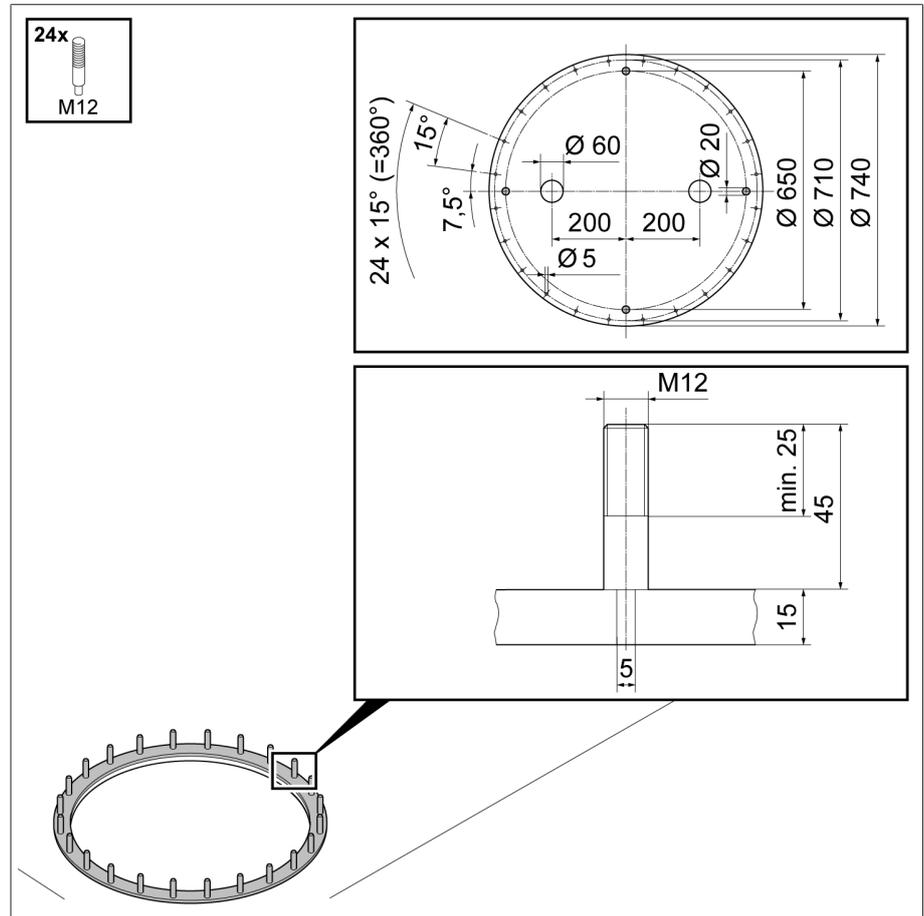


Figure 23: Tracing template, stud bolts

## 5.2 Installing the on-load tap-changer in the transformer (standard version)

### 5.2.1 Fastening on-load tap-changer to transformer cover

#### 5.2.1.1 Fastening oil compartment to transformer cover – standard on-load tap-changer head version

You can lower the oil compartment of on-load tap-changers with  $U_m < 362$  kV through the opening in the mounting flange without separating the top part of the on-load tap-changer head from the bottom part.

1. **CAUTION!** An unstably positioned oil compartment may tip over, resulting in injuries or property damage. Place the oil compartment on a level surface and secure it against tipping.
2. Remove red-colored packaging material and transport material from the oil compartment.
3. **NOTICE!** Unsuitable gaskets may lead to oil escaping and therefore to damage to the on-load tap-changer. Place a gasket suitable for the insulating medium in use on the mounting flange. Clean the sealing surfaces on the mounting flange and on-load tap-changer head.

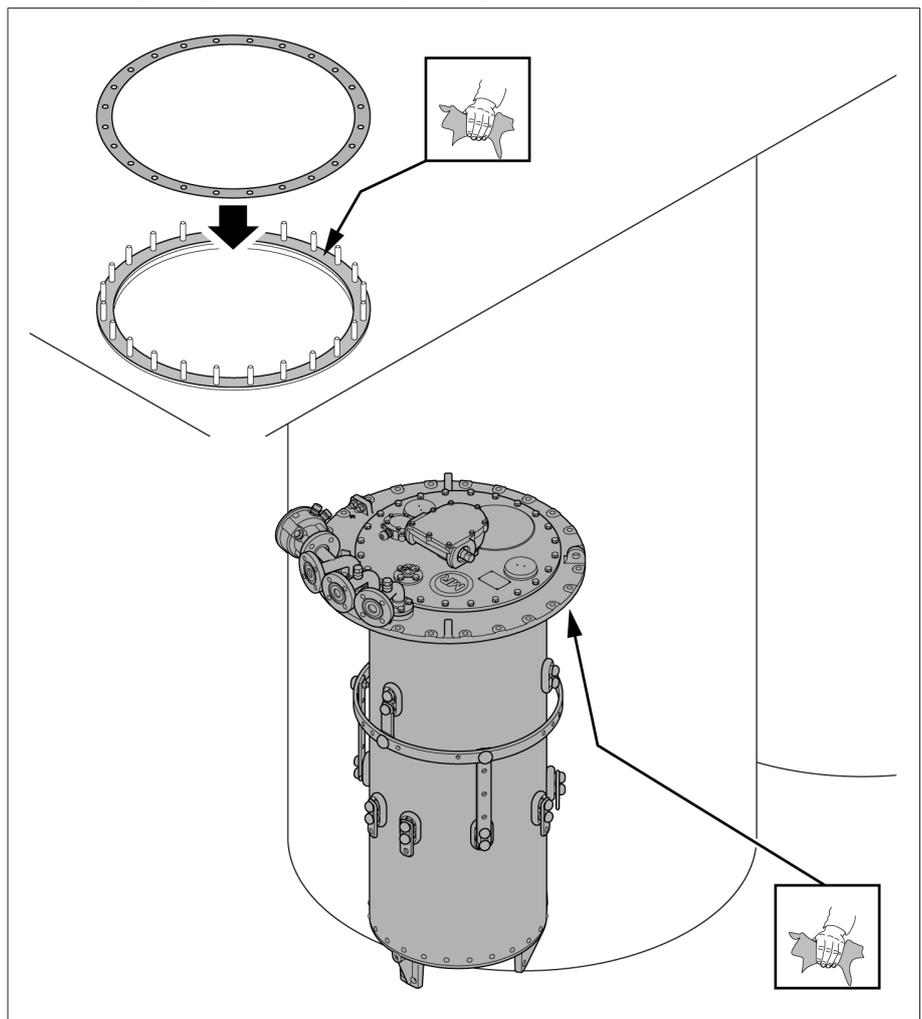


Figure 24: Sealing surfaces, gasket

4. **NOTICE!** Lowering the oil compartment without due care can result in the oil compartment colliding with the transformer cover and becoming damaged. Lift the oil compartment by hooking up the on-load tap-changer head and carefully lower it vertically into the opening of the transformer cover.

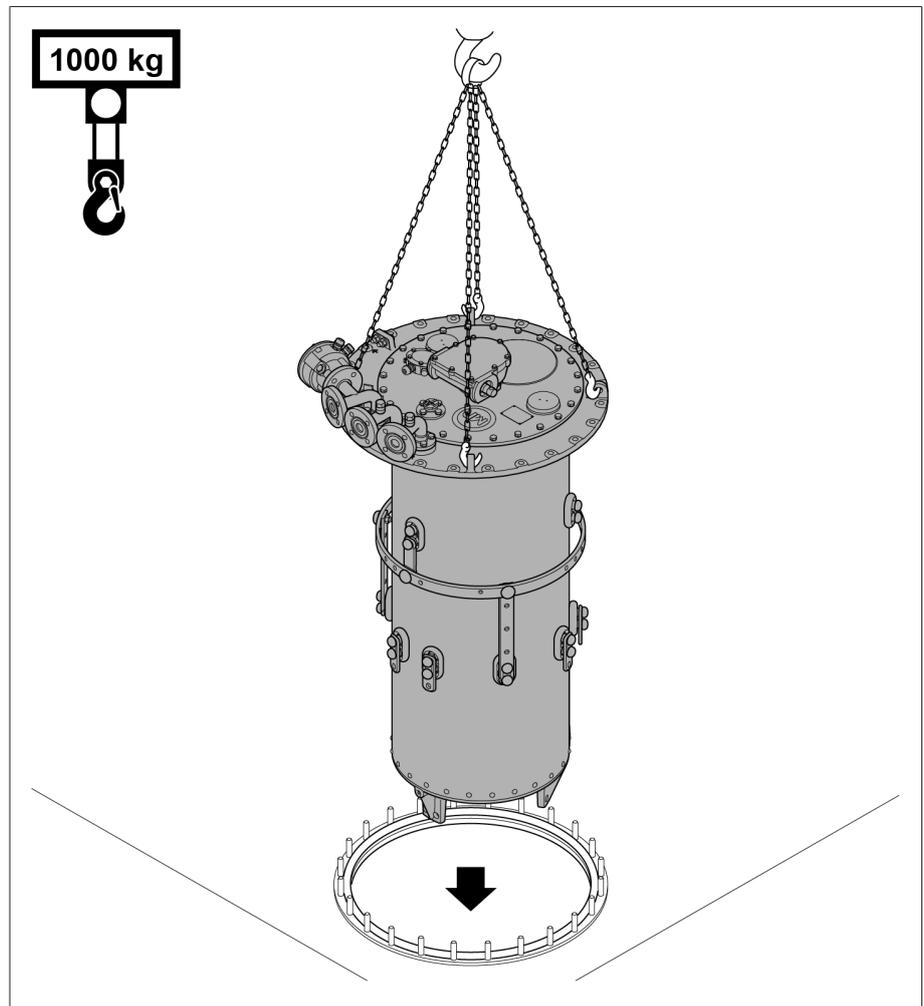


Figure 25: Lowering oil compartment

5. Check that the on-load tap-changer head is mounted in the position specified by the design.  
6. Screw the on-load tap-changer head to the mounting flange.

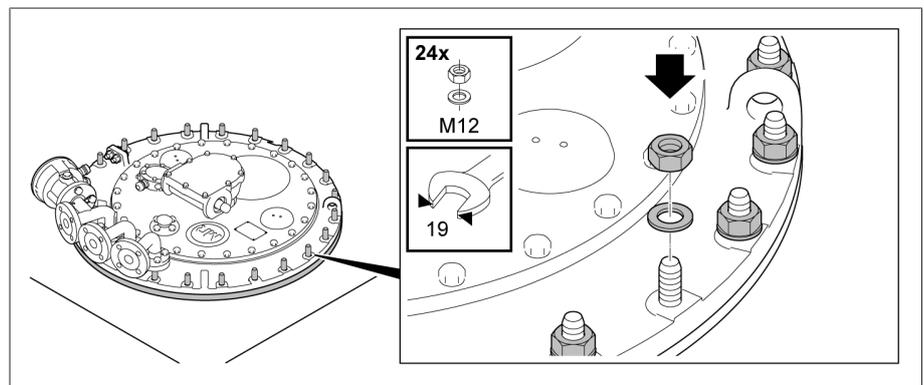


Figure 26: On-load tap-changer head with mounting flange

7. Remove the blocking strip from the coupling of the oil compartment base.

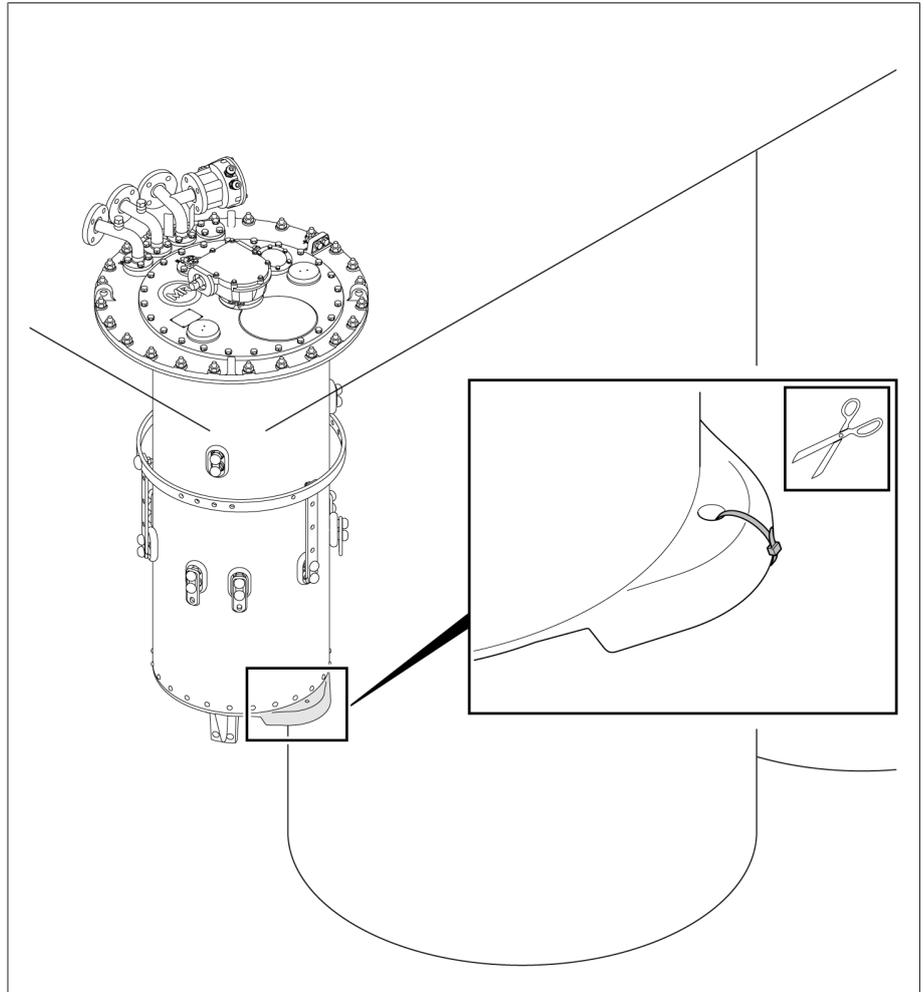


Figure 27: Oil compartment base with blocking strip

#### 5.2.1.2 Fastening oil compartment to transformer cover – separable on-load tap-changer head

In on-load tap-changers with  $U_m \geq 362$  kV, you cannot lower the oil compartment through the opening in the mounting flange from above, because the diameter of the shielding rings is greater than the inner diameter of the mounting flange. In this case, you must first lift the top part of the on-load tap-changer head off of the bottom part and fasten the top part to the transformer cover. You can then fasten the oil compartment to the top part of the on-load tap-changer head.

##### 5.2.1.2.1 Lifting top part of on-load tap-changer head off supporting flange (bottom part)

###### 5.2.1.2.1.1 Removing on-load tap-changer head cover

###### NOTICE

#### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- > Ensure that parts do not fall into the oil compartment.
- > Check that all small parts are accounted for.

1. **⚠ CAUTION!** An unstably positioned oil compartment may tip over, resulting in injuries or property damage. Place the oil compartment on a level surface and secure it against tipping.
2. Remove red-colored packaging material and transport material from the oil compartment.
3. Ensure that the inspection window is sealed off with the cover.
4. Remove the screws and washers from the on-load tap-changer head cover.

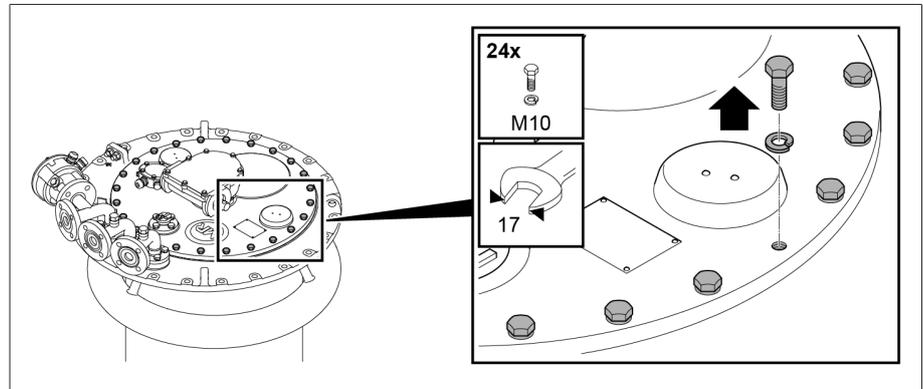


Figure 28: On-load tap-changer head cover

5. Remove on-load tap-changer head cover.

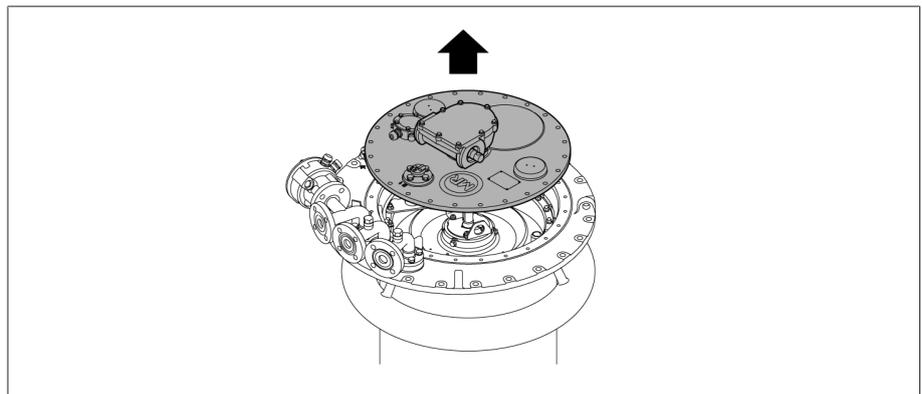


Figure 29: On-load tap-changer head cover

#### 5.2.1.2.1.2 Removing tap position indicator disk

- > Pull spring clip off shaft end and remove tap position indicator disk.

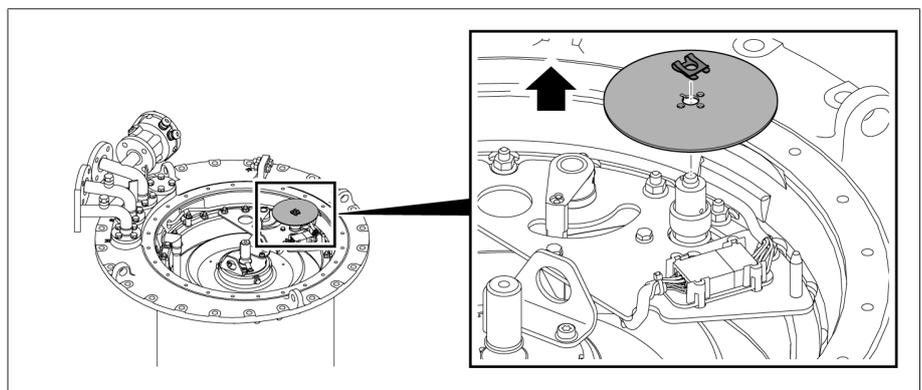


Figure 30: Tap position indicator disk

#### 5.2.1.2.1.3 Removing the tap-change supervisory device

**⚠ DANGER**



#### Electric shock!

If supply voltage is applied to the tap-change supervisory device, this can result in electric shock.

- > Disconnect the tap-change supervisory device from the supply voltage and secure it to prevent it from being switched back on again.

## NOTICE

### Damage to the tap-change supervisory device!

Removing the tap-change supervisory device without due care may damage the tap-change supervisory device, thereby resulting in damage to the on-load tap-changer.

➤ Remove the tap-change supervisory device with care in order not to damage or rip out the connecting leads.

1. Take the tap-change supervisory device plug connector out of the mounting bracket and disconnect it.

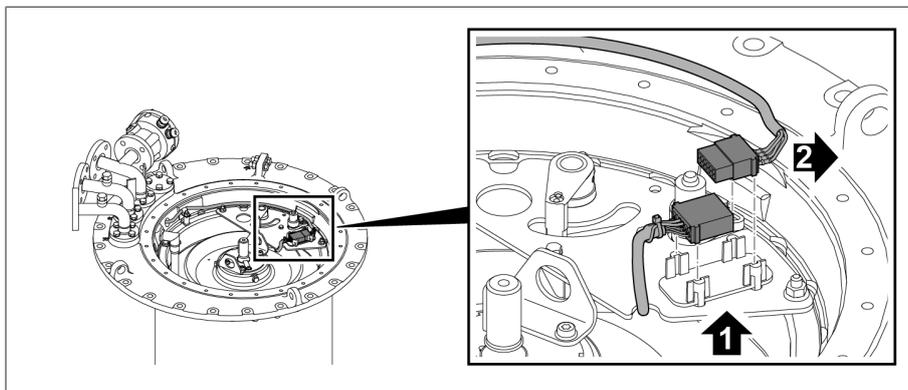


Figure 31: Plug connector

2. Remove nuts and locking elements on the mounting plate.

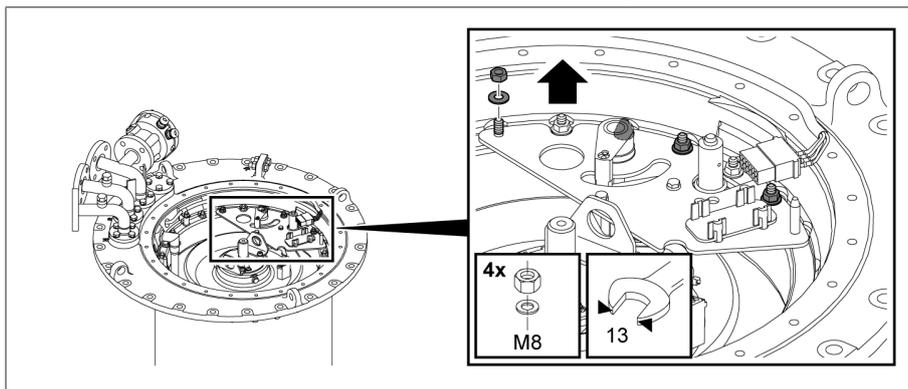


Figure 32: Mounting plate

3. Remove mounting plate with tap-change supervisory device and drive shaft.

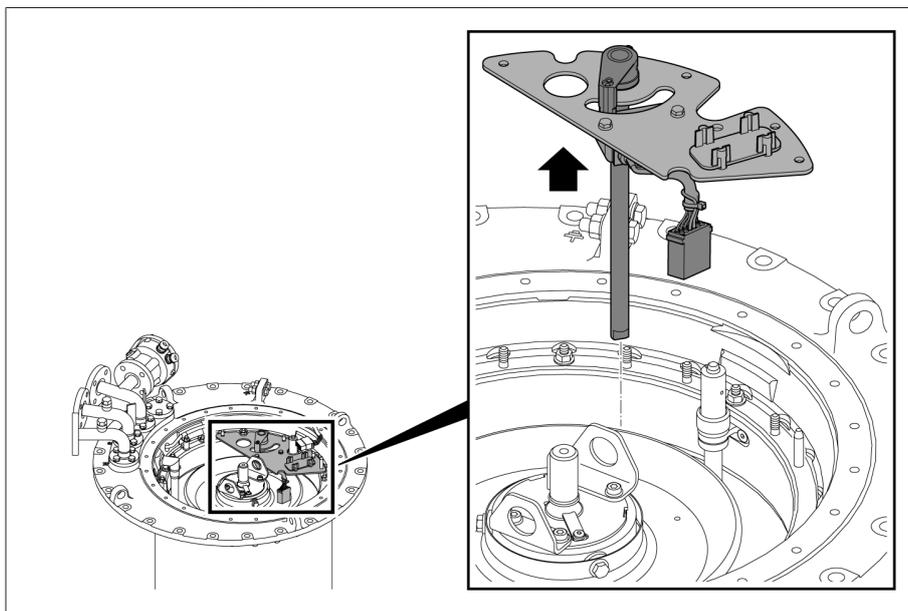


Figure 33: Mounting plate with tap-change supervisory device and drive shaft

4. Lift the lead of the tap-change supervisory device off the spacer bolt.

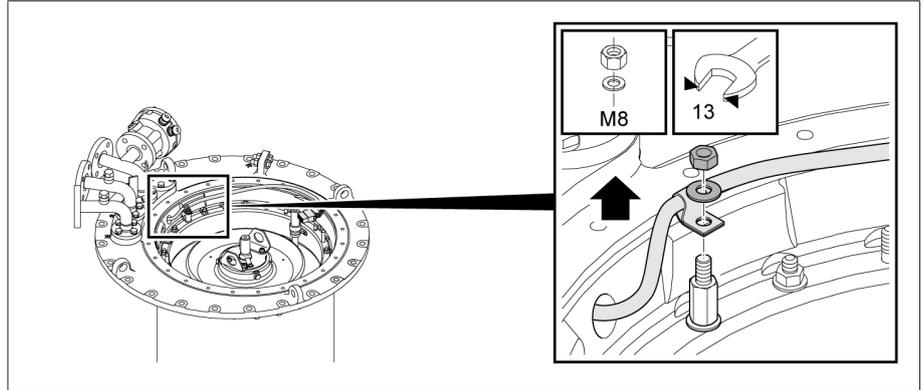


Figure 34: Spacer bolt and lead of the tap-change supervisory device

5. Swivel lead of the tap-change supervisory device out of the on-load tap-changer head.

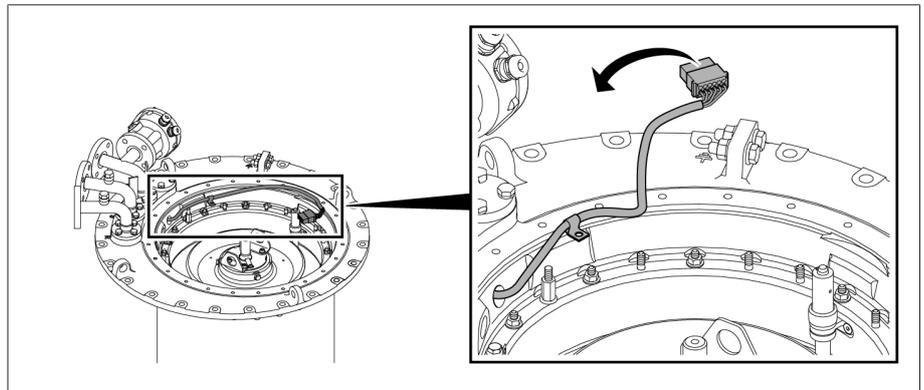


Figure 35: Lead of tap-change supervisory device

6. Remove spacer bolt with locking element.

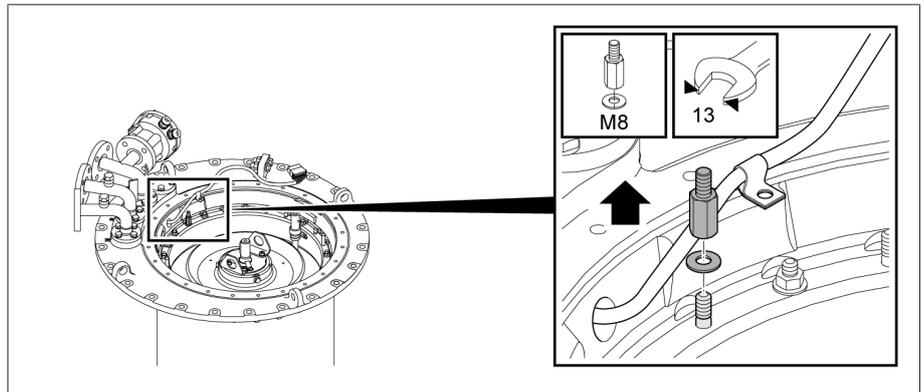


Figure 36: Spacer bolt

#### 5.2.1.2.1.4 Removing the oil suction pipe

1. Remove cable ties from the oil suction pipe.

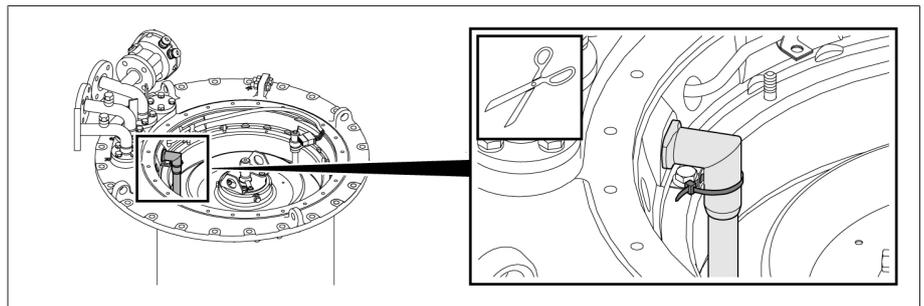


Figure 37: Oil suction pipe

2. Pull the oil suction pipe out of the on-load tap-changer head.

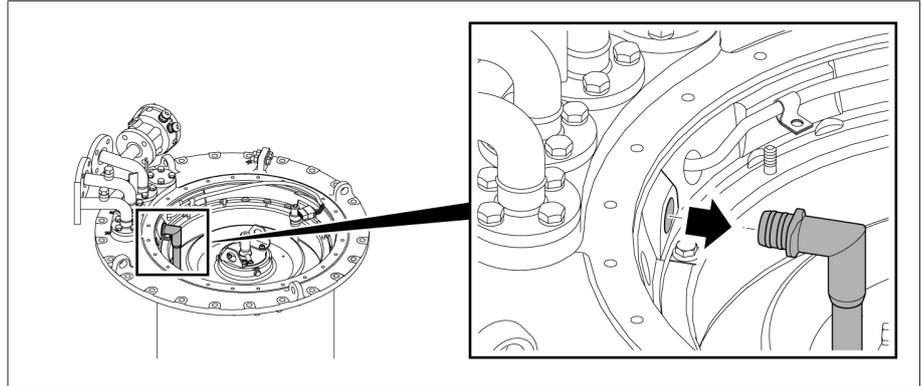


Figure 38: Oil suction pipe

3. Remove the mounting bracket.

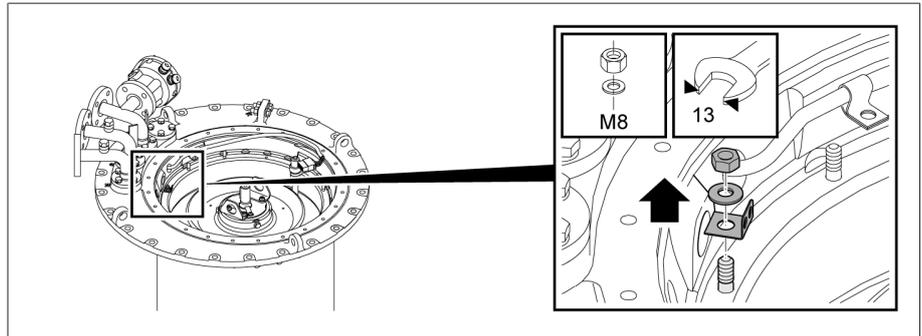


Figure 39: Mounting bracket

#### 5.2.1.2.1.5 Lifting top part of on-load tap-changer head off bottom part

1. Remove nuts and locking elements joining top part and bottom part of on-load tap-changer head.

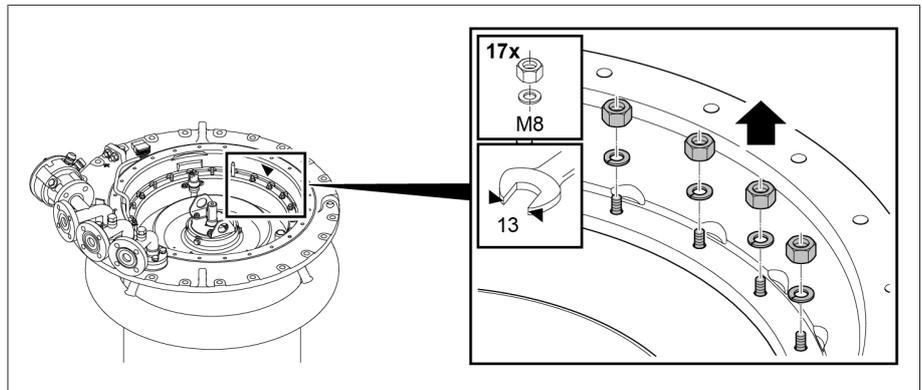


Figure 40: Nuts and locking elements joining the top part and bottom part of the on-load tap-changer head

2. Lift top part of on-load tap-changer head off bottom part.

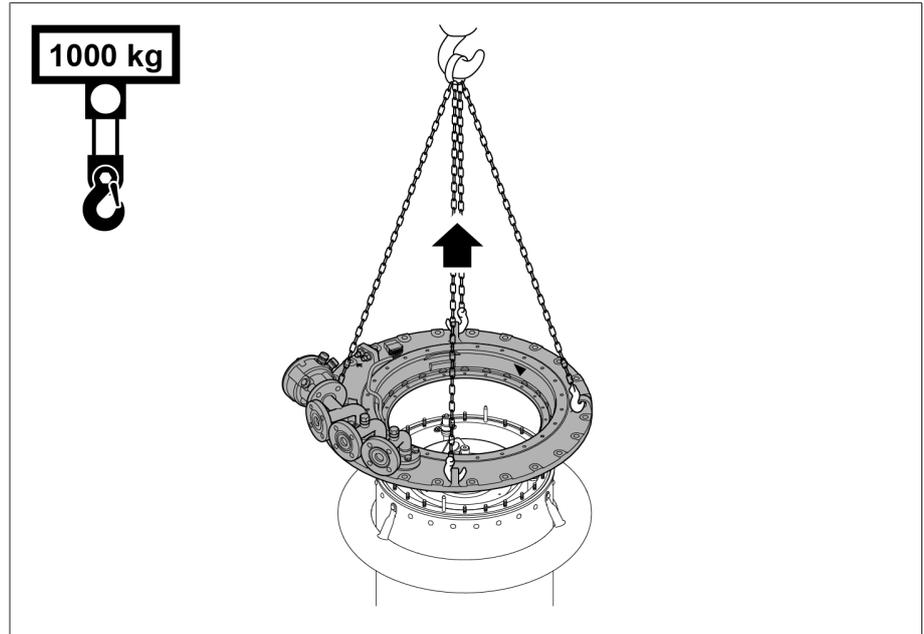


Figure 41: Top part of on-load tap-changer head

#### 5.2.1.2.2 Positioning the top part of the on-load tap-changer head on the transformer cover

1. **NOTICE!** Unsuitable gaskets may lead to oil escaping and therefore to damage to the on-load tap-changer. Place a gasket suitable for the insulating medium in use on the mounting flange. Clean the sealing surfaces on the mounting flange and top part of the on-load tap-changer head.

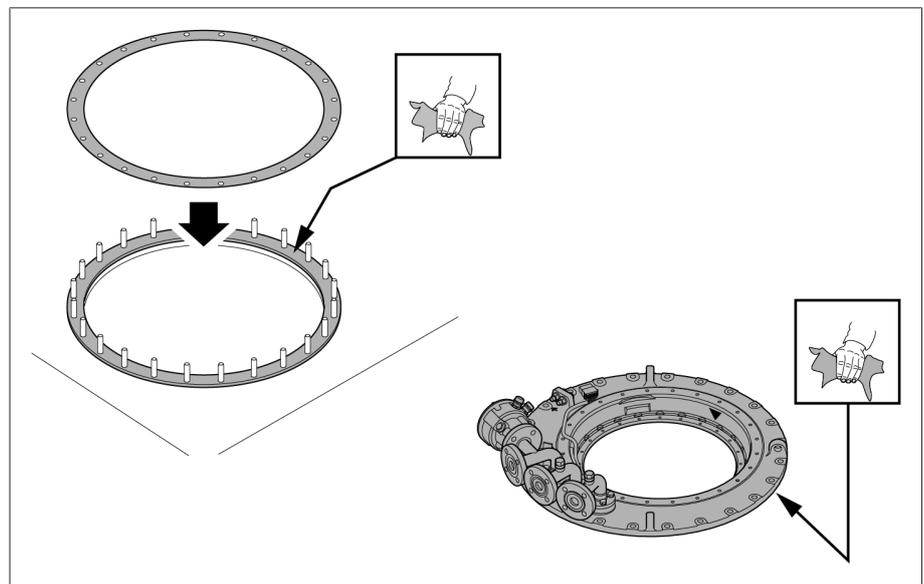


Figure 42: Mounting flange with gasket

2. **⚠ CAUTION!** An unstably positioned oil compartment may tip over, resulting in injuries or property damage. Secure the oil compartment against tipping, lift from below by the transformer cover and align based on the later mounting position. Never lift the oil compartment by the circumferential shielding ring or the connecting screws of the supporting flange.

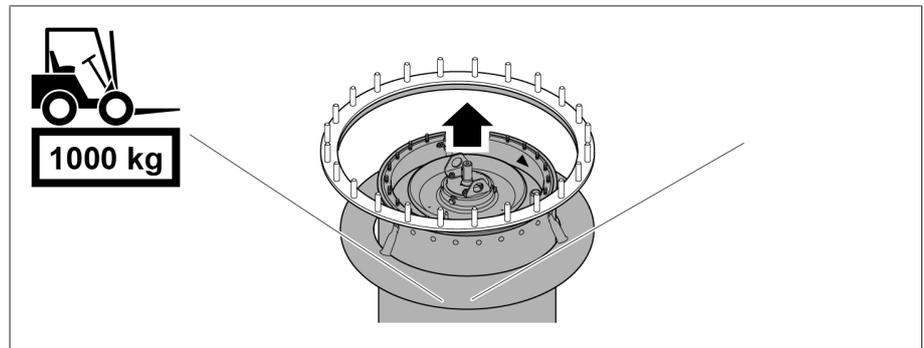


Figure 43: Lifting the oil compartment

3. Lower and position the top part of the on-load tap-changer head on mounting flange so that the triangular markings, pins and mounting holes on the top part and bottom part of the on-load tap-changer head are aligned.

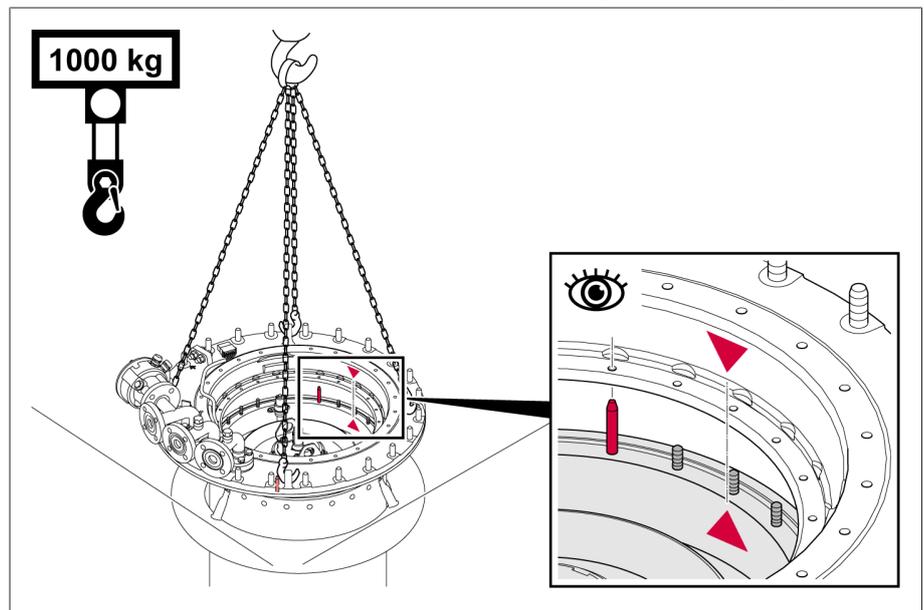


Figure 44: Markings and aligning pins

### 5.2.1.2.3 Connecting the oil compartment to the top part of the on-load tap-changer head

#### 5.2.1.2.3.1 Connecting the oil compartment to the top part of the on-load tap-changer head

##### NOTICE

**Incorrectly lifting the on-load tap-changer will damage it!**

If the connection screws of the supporting flange are used to lift the on-load tap-changer, the screws may be damaged, which makes it impossible to properly screw the on-load tap-changer and the on-load tap-changer head together!

- Always lift the on-load tap-changer with the specified lifting traverse, and never with the connection screws of the supporting flange.

You can either use lifting equipment or the special lifting device to connect the oil compartment to the top part of the on-load tap-changer head. The special lifting device option is described below.

1. Carefully insert lifting device into the oil compartment with claws turned in.

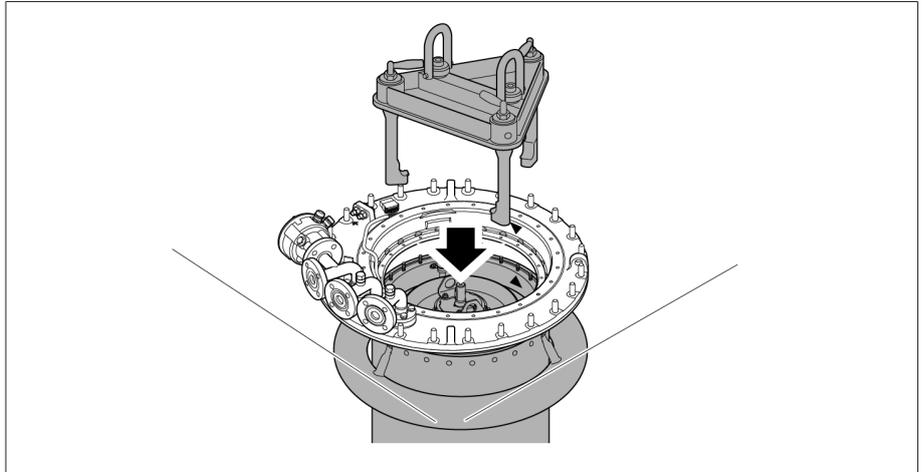


Figure 45: Lifting device

2. **NOTICE!** Inaccurate alignment of on-load tap-changer head to supporting flange will damage the on-load tap-changer when it is lifted. Swing claws of lifting device outwards, use lifting device to lift oil compartment. Ensure that the triangular markings are aligned and that all supporting flange stud bolts go easily through the mounting holes of the on-load tap-changer head.

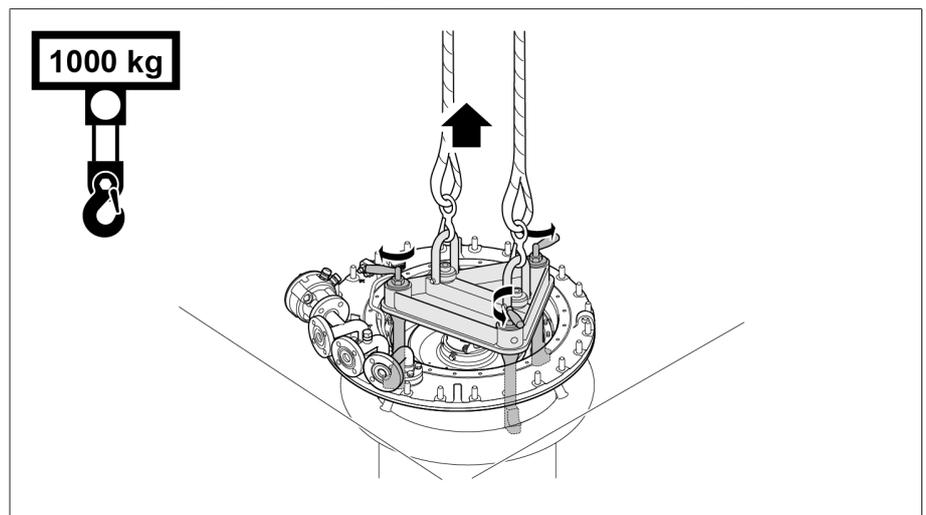


Figure 46: Lifting on-load tap-changer



When fitting the top part and bottom part of the on-load tap-changer head together, leave the pins for the mounting plate of the tap-change supervisory device, the pins for the mounting bracket of the oil suction pipe and the spacer bolts for the lead of the tap-change supervisory device free.

1. Screw top part of on-load tap-changer head to bottom part using nuts and locking elements.

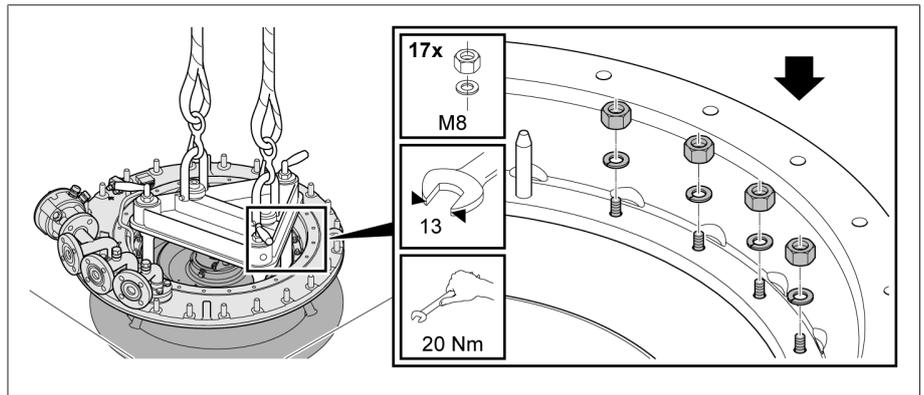


Figure 47: Screwing the top part of the on-load tap-changer head to the bottom part

2. Remove the lifting device with the claws turned in.

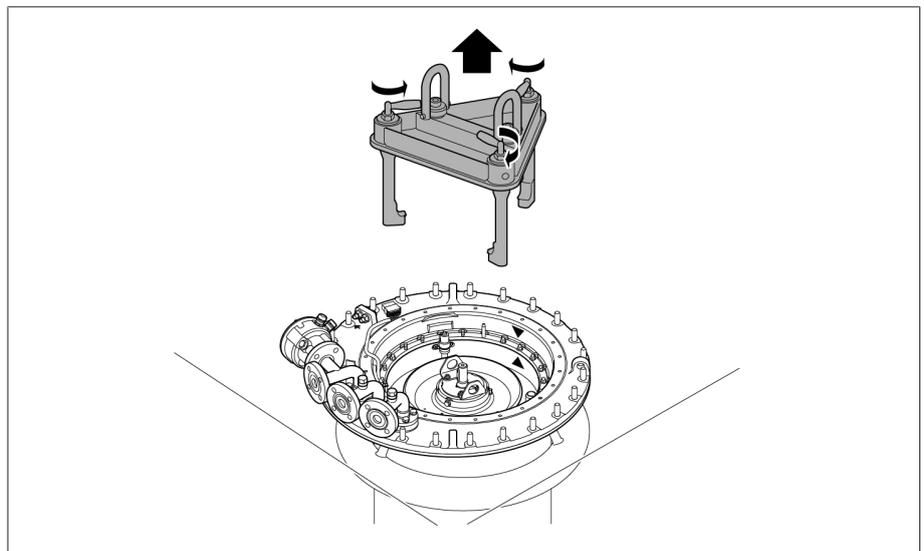


Figure 48: Removing lifting device

3. Screw the on-load tap-changer head to the mounting flange.

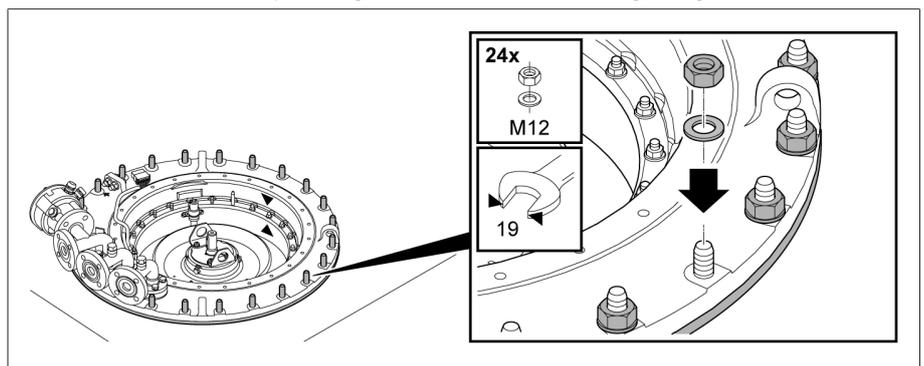


Figure 49: Screwing the on-load tap-changer head to the mounting flange

4. Remove the blocking strip from the coupling of the oil compartment base.

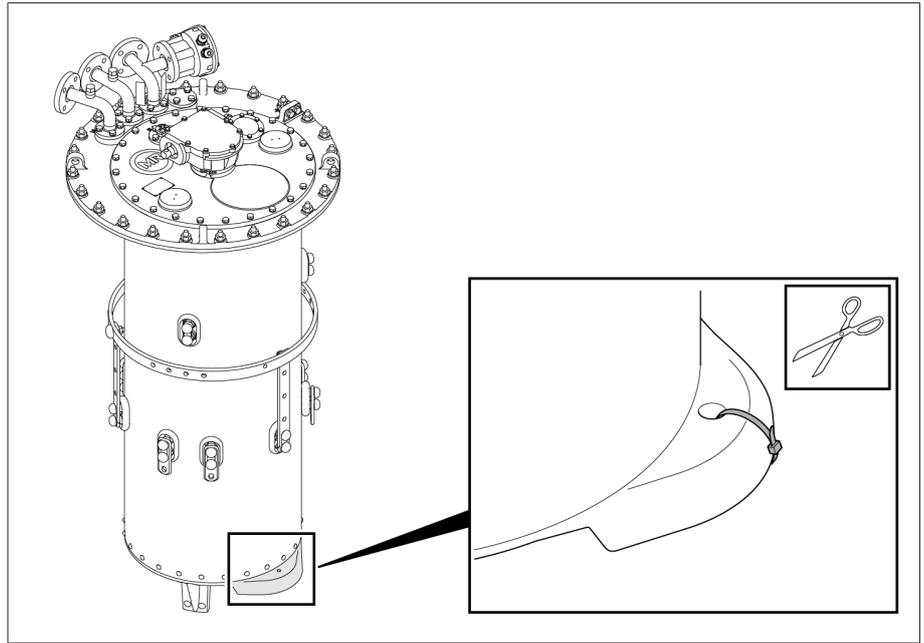


Figure 50: Oil compartment base with blocking strip

#### 5.2.1.2.3.2 Inserting oil suction pipe

1. Fasten the mounting bracket.

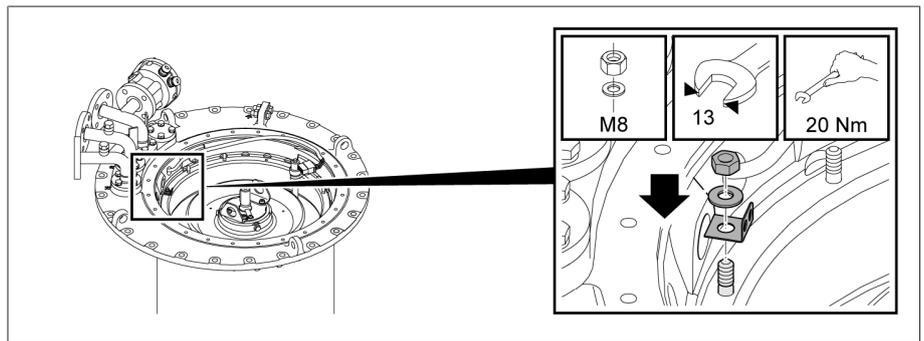


Figure 51: Mounting bracket

2. Insert oil suction pipe into on-load tap-changer head.

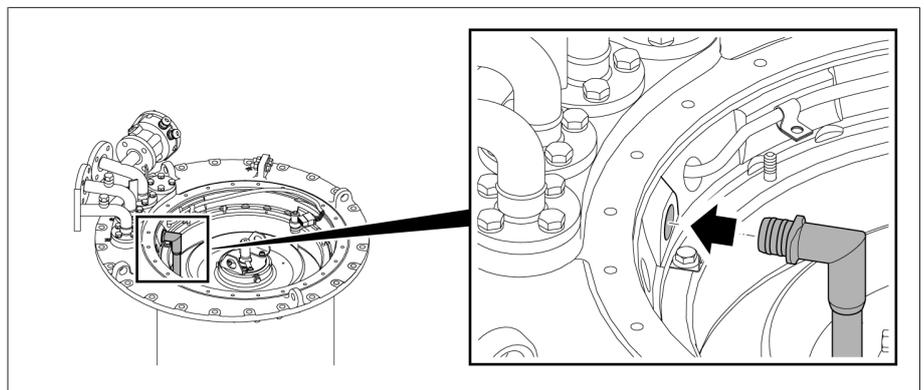


Figure 52: Inserting oil suction pipe

3. Fasten oil suction pipe to mounting bracket with cable tie provided. Turn the cable tie so the closure is facing in toward the mounting bracket.

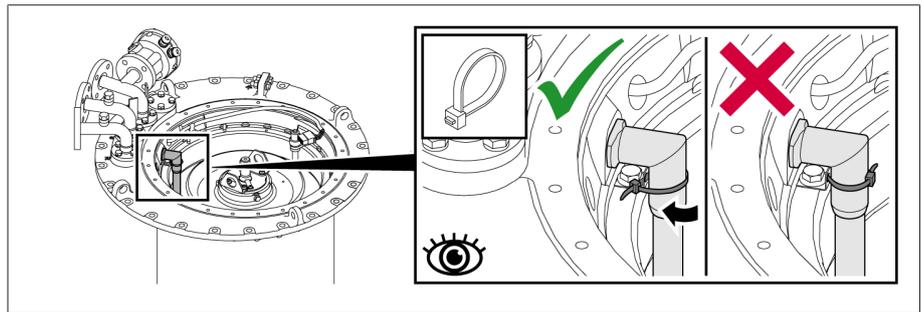


Figure 53: Cable tie

### 5.2.1.2.3.3 Inserting the tap-change supervisory device

1. Insert mounting plate with tap-change supervisory device and drive shaft.

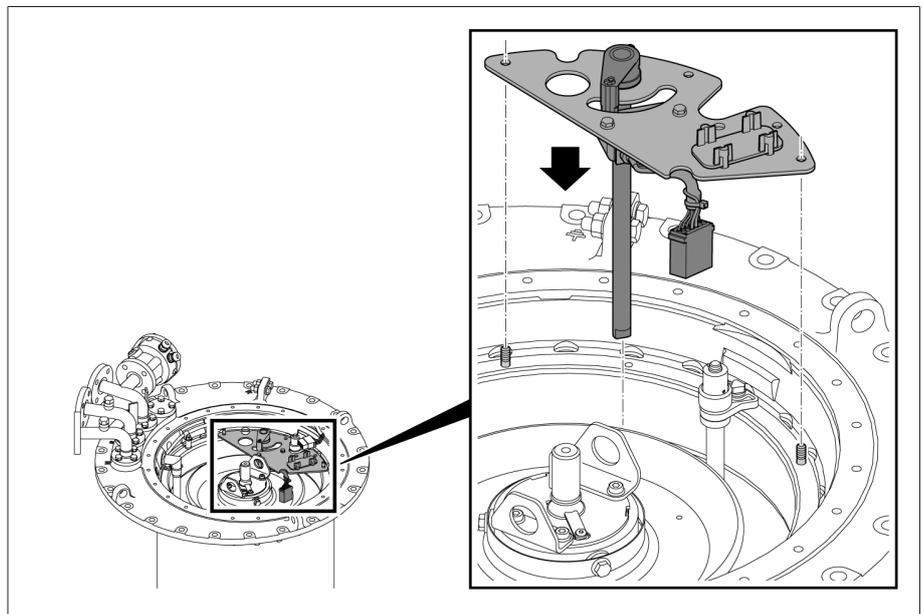


Figure 54: Mounting plate with tap-change supervisory device and drive shaft

2. Check that drive shaft is seated correctly in the plug connector.



Figure 55: Drive shaft and plug connector

3. Attach mounting plate.

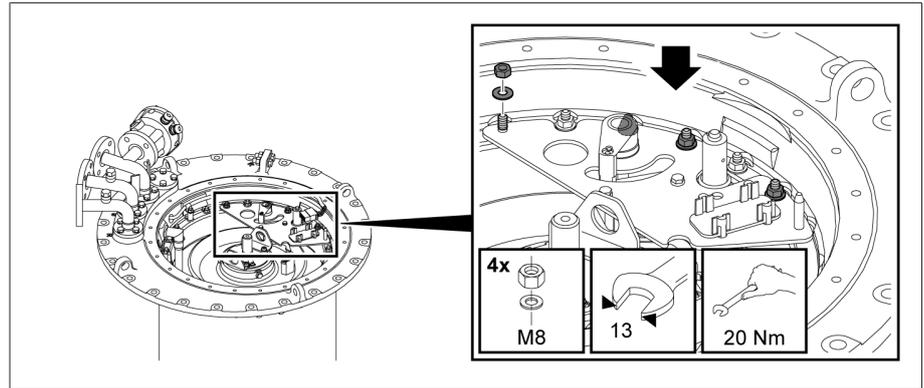


Figure 56: Mounting plate

4. Attach spacer bolt for fastening the lead of the tap-change supervisory device.

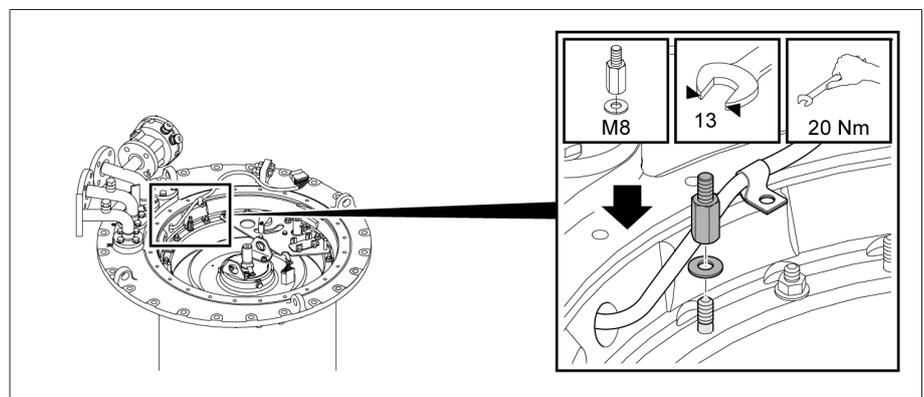


Figure 57: Spacer bolt

5. Fasten lead of tap-change supervisory device to spacer bolt.

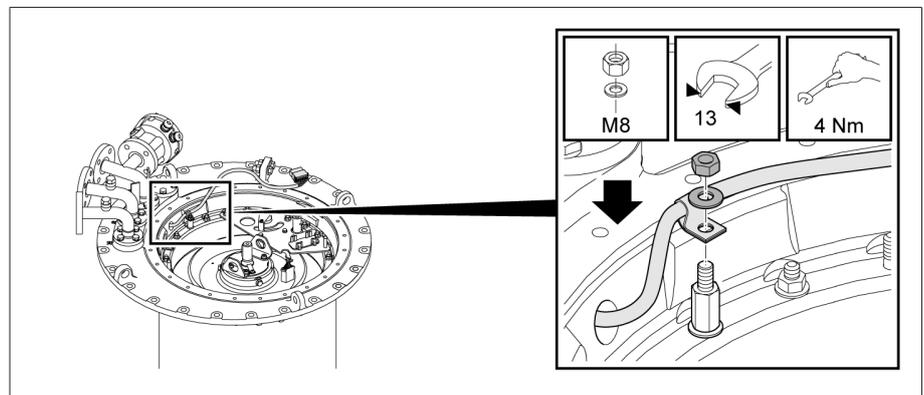


Figure 58: Spacer bolt

6. Connect plug connector outside its bracket.

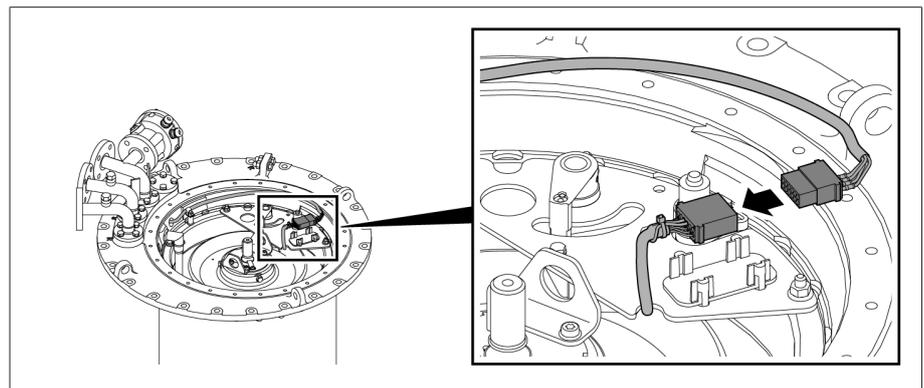


Figure 59: Plug connector

7. Insert plug connector into the bracket.

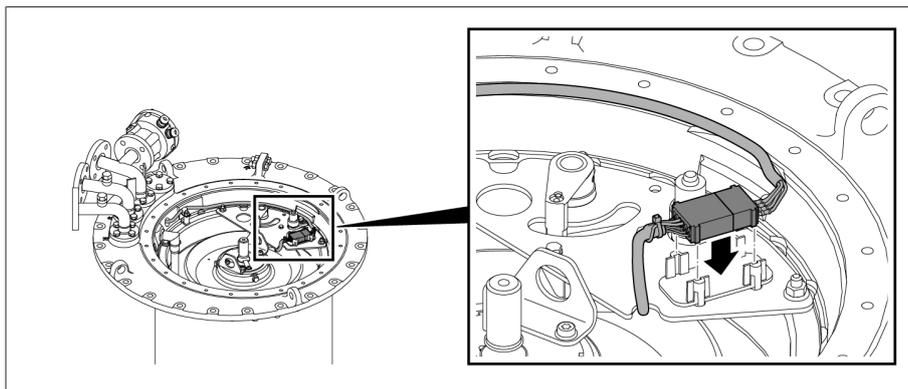


Figure 60: Plug connector in bracket

#### 5.2.1.2.3.4 Inserting tap position indicator disk



Due to the coupling pin, the tap position indicator disk can only be installed when in the correct position.

- › Place tap position indicator disk on indicator drive shaft, slide spring clip on to shaft end.

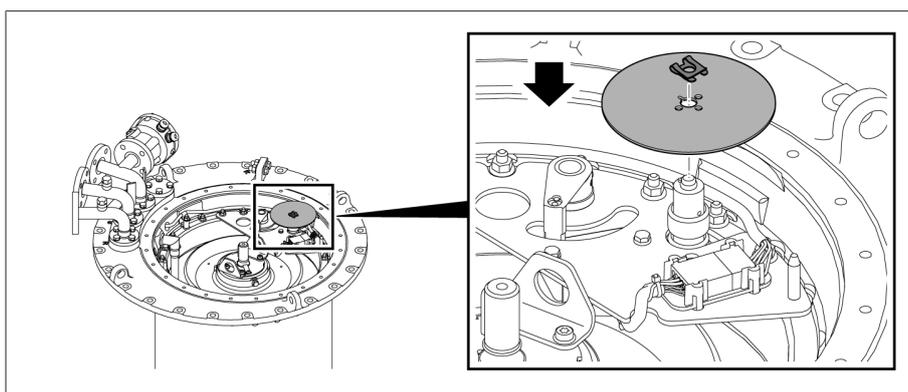


Figure 61: Tap position indicator disk

#### 5.2.1.2.3.5 Securing on-load tap-changer head cover

##### NOTICE

##### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- › Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- › Ensure that the o-ring does not become damaged when mounting the cover.
- › Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

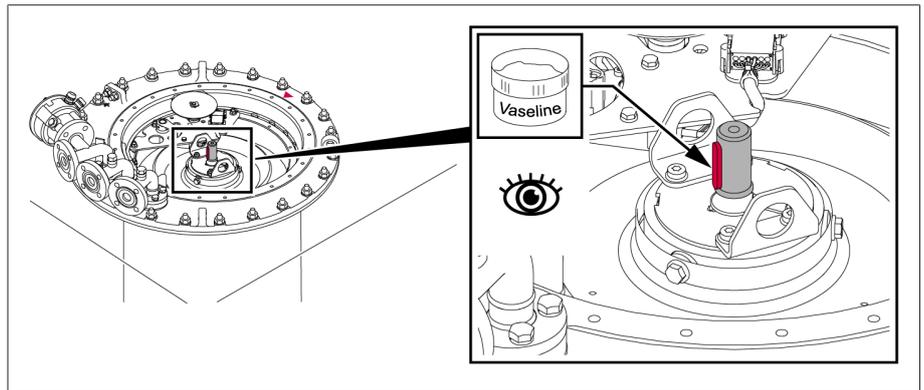


Figure 62: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

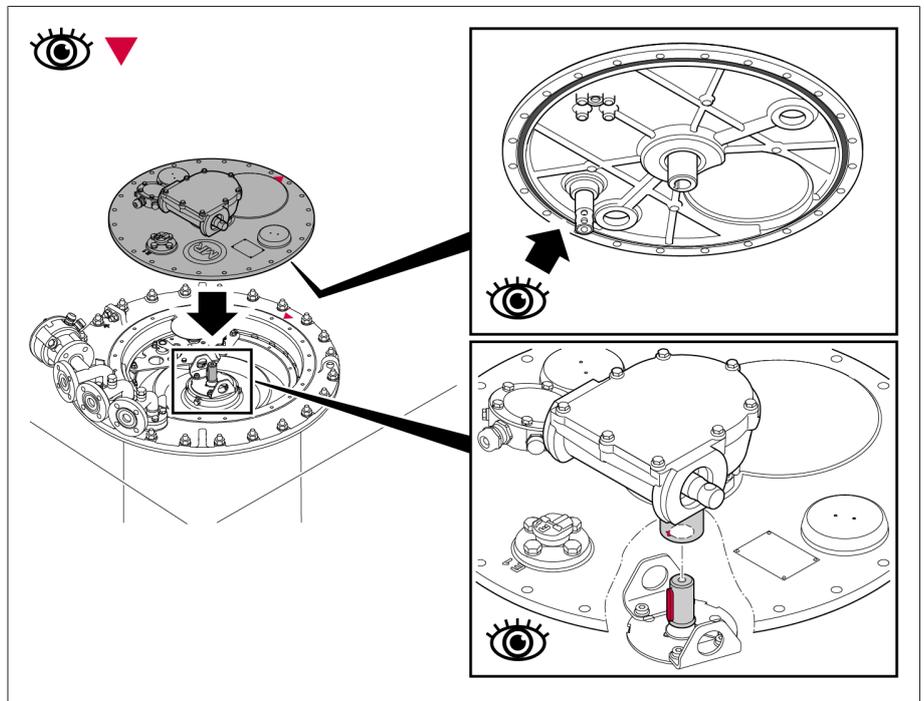


Figure 63: On-load tap-changer head cover with o-ring

3. Screw the on-load tap-changer head cover onto the on-load tap-changer head.

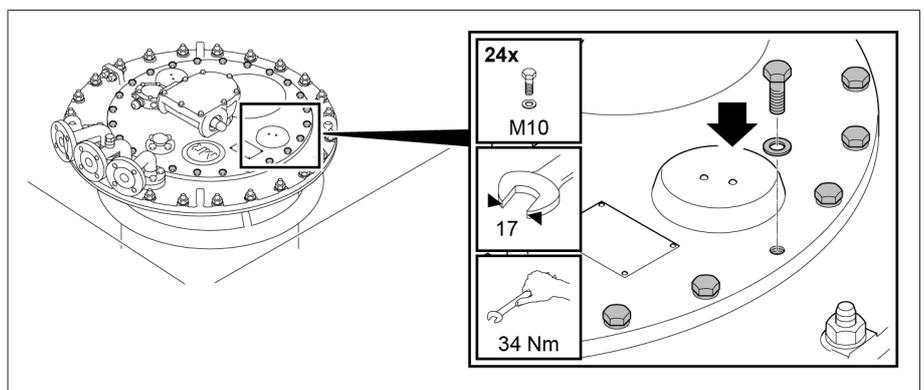


Figure 64: On-load tap-changer head cover

### 5.2.1.3 Securing selector to oil compartment

1. **⚠ CAUTION!** An unstably positioned selector may tip, resulting in injuries or property damage. Place the selector on a level surface and secure it against tipping.
2. Remove the red-colored packaging material and the transport material from the selector.
3. Remove the plastic bag with the fastening materials from the selector and keep it ready.

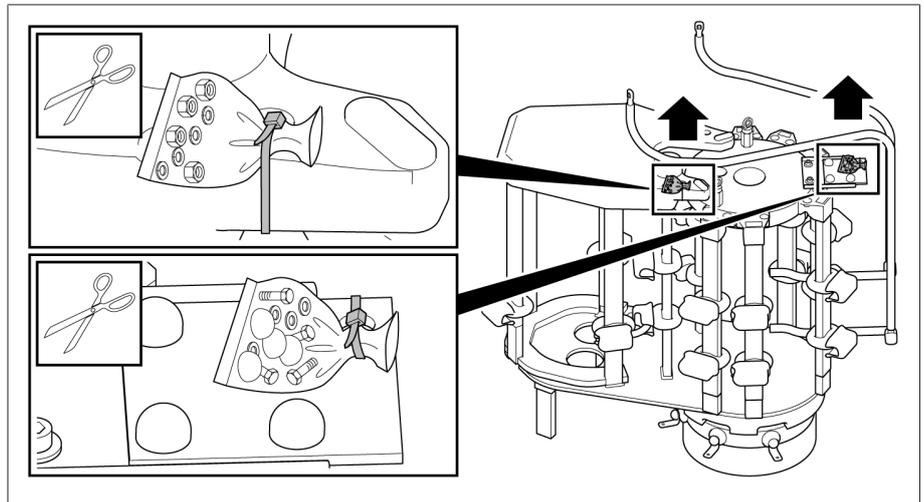


Figure 65: Plastic bag with fastening materials

4. Remove the blocking strip from the selector coupling. Once the blocking strip is removed, the selector coupling may no longer be turned.

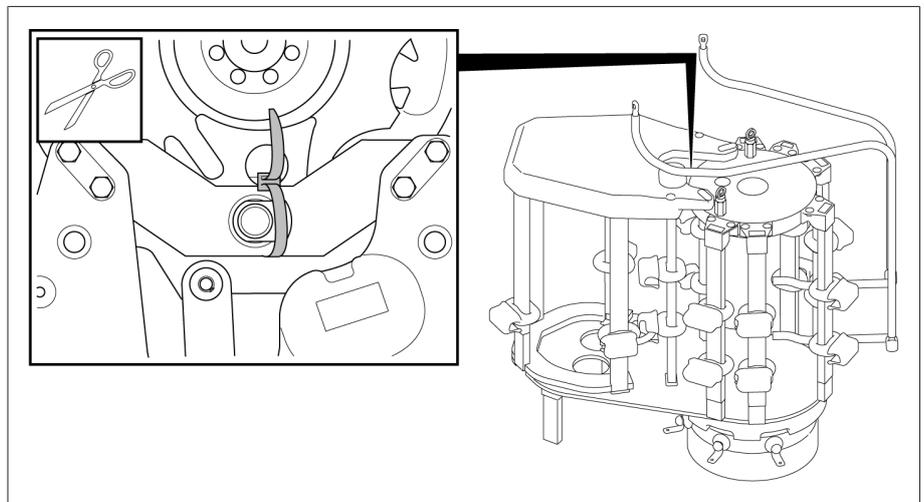


Figure 66: Selector coupling with blocking strip

5. Place the selector on the lifting device. The weight of the selector is a maximum of 465 kg.

6. Remove the ring nuts from the selector.

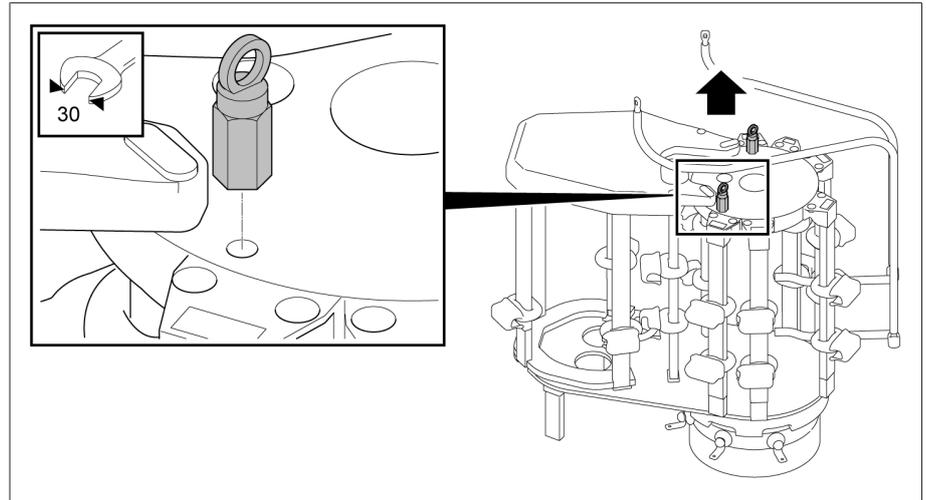


Figure 67: Ring nut

7. **NOTICE!** Lifting the selector without due care can result in the selector and the oil compartment colliding and becoming damaged. Carefully lift selector below the oil compartment, ensuring that the tap-selector connecting leads are free when lifting the selector on the oil compartment and do not touch the compartment.
8. Align the position of both coupling parts and attachment points on the oil compartment and the selector with one another. The correct position of the two coupling parts is shown in the adjustment plans supplied.
9. Screw the selector onto the oil compartment.

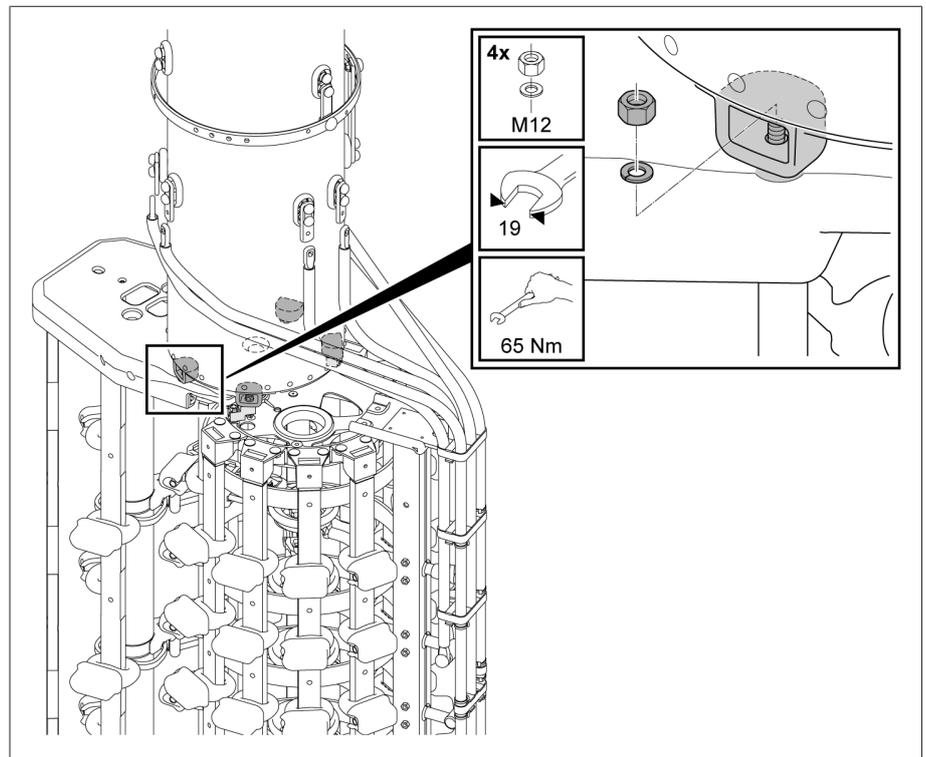


Figure 68: Screwing the selector onto the oil compartment

10. **NOTICE!** Incorrect tightening torques and unsecured screw connections can lead to damage to the on-load tap-changer. Screw the tap-selector connecting leads to the connecting piece with care. Comply with the specified tightening torque, secure screw connections and snap the screening caps in place over the screw heads.

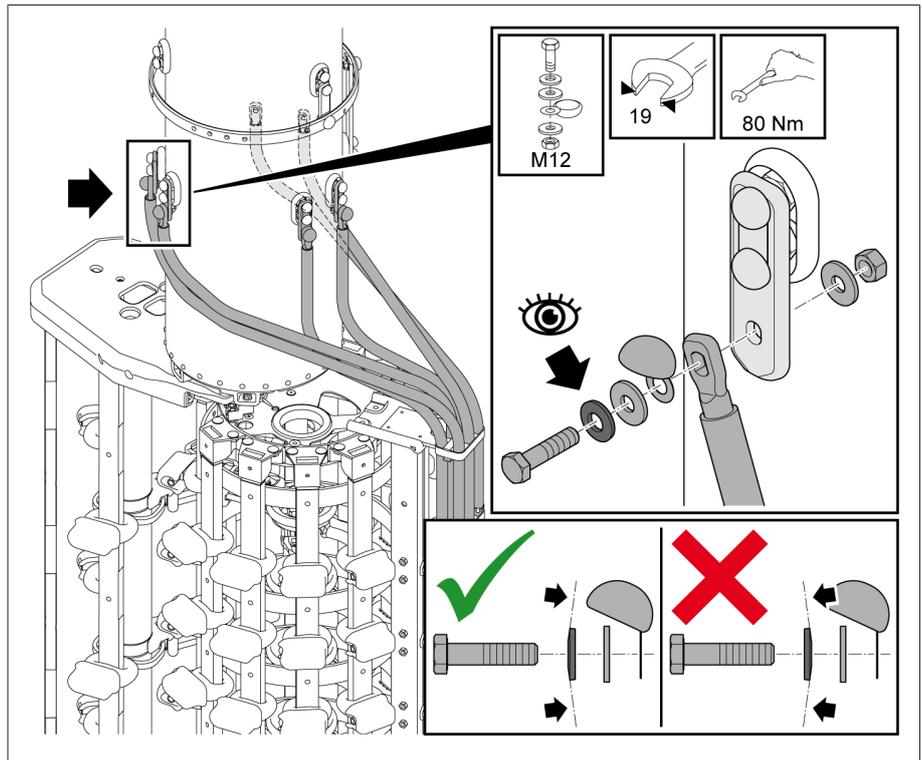


Figure 69: Tap-selector connecting leads

## 5.2.2 Connecting the tap winding and on-load tap-changer take-off lead

### NOTICE

#### Damage to the on-load tap-changer!

Connecting leads that place mechanical strain on the on-load tap-changer will damage the on-load tap-changer.

- > Establish connections carefully.
- > Do not twist connection contacts.
- > Connect connecting leads without warping or deforming.
- > If necessary, use an expansion loop for connecting leads.
- > Fit screening caps provided to screw connections.

The tap winding and on-load tap-changer take-off lead must be connected in accordance with the connection diagram included with the delivery.

### 5.2.2.1 Tap selector and change-over-selector connection contacts

#### NOTICE

#### Damage to the on-load tap-changer!

Tap-winding connecting leads situated too closely to the change-over selector's moving parts block the change-over selector and therefore result in damage to the on-load tap-changer.

- > Tap-winding connecting leads in the area of the change-over selector have to be routed such that they are at a sufficient distance from the change-over selector's moving parts.

The selector connection contacts are indicated on the selector bars.

1. Connect the tap-winding connecting leads to the thread stud of the selector connection contacts with cable shoes and locknuts.
2. Attach a screening cap to each connection point with a steel angle piece and 2 screws. The screening caps are designed for lateral connection with a straight cable shoe or for front connection with an angled cable shoe.

3. Secure the screw connection by centre-punching at the perimeter of the screw head. The distance between the screening caps and adjacent tap-selector connecting leads must be at least 25 mm.

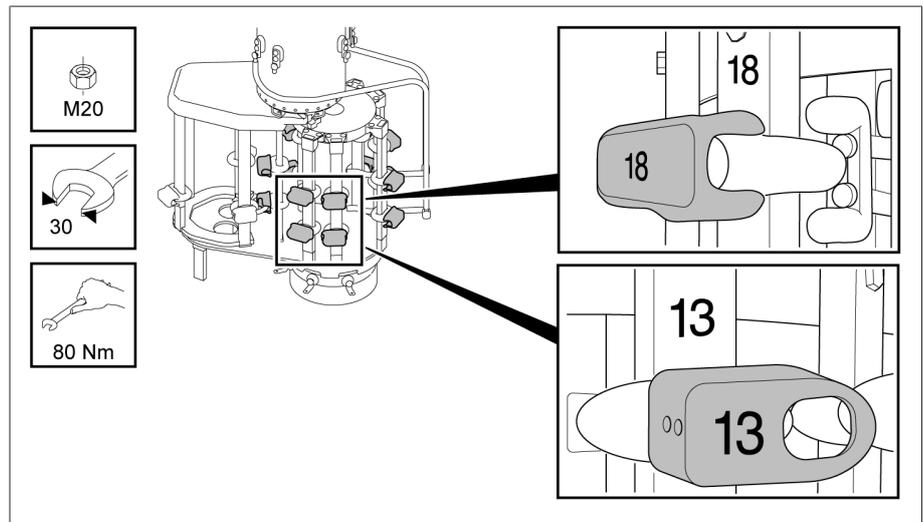


Figure 70: Tap selector connection contacts and change-over selector connection contacts

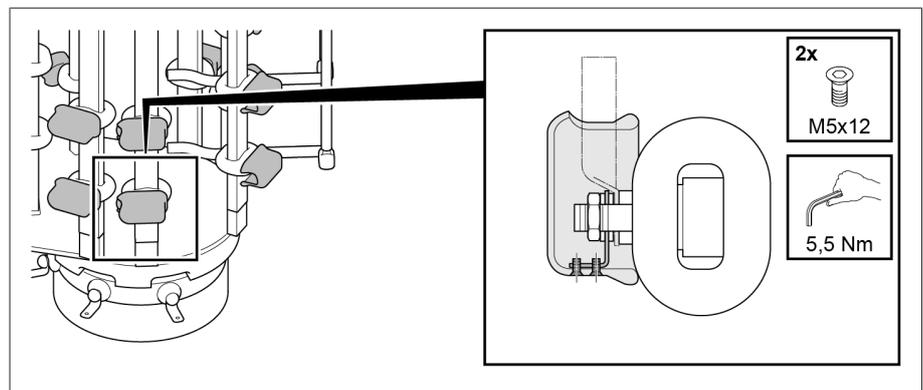


Figure 71: Screening caps

### 5.2.2.2 Connecting on-load tap-changer take-off lead

1. Connect the on-load tap-changer take-off lead to any through-hole on the take-off ring using the cable shoe and screw. The cable shoe and fastening materials are not included in the scope of delivery.
2. Take suitable measures to ensure the screw connection cannot come loose or settle (e.g. by using clamping washers).

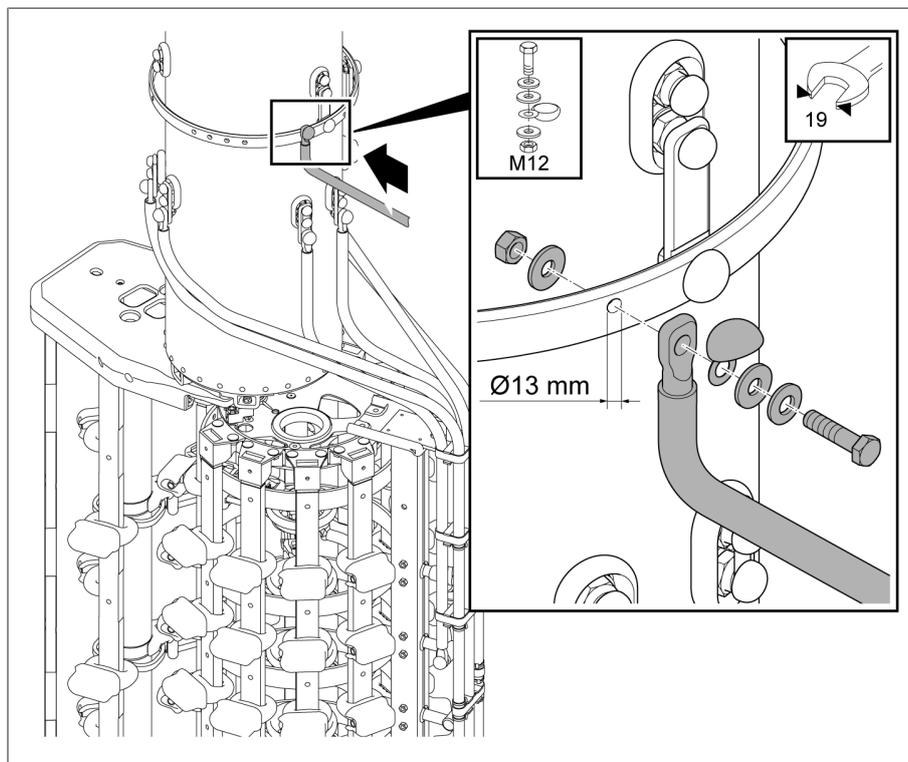


Figure 72: Take-off ring on oil compartment

### 5.2.3 Performing transformer ratio test before drying

#### NOTICE

#### Damage to the on-load tap-changer!

Damage to the on-load tap-changer due to transformer ratio test being incorrectly performed.

- > Do not perform more than 250 tap-change operations on the on-load tap-changer. If more than 250 tap-change operations are to be performed, completely fill the oil compartment with insulating fluid and lubricate sliding surfaces of contacts on the selector and selector gear with insulating fluid.
- > Only switch the on-load tap-changer from one operating position to the next via the upper gear unit. You can use a short tube (diameter 25 mm) with screwed-in coupling bolt (diameter 12 mm) with a hand wheel or crank for this, for example. When using a drill, do not exceed a maximum speed of 250 rpm.
- > Always check the operating position reached through the inspection window in the on-load tap-changer head cover. Never overshoot the end positions, which are indicated in the connection diagram supplied with the delivery.
- > For multiple-column applications with a shared drive, link all on-load tap-changer heads to one another using the horizontal drive shaft parts.



When actuating the change-over selector, a higher torque is required.

1. Switch the on-load tap-changer into the desired operating position. The diverter switch operation can be heard distinctly.
2. **NOTICE!** An incomplete tap-change operation may damage the on-load tap-changer. After operating the diverter switch, continue to crank the drive shaft of the upper gear unit for 2.5 revolutions in the same direction in order to correctly complete the tap-change operation.
3. Perform the transformer ratio test.
4. Repeat the transformer ratio test in all operating positions.
5. Switch the on-load tap-changer into adjustment position (see the accompanying connection diagram for the on-load tap-changer).

After the transformer ratio test, open the kerosene drain plug in the oil compartment if the on-load tap-changer is to be dried with kerosene in the transformer tank. After drying, the diverter switch insert must be removed, the kerosene drain plug in the oil compartment closed and the diverter switch insert refitted.

### 5.2.4 Performing DC resistance measurement on transformer

**NOTICE**

**Damage to the on-load tap-changer.**

Excessive measurement currents overload the contacts of the on-load tap-changer and thus cause damage to the on-load tap-changer.

- > Ensure that the maximum permissible measurement currents specified in the following table are not exceeded.
- > Perform the DC resistance measurement in various on-load tap-changer operating positions in accordance with the following table.

Status of oil compartment	Without interruption of the measured current	With interruption (measured current = 0 A before change of operating position)
Oil compartment empty	Maximum 10 A DC	Maximum 50 A DC
Oil compartment filled with insulating fluid	Maximum 50 A DC	Maximum 50 A DC

Table 4: Maximum permitted measured currents when performing DC resistance measurement on transformer

### 5.2.5 Drying on-load tap-changer in autoclave

**NOTICE**

**Damage to the on-load tap-changer!**

Moisture in the oil compartment reduces the dielectric strength of the insulating fluid and thus leads to damage to the on-load tap-changer.

- > Within 10 hours of drying, seal off oil compartment with on-load tap-changer head cover.

Dry on-load tap-changer in accordance with the following instructions to ensure the dielectric values assured by MR for the on-load tap-changer.

If drying in an autoclave, the following methods are possible:

- Vacuum drying
- Vapor-phase drying

As an alternative to drying the on-load tap-changer in an autoclave, it can also be dried in the transformer tank.

### 5.2.5.1 Vacuum-drying in the autoclave



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.2.8, Page 77].

#### 5.2.5.1.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

#### 5.2.5.1.2 Removing on-load tap-changer head cover

##### ⚠ WARNING



##### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

##### NOTICE

##### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- Ensure that parts do not fall into the oil compartment.
- Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

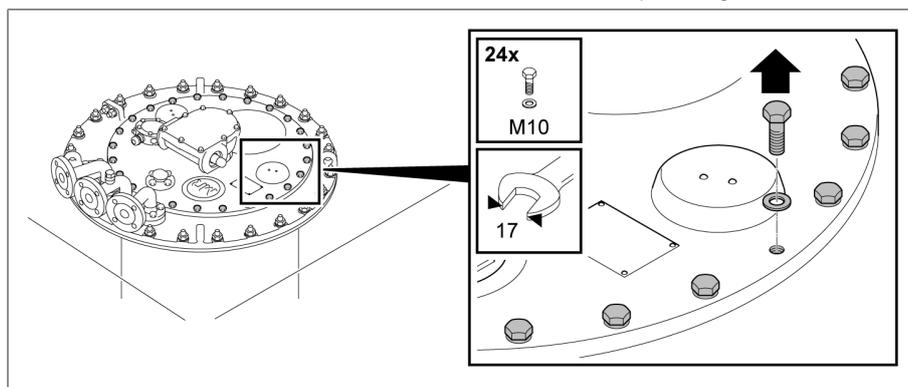


Figure 73: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

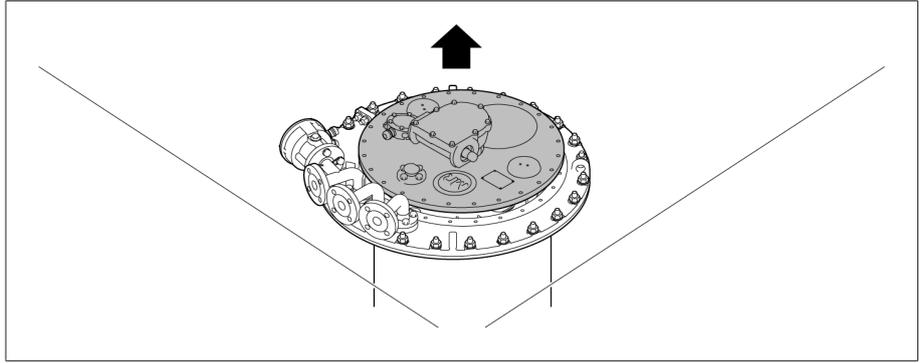


Figure 74: On-load tap-changer head cover

#### 5.2.5.1.3 Drying the on-load tap-changer

##### NOTICE

#### Damage to the on-load tap-changer head cover and on-load tap-changer accessories.

Both the on-load tap-changer head cover and the on-load tap-changer accessories will become damaged if they are dried.

- Never dry the on-load tap-changer head cover or the following accessories: motor-drive unit, drive shaft, protective relay, pressure monitoring device, pressure relief device, bevel gear, sensors such as temperature and humidity sensors or pressure sensors, oil filter unit.

1. Heat up the on-load tap-changer in air at atmospheric pressure with a temperature increase of approximately 10 °C/h to a final temperature of maximum 110 °C.
2. Pre-dry the on-load tap-changer in circulating air at a maximum temperature of 110 °C for a period of at least 20 hours.
3. Vacuum-dry on-load tap-changer at between 105 °C and maximum 125 °C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.2.5.1.4 Securing on-load tap-changer head cover

##### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- Ensure that the o-ring does not become damaged when mounting the cover.
- Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

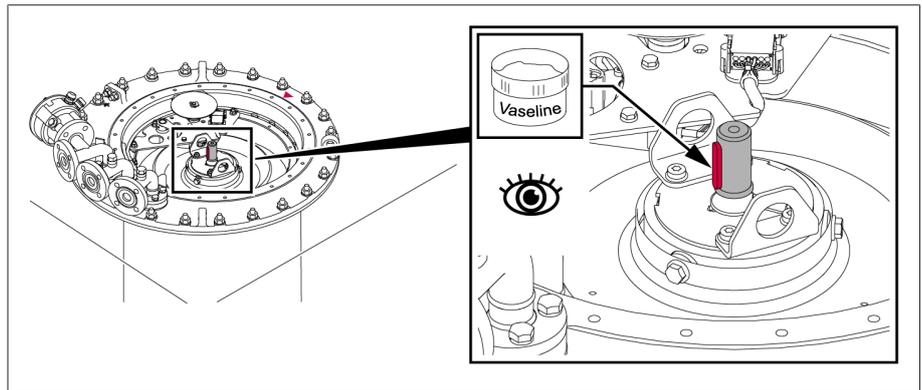


Figure 75: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

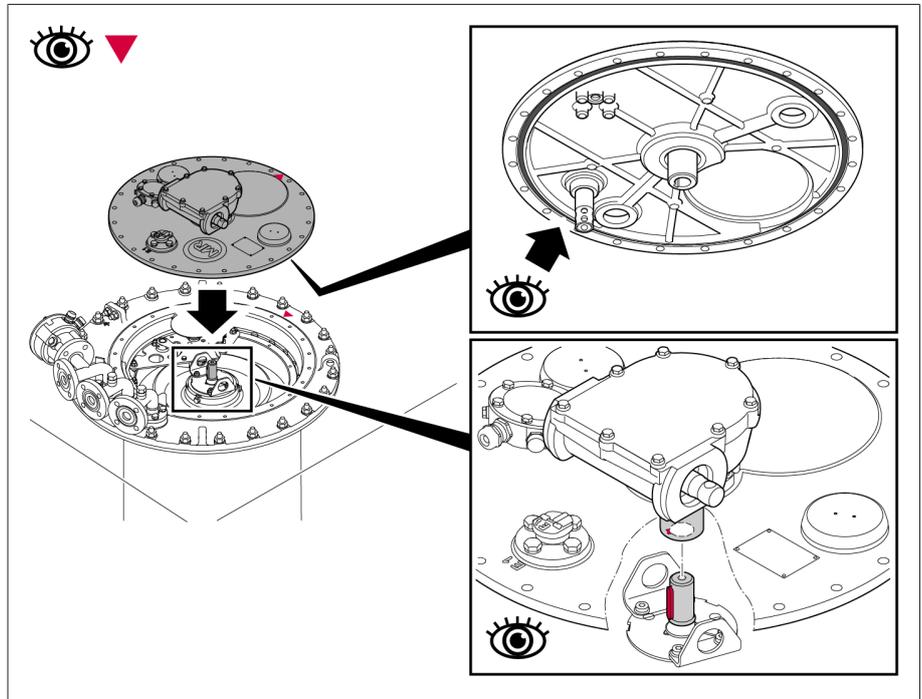


Figure 76: On-load tap-changer head cover with o-ring

3. Screw the on-load tap-changer head cover onto the on-load tap-changer head.

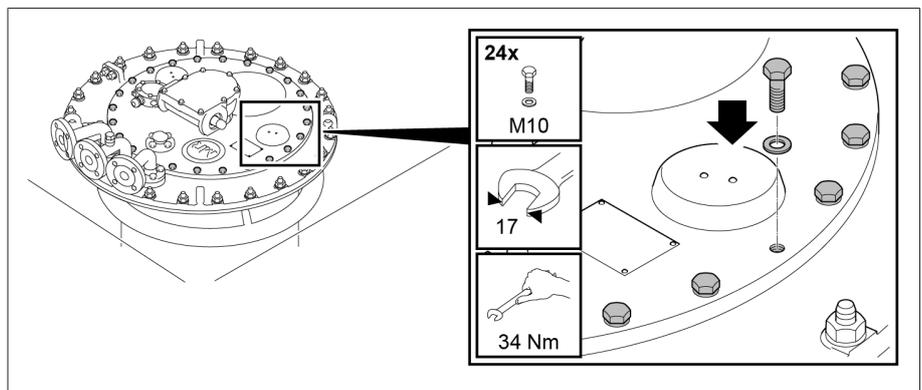


Figure 77: On-load tap-changer head cover

## 5.2.5.2 Vapor-phase drying in the autoclave



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.2.8, Page 77].

### 5.2.5.2.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

### 5.2.5.2.2 Removing on-load tap-changer head cover

#### ⚠ WARNING



#### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

#### NOTICE

#### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- Ensure that parts do not fall into the oil compartment.
- Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

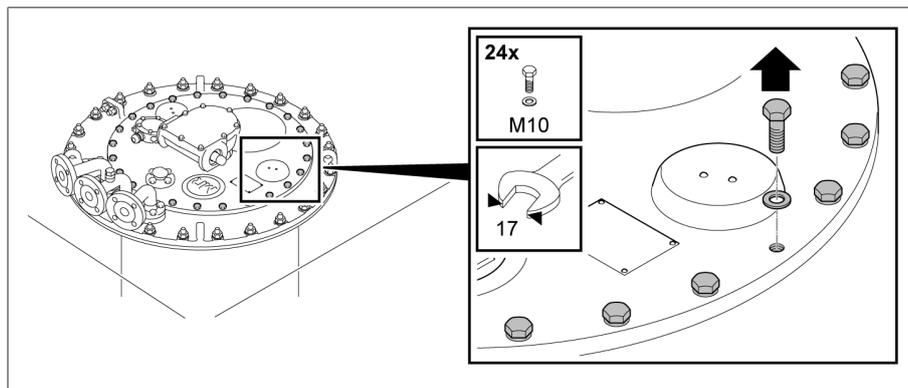


Figure 78: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

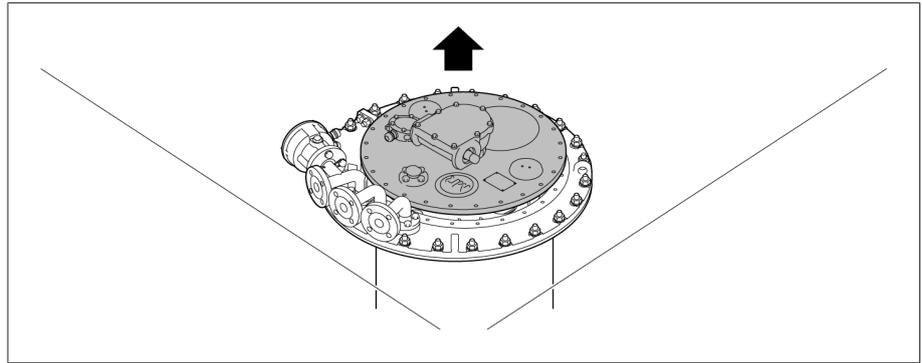


Figure 79: On-load tap-changer head cover

#### 5.2.5.2.3 Opening kerosene drain plug

- > **NOTICE!** Never remove the kerosene drain plug completely. Only unscrew the kerosene drain plug between the oil compartment base and selector gear clockwise until it starts to become hard to open.

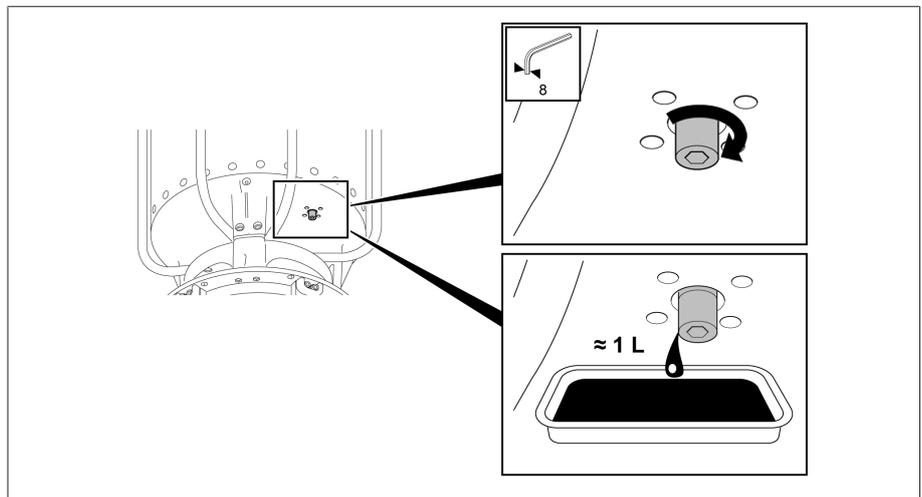


Figure 80: Kerosene drain plug

#### 5.2.5.2.4 Drying the on-load tap-changer

##### NOTICE

##### Damage to the on-load tap-changer head cover and on-load tap-changer accessories.

Both the on-load tap-changer head cover and the on-load tap-changer accessories will become damaged if they are dried.

- > Never dry the on-load tap-changer head cover or the following accessories: motor-drive unit, drive shaft, protective relay, pressure monitoring device, pressure relief device, bevel gear, sensors such as temperature and humidity sensors or pressure sensors, oil filter unit.

1. Supply kerosene vapor at a temperature of around 90°C. Keep this temperature constant for 3 to 4 hours.
2. Increase the kerosene vapor temperature by approx. 10°C/hour to the desired final temperature of max. 125°C at the on-load tap-changer.
3. Vacuum-dry on-load tap-changer at between 105°C and maximum 125°C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.2.5.2.5 Closing kerosene drain plug

- > **NOTICE!** An open kerosene drain plug leads to insulating fluid escaping from the oil compartment and therefore to damage to the on-load tap-changer. Close kerosene drain plug (tightening torque 20 Nm).

### 5.2.5.2.6 Securing on-load tap-changer head cover

#### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- Ensure that the o-ring does not become damaged when mounting the cover.
- Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

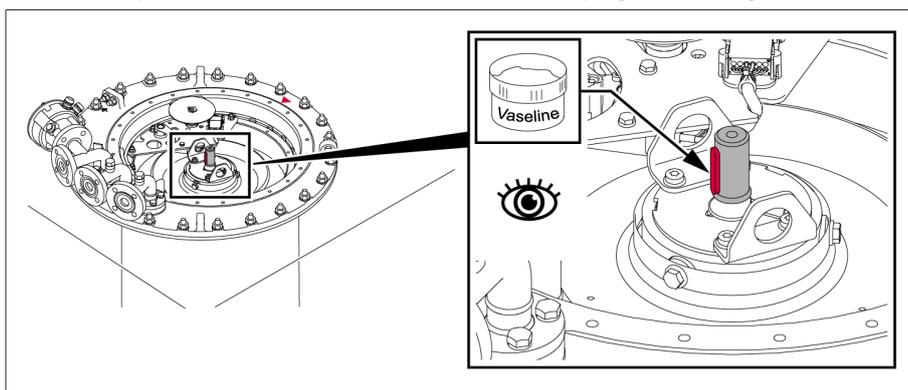


Figure 81: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

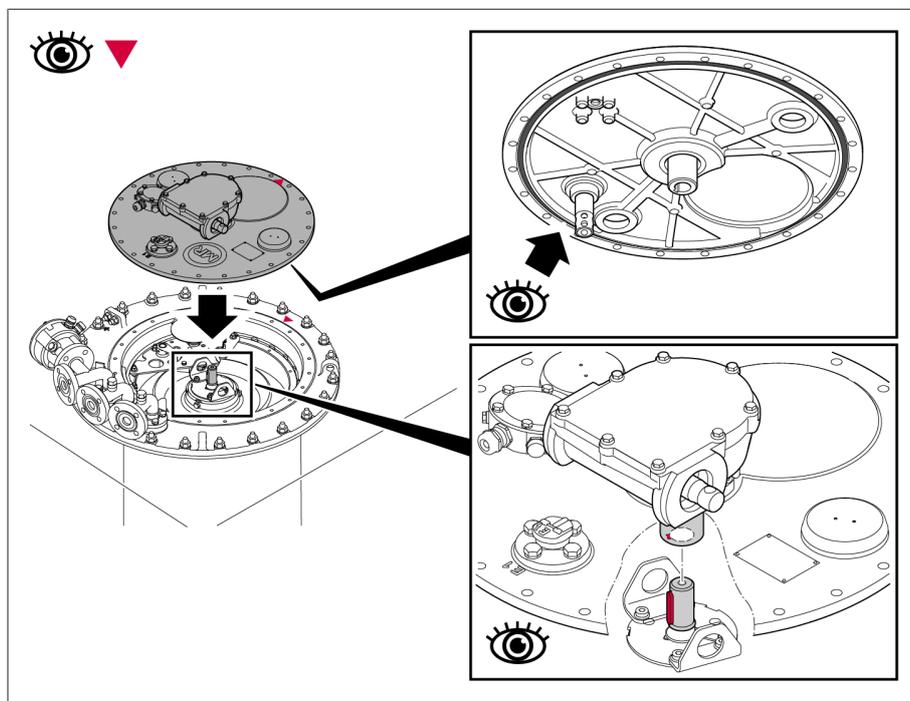


Figure 82: On-load tap-changer head cover with o-ring

3. Screw the on-load tap-changer head cover onto the on-load tap-changer head.

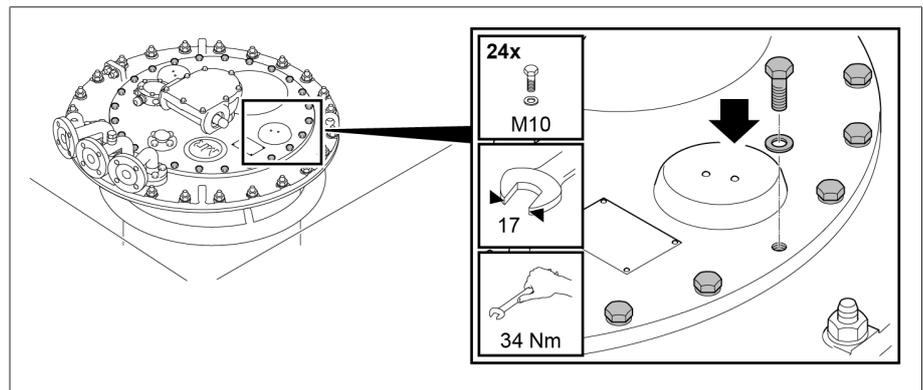


Figure 83: On-load tap-changer head cover

## 5.2.6 Drying on-load tap-changer in transformer tank

Dry on-load tap-changer in accordance with the following instructions to ensure the dielectric values assured by MR on the on-load tap-changer.

If you want to dry the on-load tap-changer in the transformer tank, fully assemble the transformer first and then undertake drying.

If drying in the transformer tank, the following methods are possible:

- Vacuum-drying
- Vapor-phase drying

As an alternative to drying the on-load tap-changer in the transformer tank, it can also be dried in an autoclave.

### 5.2.6.1 Vacuum-drying in the transformer tank

- The on-load tap-changer head cover remains closed during the entire drying process.

1. Establish a connecting lead between either connections E2 and Q or connections E2 and R on the on-load tap-changer head.
2. Seal off unused pipe connections with a suitable blank cover.

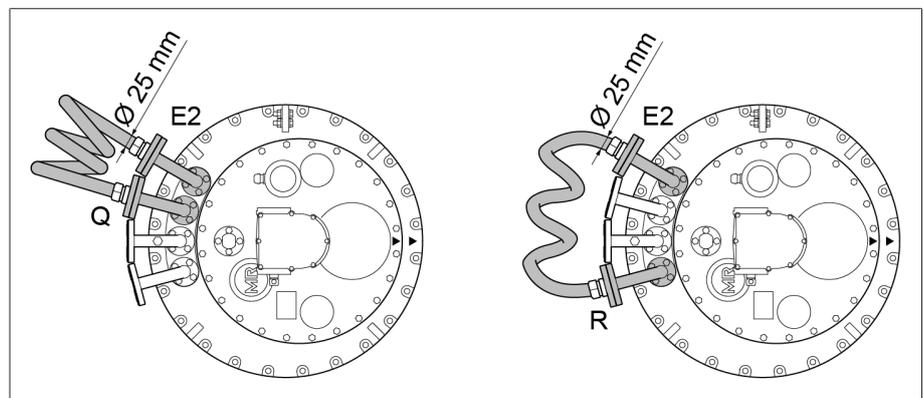


Figure 84: Connecting lead

### Vacuum-drying in the transformer tank

1. Heat up the on-load tap-changer in air at atmospheric pressure with a temperature increase of approximately 10 °C/h to a final temperature of maximum 110 °C.
2. Pre-dry the on-load tap-changer in circulating air at a maximum temperature of 110 °C for a period of at least 20 hours.
3. Vacuum-dry on-load tap-changer at between 105 °C and maximum 125 °C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.2.8, Page 77].

### 5.2.6.2 Vapor-phase drying in the transformer tank

If you have opened the kerosene drain plug already (e.g. after the transformer ratio test), you can begin the drying [► Section 5.2.6.2.4, Page 75] right away.

Otherwise, you first have to open the kerosene drain plug before you can begin the drying.

#### 5.2.6.2.1 Removing diverter switch insert

##### 5.2.6.2.1.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

##### 5.2.6.2.1.2 Removing on-load tap-changer head cover

#### ▲ WARNING



#### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

#### NOTICE

#### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- Ensure that parts do not fall into the oil compartment.
- Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

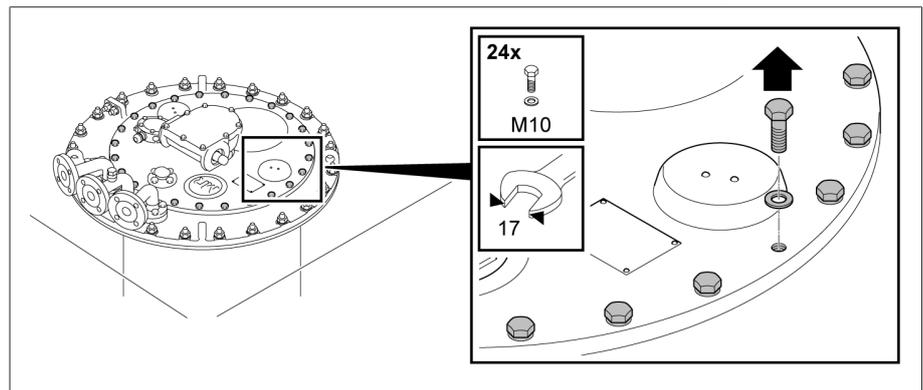


Figure 85: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

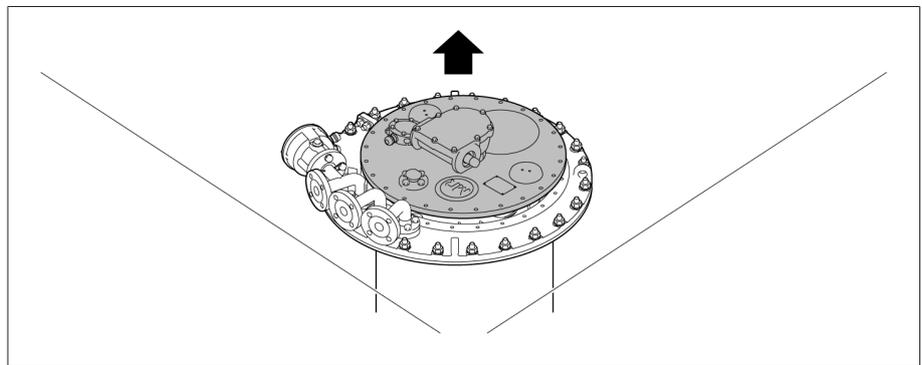


Figure 86: On-load tap-changer head cover

#### 5.2.6.2.1.3 Removing tap position indicator disk

- > Pull spring clip off shaft end and remove tap position indicator disk.

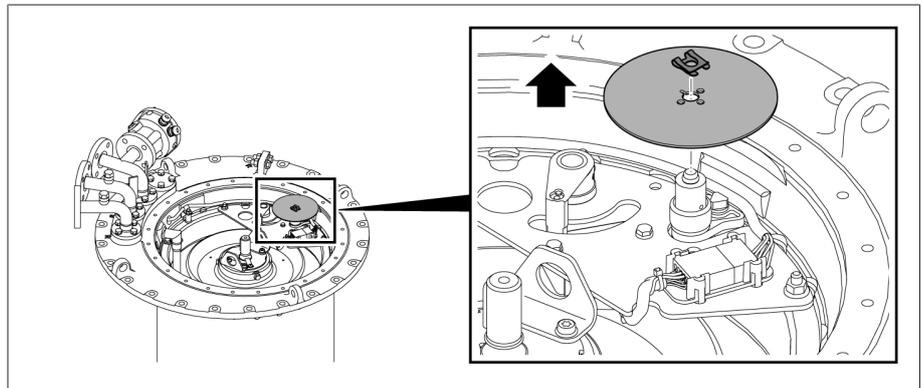


Figure 87: Tap position indicator disk

#### 5.2.6.2.1.4 Removing the tap-change supervisory device

##### NOTICE

##### Damage to the tap-change supervisory device!

Removing the tap-change supervisory device without due care may damage the tap-change supervisory device, thereby resulting in damage to the on-load tap-changer.

- > Remove the tap-change supervisory device with care in order not to damage or rip out the connecting leads.

1. Take the tap-change supervisory device plug connector out of the mounting bracket and disconnect it.

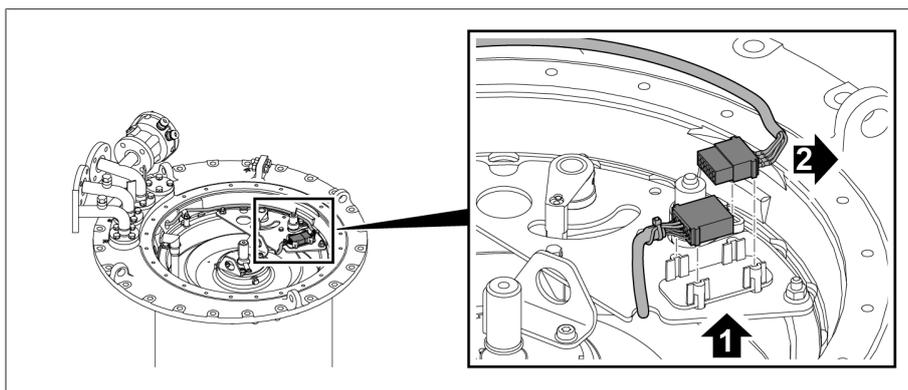


Figure 88: Plug connector

2. Remove nuts and locking elements on the mounting plate.

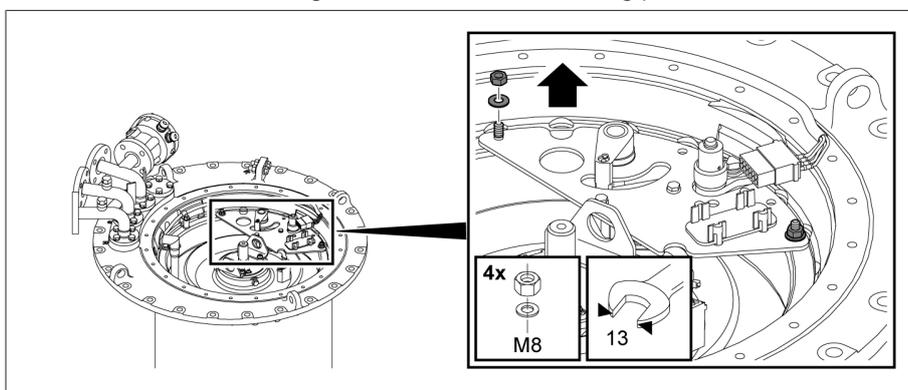


Figure 89: Mounting plate

3. Remove mounting plate with tap-change supervisory device and drive shaft.

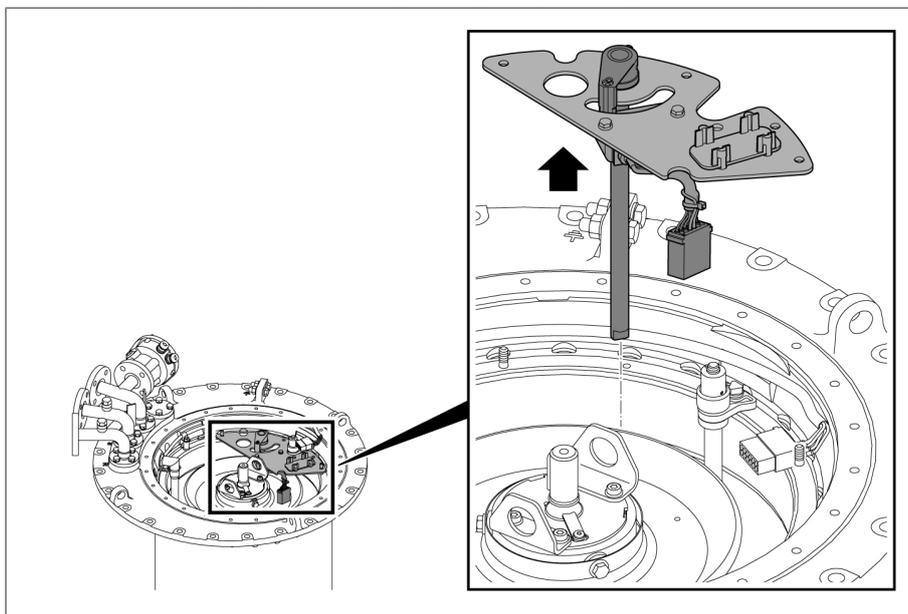


Figure 90: Mounting plate with tap-change supervisory device and drive shaft

- Swivel lead of the tap-change supervisory device out of the on-load tap-changer head in the direction of the arrow.

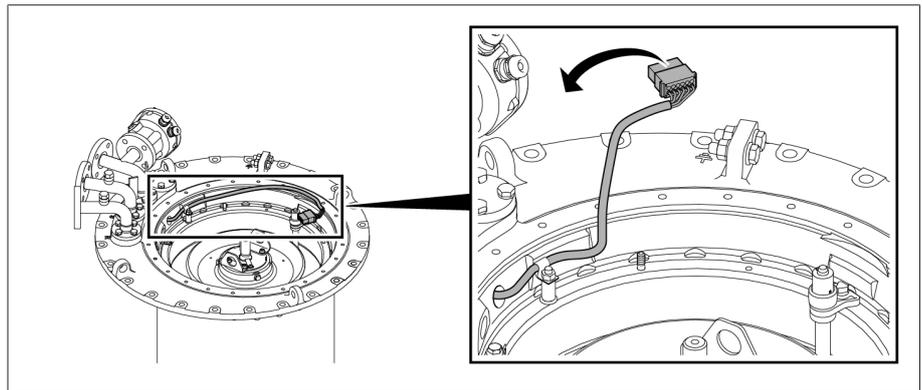


Figure 91: Lead of tap-change supervisory device

#### 5.2.6.2.1.5 Lifting out diverter switch insert

- CAUTION!** Danger of lacerations when turning the coupling tube without an operating wrench. If the markings on the coupling flange and on-load tap-changer head are not aligned, turn the coupling tube so that the markings align, either by directly turning the shielding ring while wearing gloves or by using an operating wrench.

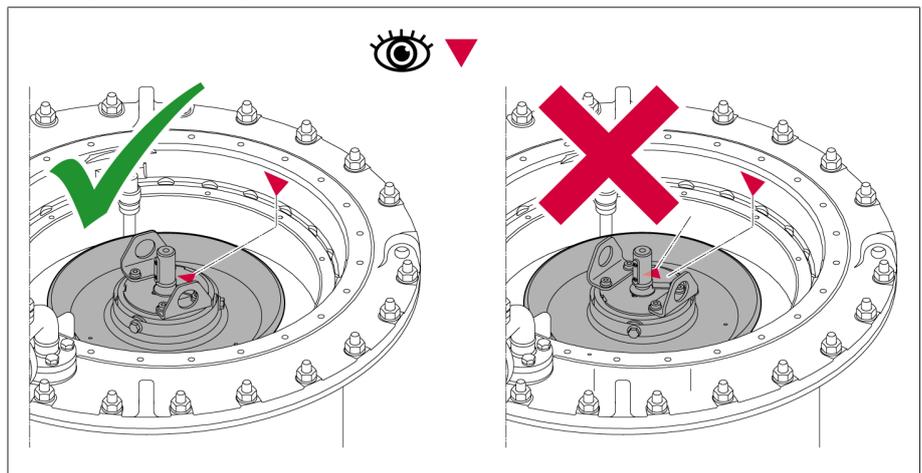


Figure 92: Aligning the coupling tube

- Insert the lifting gear in the eyebolts of the coupling tube and position vertically above the diverter switch insert.

3. A weight load of up to 200 kg can occur immediately when lifting out the diverter switch insert. Lift the diverter switch insert slowly and vertically out of oil compartment, ensuring that the protective ring on the indicator drive shaft does not become detached when doing so.

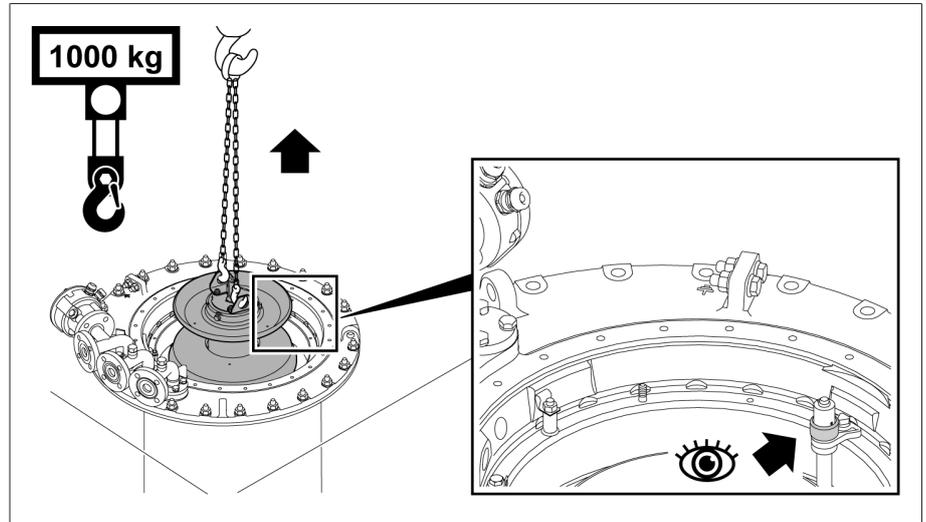


Figure 93: Diverter switch insert

4. **CAUTION!** An unstably positioned diverter switch insert may tip, resulting in injuries or property damage. Place the diverter switch insert on a level surface and secure it against tipping. Do not operate the diverter switch insert or change the position of the selector coupling when the diverter switch insert is not installed.

#### 5.2.6.2.2 Opening kerosene drain plug

- > **NOTICE!** Unscrew kerosene drain plug with extended socket wrench counter-clockwise until it starts to offer resistance to turning. Never unscrew the kerosene drain plug all the way.

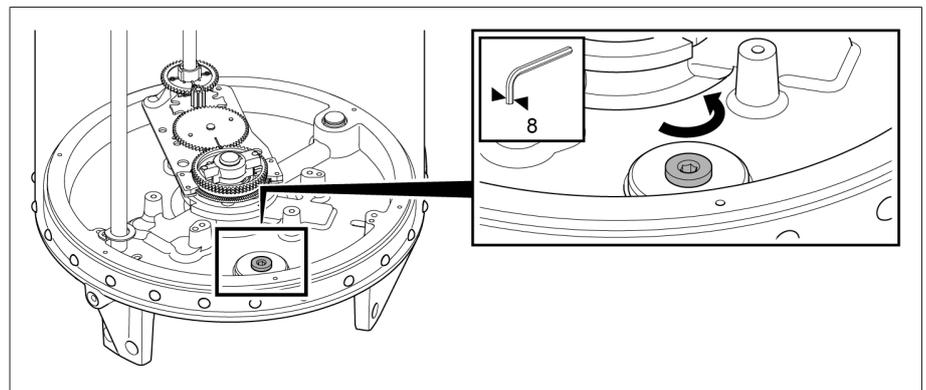


Figure 94: Kerosene drain plug

### 5.2.6.2.3 Inserting diverter switch insert

#### 5.2.6.2.3.1 Inserting diverter switch insert

1. To fit the diverter switch insert, ensure that the selector coupling is in the adjustment position.

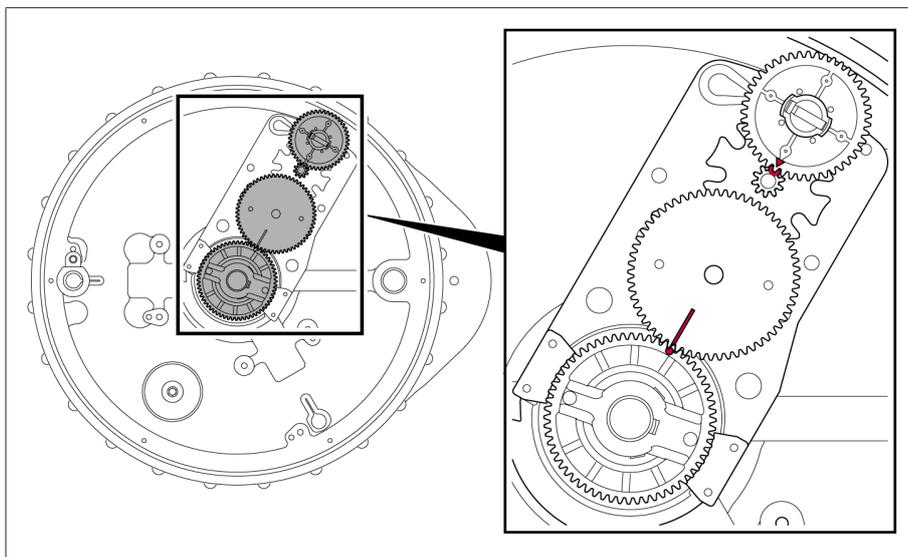


Figure 95: Adjustment markings in oil compartment base

2. **NOTICE!** Damage to the on-load tap-changer by mixing up the diverter switch inserts. Ensure that there are the same the number of markings on the diverter switch insert and on the on-load tap-changer head.

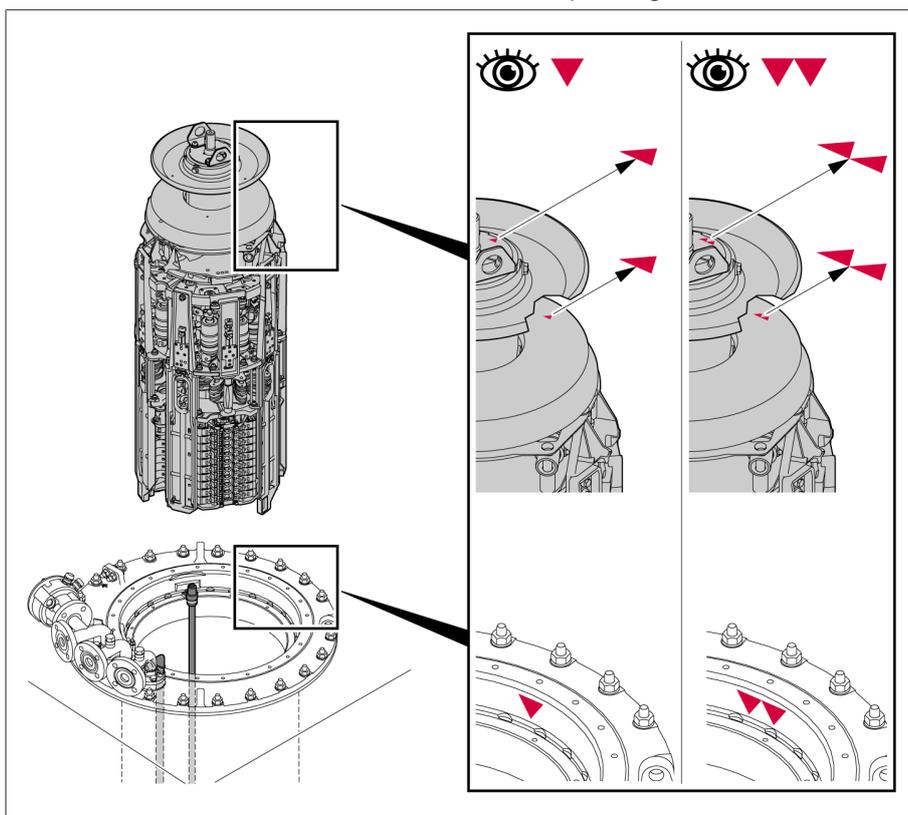


Figure 96: Same number of markings

3. **⚠ CAUTION!** Danger of lacerations when turning the coupling tube without an operating wrench. If the markings on the diverter switch insert are not aligned, turn the coupling tube so that the markings align, either by directly turning the shielding ring while wearing gloves or by using an operating wrench. Switch over the diverter switch insert if necessary.

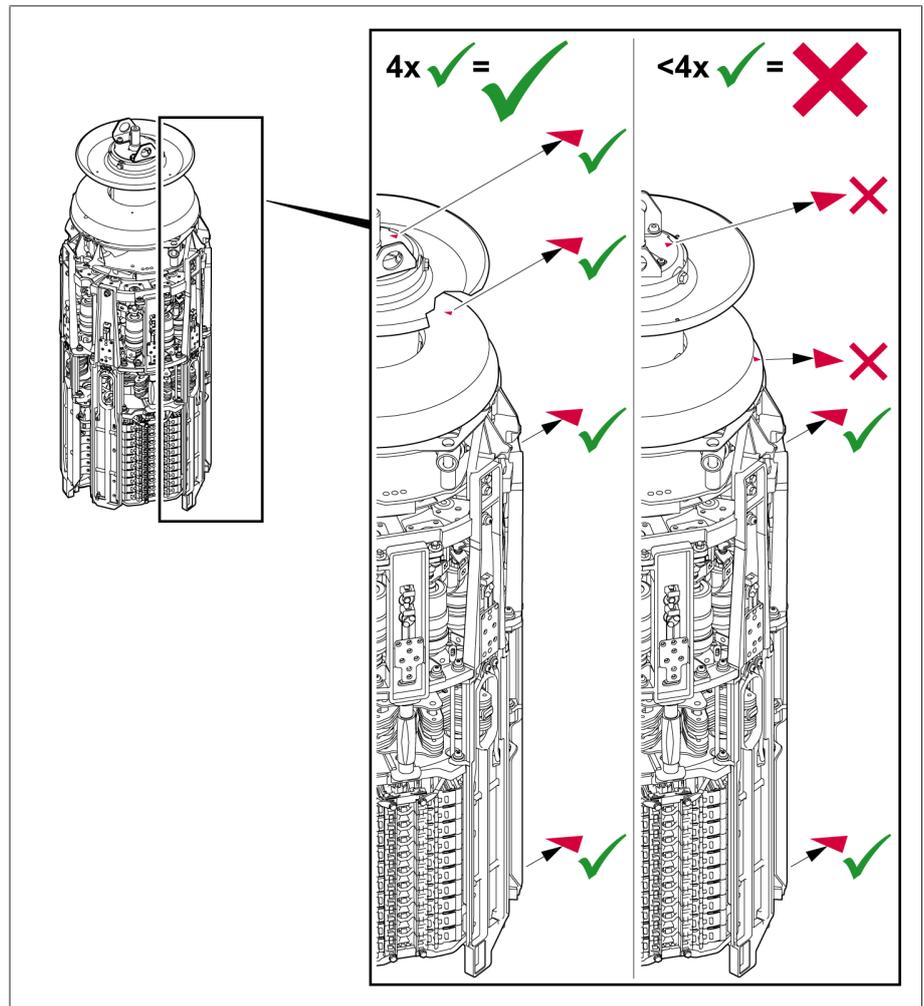


Figure 97: Markings on the diverter switch insert

4. Attach lifting gear to diverter switch insert and position diverter switch insert over oil compartment.
5. Align the diverter switch insert such that the markings on the diverter switch insert and on the on-load tap-changer head align. Ensure that the protective ring is on the indicator drive shaft. Slowly lower diverter switch insert until it

meets the oil compartment base. The shape of the selector coupling ensures that coupling is only possible in the correct position. The oil compartment of on-load tap-changers with  $U_m \geq 300$  kV contains an additional guide tube.

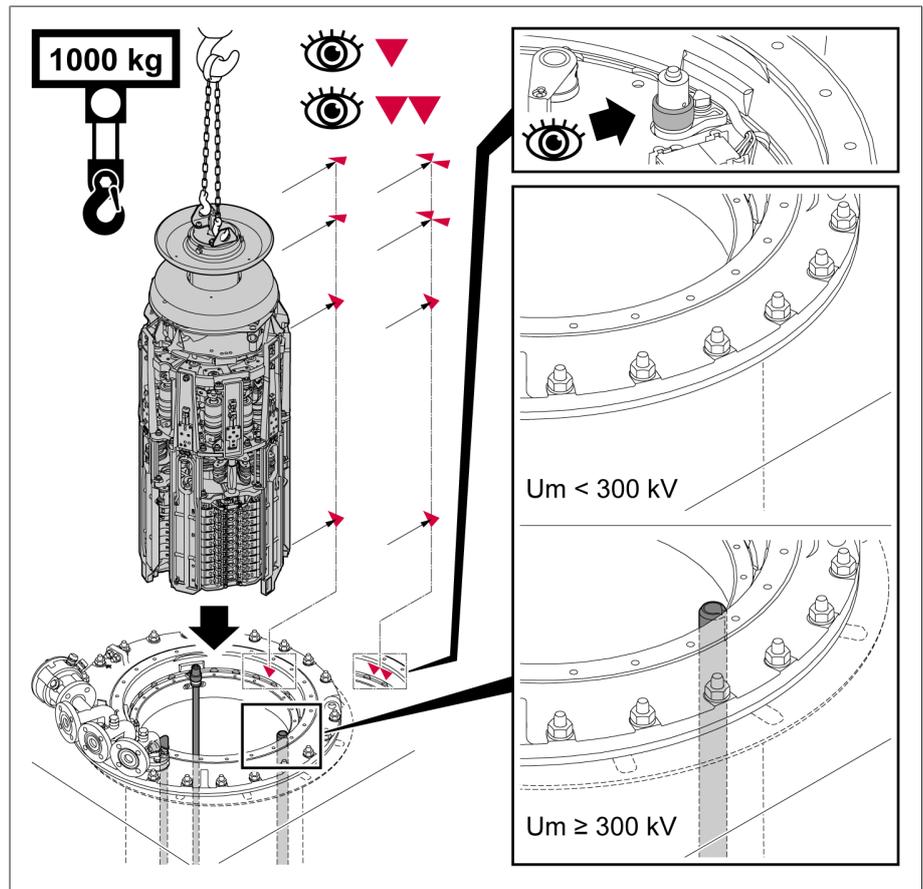


Figure 98: Markings on the diverter switch insert and the on-load tap-changer head

6. Check the distance between the upper rim edge of the adapter shaft on the diverter switch insert and the mounting surface of the on-load tap-changer head. The distance must be  $13 \pm 2$  mm.

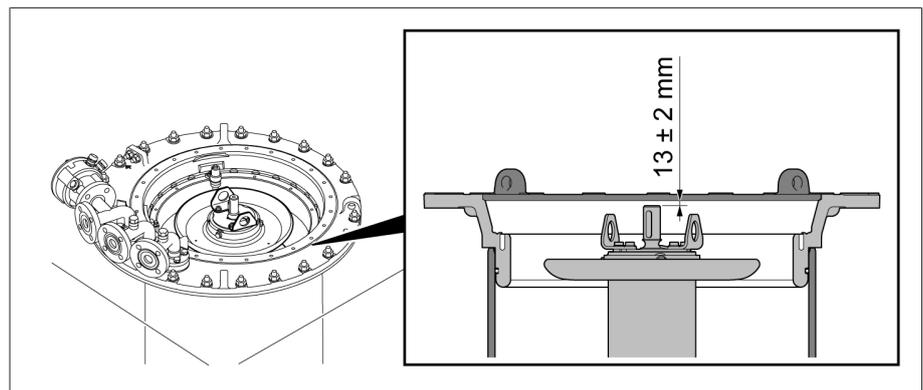


Figure 99: Distance between the upper rim edge of the adapter shaft of the diverter switch insert and the mounting surface of the on-load tap-changer head

### 5.2.6.2.3.2 Inserting the tap-change supervisory device

1. Insert mounting plate with tap-change supervisory device and drive shaft.

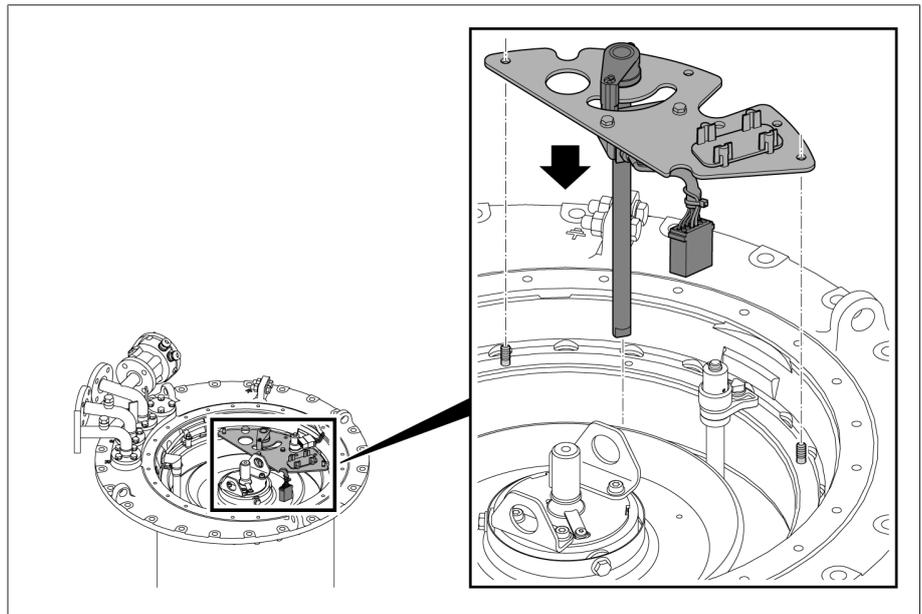


Figure 100: Mounting plate with tap-change supervisory device and drive shaft

2. Check that drive shaft is seated correctly in the plug connector.

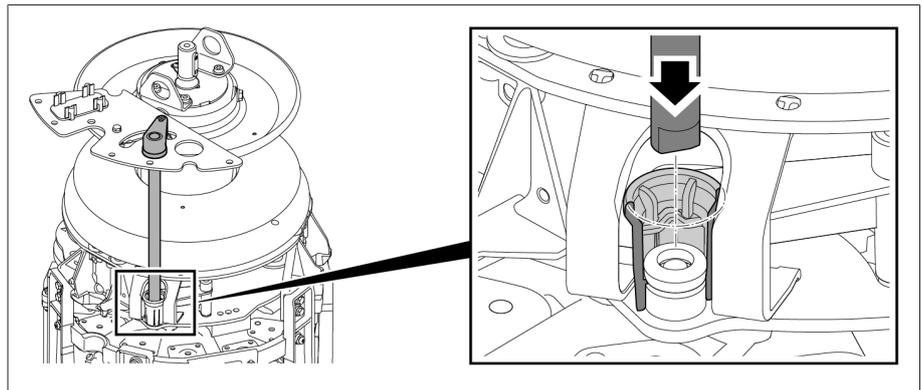


Figure 101: Drive shaft and plug connector

3. Attach mounting plate.

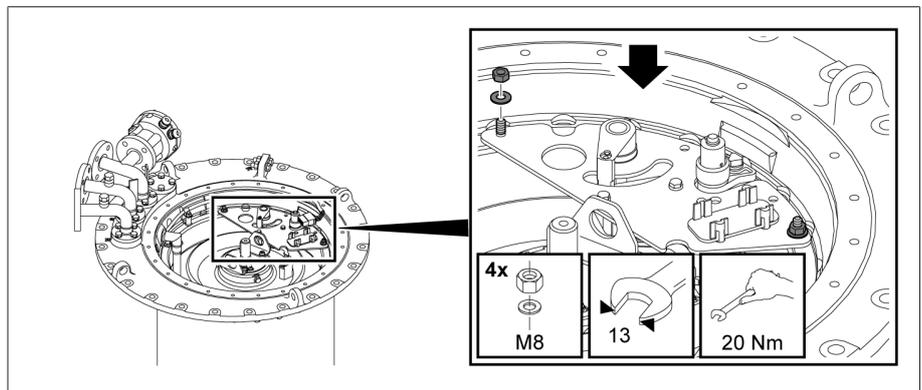


Figure 102: Mounting plate

4. Connect plug connector outside its bracket.

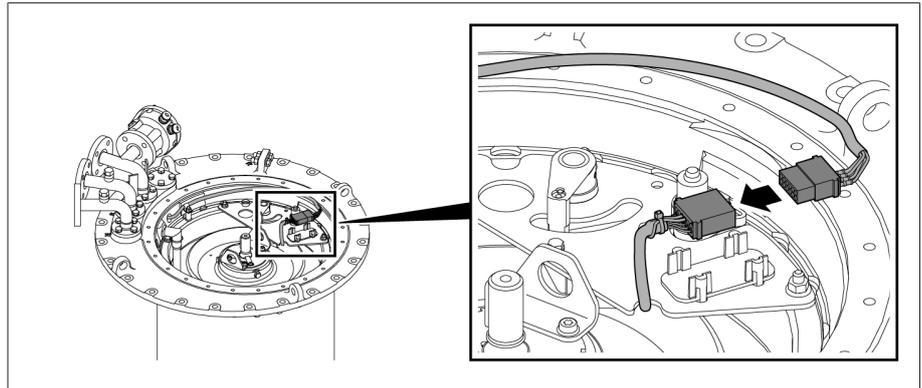


Figure 103: Plug connector

5. Insert plug connector into the bracket.

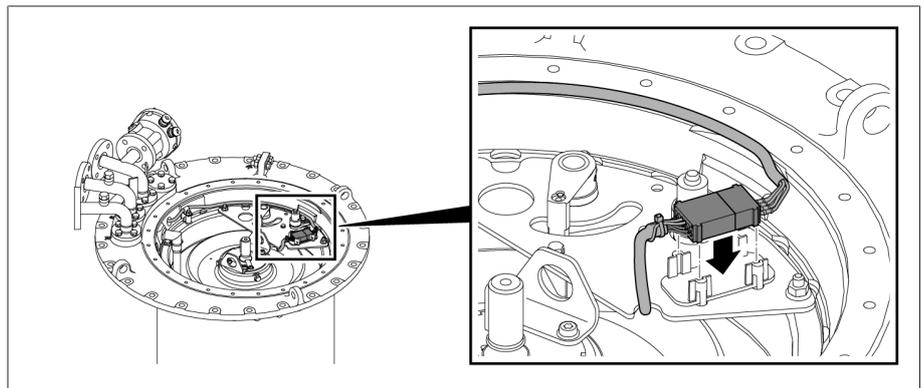


Figure 104: Plug connector in bracket

#### 5.2.6.2.3.3 Inserting tap position indicator disk

- Due to the coupling pin, the tap position indicator disk can only be installed when in the correct position.

> Place tap position indicator disk on indicator drive shaft, slide spring clip on to shaft end.

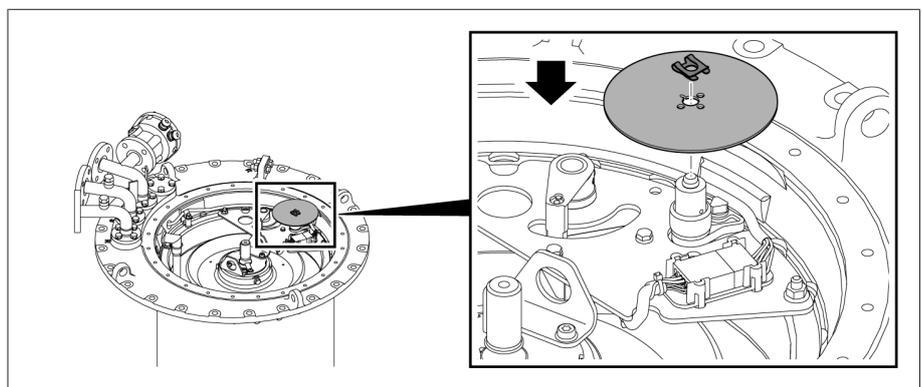


Figure 105: Tap position indicator disk

#### 5.2.6.2.3.4 Securing on-load tap-changer head cover

### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- Ensure that the o-ring does not become damaged when mounting the cover.
- Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

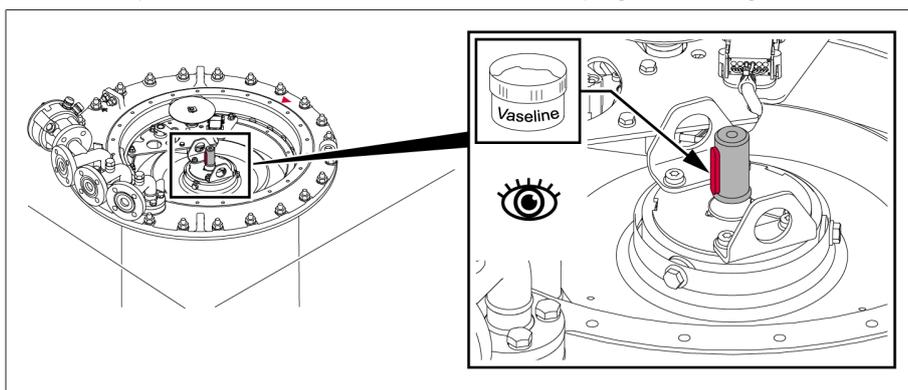


Figure 106: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

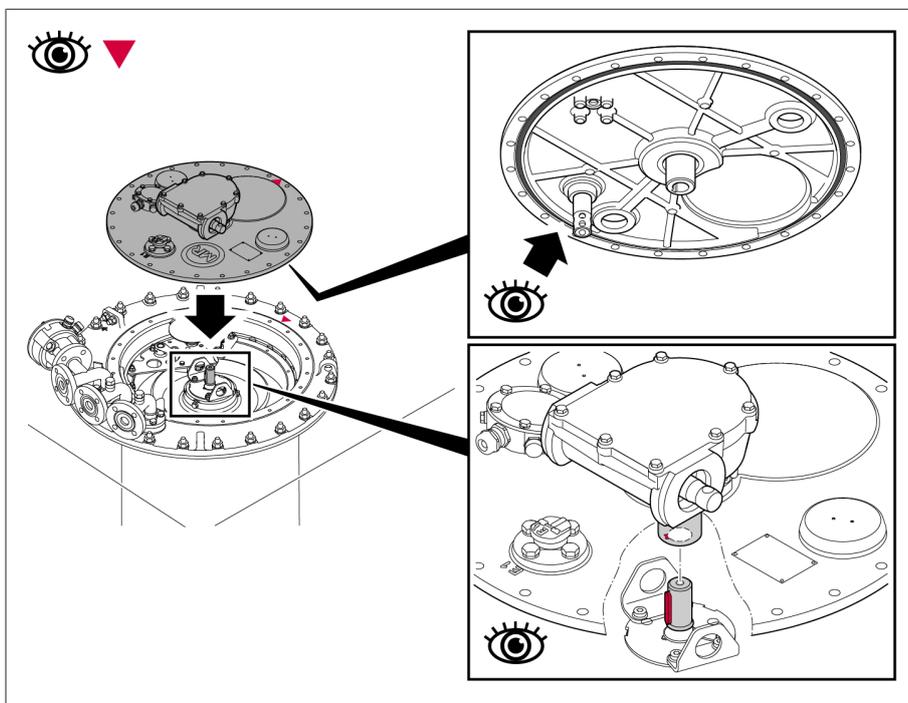


Figure 107: On-load tap-changer head cover with o-ring

- Screw the on-load tap-changer head cover onto the on-load tap-changer head.

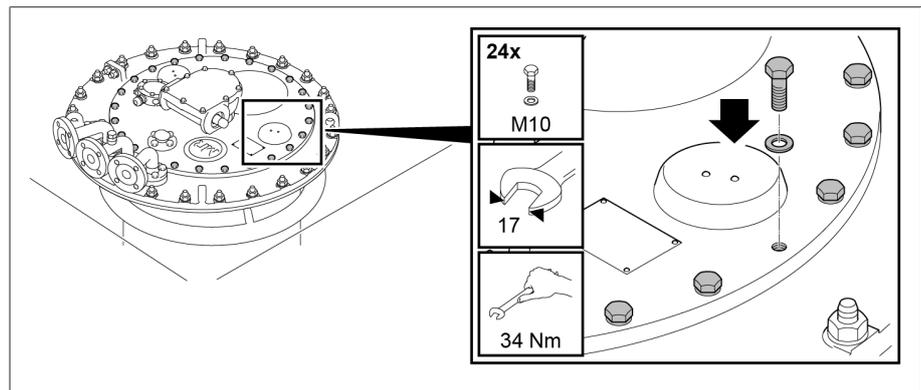


Figure 108: On-load tap-changer head cover

#### 5.2.6.2.4 Drying the on-load tap-changer

- Connect pipe connections R and Q of on-load tap-changer head to the kerosene vapor lead using one shared lead.
- Seal off unused pipe connections with a suitable blank cover.

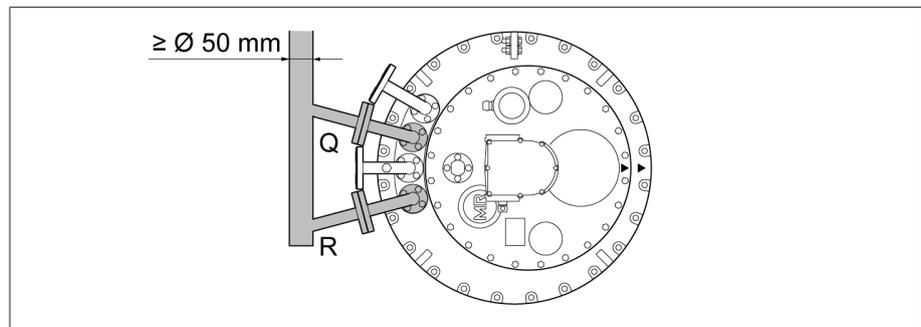


Figure 109: Shared lead

#### Vapor-phase drying in the transformer tank

- Supply kerosene vapor at a temperature of around 90°C. Keep this temperature constant for 3 to 4 hours.
- Increase the kerosene vapor temperature by approx. 10°C/hour to the desired final temperature of max. 125°C at the on-load tap-changer.
- Vacuum-dry on-load tap-changer at between 105°C and maximum 125°C for at least 50 hours.
- Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.2.6.2.5 Closing kerosene drain plug

##### NOTICE

#### Damage to the on-load tap-changer!

Moisture in the oil compartment reduces the dielectric strength of the insulating fluid and thus leads to damage to the on-load tap-changer.

> Within 10 hours of drying, seal off oil compartment with on-load tap-changer head cover.

- Remove [▶ Section 5.2.6.2.1, Page 64] the diverter switch insert.
- NOTICE!** An open kerosene drain plug leads to insulating fluid escaping from the oil compartment and therefore to damage to the on-load tap-changer. Close kerosene drain plug by turning clockwise with extended socket wrench (tightening torque 20 Nm).
- Insert [▶ Section 5.2.6.2.3, Page 69] the diverter switch insert.



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.2.8, Page 77].

## 5.2.7 Filling the oil compartment of the on-load tap-changer with insulating fluid

### NOTICE

#### Damage to the on-load tap-changer!

Unsuitable insulating fluids cause damage to the on-load tap-changer.

- > Only use insulating fluids [► Section 9.1.2, Page 210] approved by the manufacturer.

After drying, completely fill the oil compartment (diverter switch insert fitted) with insulating fluid again as soon as possible so that an impermissible amount of humidity is not absorbed from the surroundings.

1. Establish a connecting lead between pipe connection E2 and one of the pipe connections R, S or Q to ensure equal pressure in the oil compartment and transformer during evacuation.

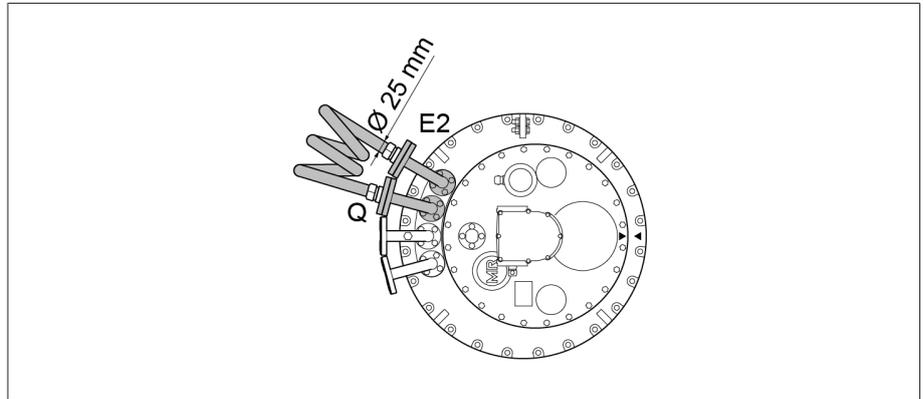


Figure 110: Connecting lead between E2 and Q

2. Fill on-load tap-changer with new insulating fluid using one of the two free pipe connections of the on-load tap-changer head.

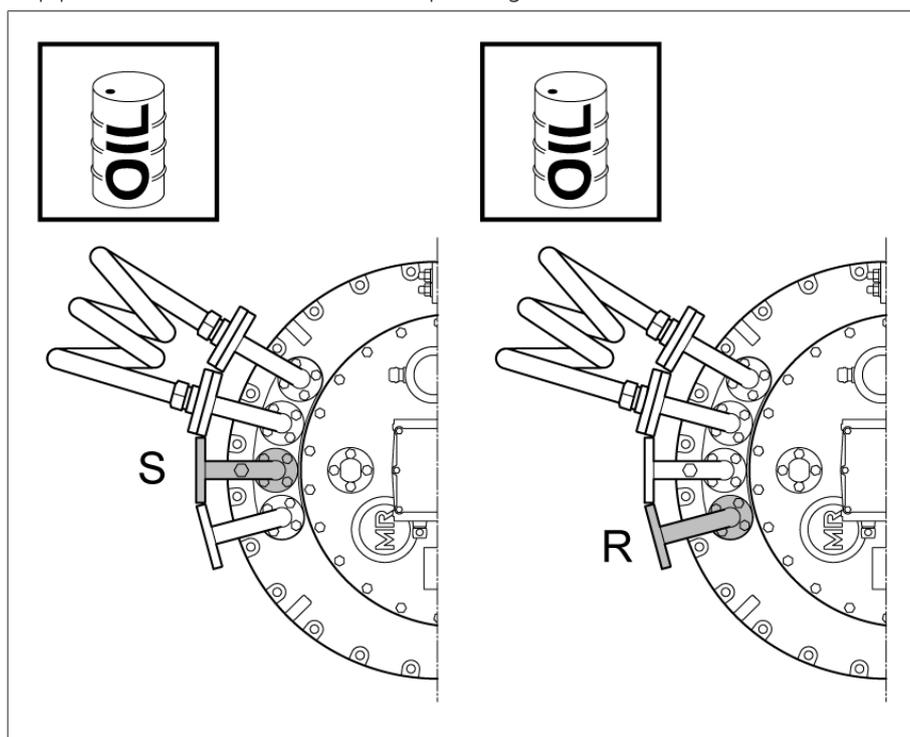


Figure 111: Pipe connections S and R

### 5.2.8 Performing transformer ratio test after drying

#### NOTICE

#### Damage to the on-load tap-changer!

Damage to the on-load tap-changer due to transformer ratio test being incorrectly performed.

- Ensure that the selector / de-energized tap changer is fully immersed in the insulating fluid and that the oil compartment of the on-load tap-changer is completely filled with insulating fluid.
- Only switch the on-load tap-changer from one operating position to the next via the upper gear unit. You can use a short tube (diameter 25 mm) with screwed-in coupling bolt (diameter 12 mm) with a hand wheel or crank for this, for example. When using a drill, do not exceed a maximum speed of 250 rpm.
- Always check the operating position reached through the inspection window in the on-load tap-changer head cover. Never overshoot the end positions, which are indicated in the connection diagram supplied with the delivery.
- For multiple-column applications with a shared drive, link all on-load tap-changer heads to one another using the horizontal drive shaft part.



When actuating the change-over selector, a higher torque is required.

1. Switch the on-load tap-changer into the desired operating position. The diverter switch operation can be heard distinctly.
2. **NOTICE!** An incomplete tap-change operation may damage the on-load tap-changer. After operating the diverter switch, continue to crank the drive shaft of the upper gear unit for 2.5 revolutions in the same direction in order to correctly complete the tap-change operation.

3. Perform the transformer ratio test.
4. Repeat the transformer ratio test in all operating positions.
5. Switch the on-load tap-changer into adjustment position (see the accompanying connection diagram for the on-load tap-changer).

## 5.3 Installing on-load tap-changer in transformer (bell-type tank version)

### 5.3.1 Inserting on-load tap-changer into supporting structure

#### 5.3.1.1 Securing selector to oil compartment

1. **⚠ CAUTION!** An unstably positioned selector may tip, resulting in injuries or property damage. Place the selector with transport pallet on a level surface and secure it against tipping.
2. Remove the red-colored packaging material and the transport material from the selector. Only remove the red supports (if present) after inserting the on-load tap-changer into the supporting structure.
3. Remove the plastic bag with the fastening materials from the selector and keep it ready.

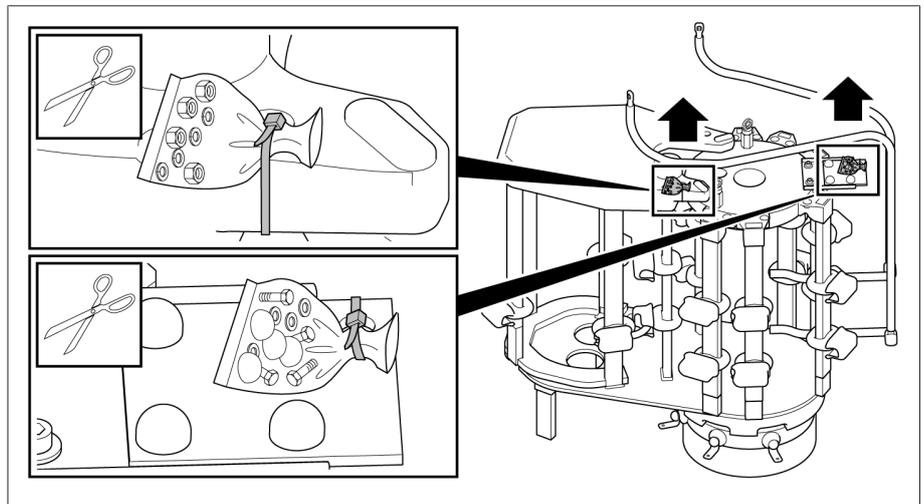


Figure 112: Plastic bag with fastening materials

4. Remove the blocking strip from the selector coupling. Once the blocking strip is removed, the selector coupling may no longer be turned.

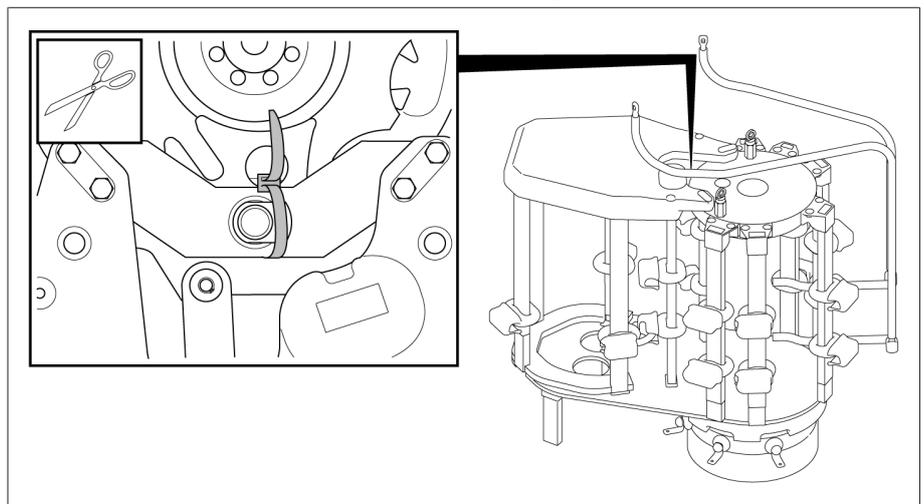


Figure 113: Selector coupling with blocking strip

5. Remove the ring nuts from the selector.

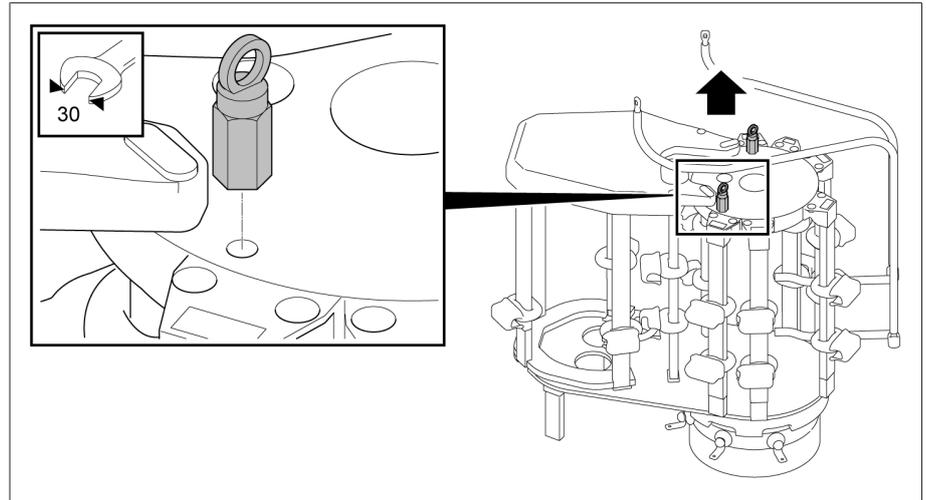


Figure 114: Ring nut

6. **CAUTION!** An unstably positioned oil compartment may tip over, resulting in severe injuries or property damage. Place the oil compartment on a level surface and secure it against tipping.
7. Remove the blocking strip from the coupling of the oil compartment base.

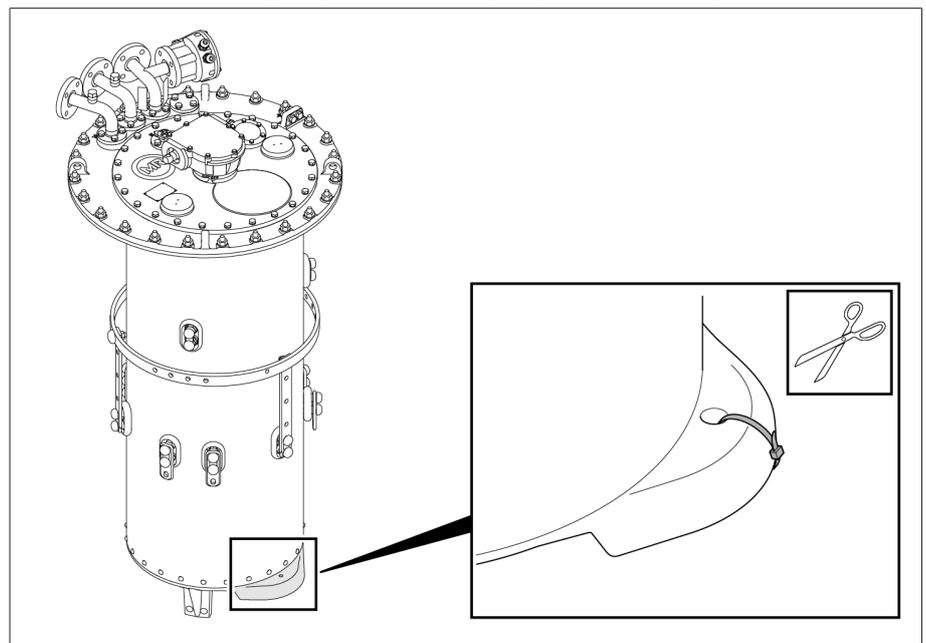


Figure 115: Blocking strip

8. Lift the oil compartment by hooking up the on-load tap-changer head and carefully move it over the selector. The weight of the oil compartment is a maximum of 320 kg.
9. **NOTICE!** Lowering the oil compartment without due care can result in the oil compartment and selector colliding and becoming damaged. Carefully lower the oil compartment, ensuring that the tap-selector connecting leads are free when lowering the oil compartment and do not touch the compartment.
10. Align the position of both coupling parts and attachment points on the oil compartment and the selector with one another. The correct position of the two coupling parts is shown in the adjustment plans supplied.

11. Screw the selector onto the oil compartment.

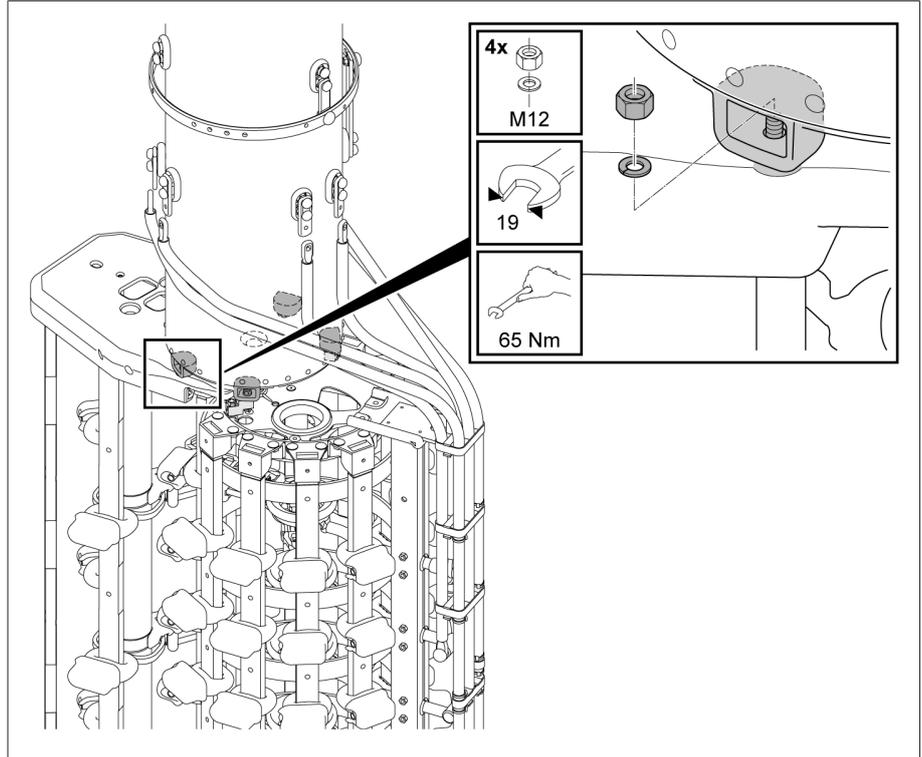


Figure 116: Selector with oil compartment

12 **NOTICE!** Incorrect tightening torques and unsecured screw connections can lead to damage to the on-load tap-changer. Screw the tap-selector connecting leads to the connecting piece with care. Comply with the specified tightening torque, secure screw connections and snap the screening caps in place over the screw heads.

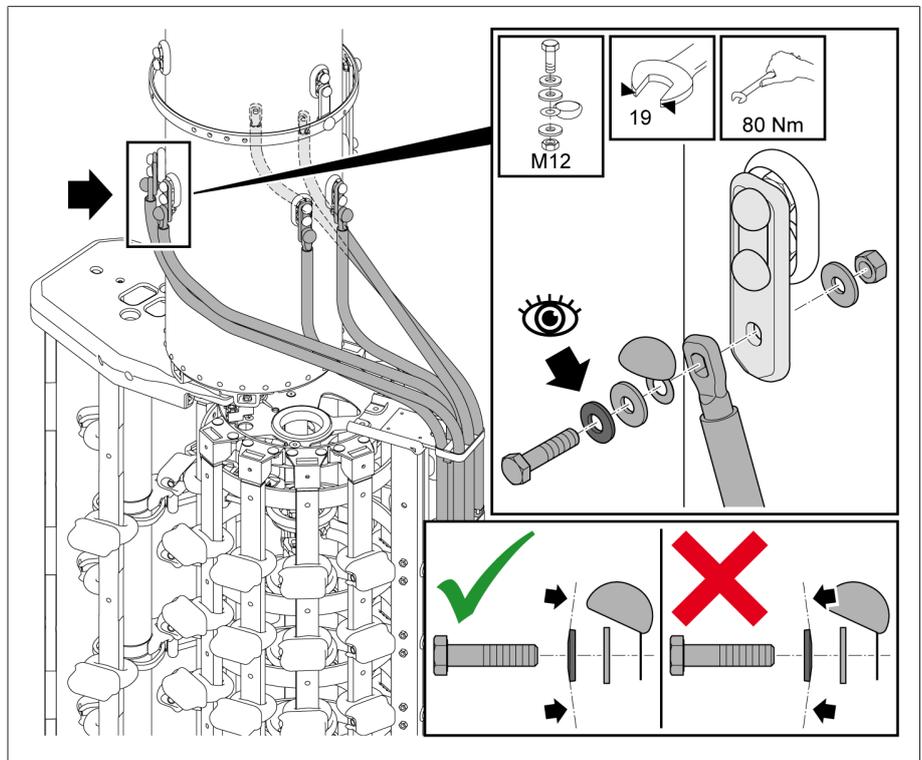


Figure 117: Tap-selector connecting leads

### 5.3.1.2 Inserting on-load tap-changer into supporting structure

1. **NOTICE!** Tensile forces can lead to damage and malfunctions on the on-load tap-changer. Using spacers, insert the on-load tap-changer vertically into the supporting structure (maximum 1° deviation from the vertical) so that the on-load tap-changer reaches its final installation height and only has to be raised a maximum of 5...20 mm once the step of the tap winding and the on-load tap-changer take-off lead have been connected and the bell-type tank fitted.

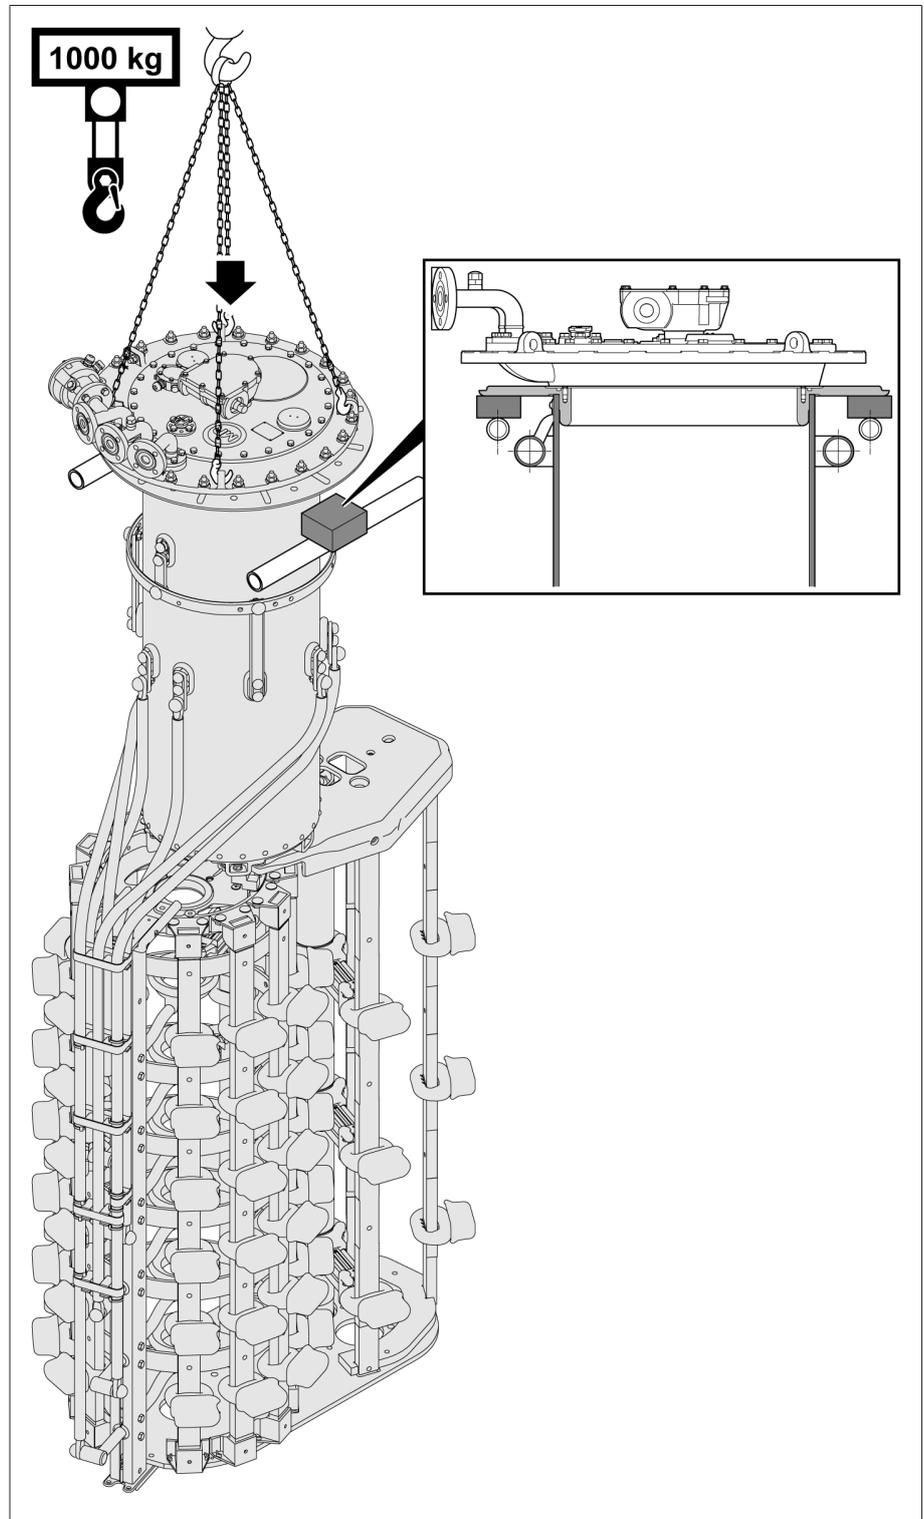


Figure 118: On-load tap-changer with spacers on the supporting structure

2. Temporarily fasten the on-load tap-changer to the supporting structure. The supporting flange has through holes for this purpose.

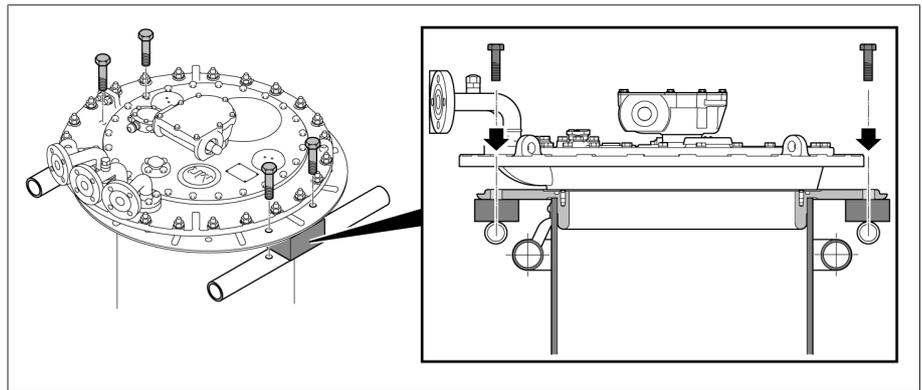


Figure 119: Fastening the on-load tap-changer

3. Remove the red supports on the selector base (if present).

### 5.3.2 Connecting the tap winding and on-load tap-changer take-off lead

#### NOTICE

#### Damage to the on-load tap-changer!

Connecting leads that place mechanical strain on the on-load tap-changer will damage the on-load tap-changer.

- > Establish connections carefully.
- > Do not twist connection contacts.
- > Connect connecting leads without warping or deforming.
- > If necessary, use an expansion loop for connecting leads.
- > Fit screening caps provided to screw connections.

The tap winding and on-load tap-changer take-off lead must be connected in accordance with the connection diagram included with the delivery.

#### 5.3.2.1 Tap selector and change-over-selector connection contacts

#### NOTICE

#### Damage to the on-load tap-changer!

Tap-winding connecting leads situated too closely to the change-over selector's moving parts block the change-over selector and therefore result in damage to the on-load tap-changer.

- > Tap-winding connecting leads in the area of the change-over selector have to be routed such that they are at a sufficient distance from the change-over selector's moving parts.

The selector connection contacts are indicated on the selector bars.

1. Connect the tap-winding connecting leads to the thread stud of the selector connection contacts with cable shoes and locknuts.
2. Attach a screening cap to each connection point with a steel angle piece and 2 screws. The screening caps are designed for lateral connection with a straight cable shoe or for front connection with an angled cable shoe.

- Secure the screw connection by centre-punching at the perimeter of the screw head. The distance between the screening caps and adjacent tap-selector connecting leads must be at least 25 mm.

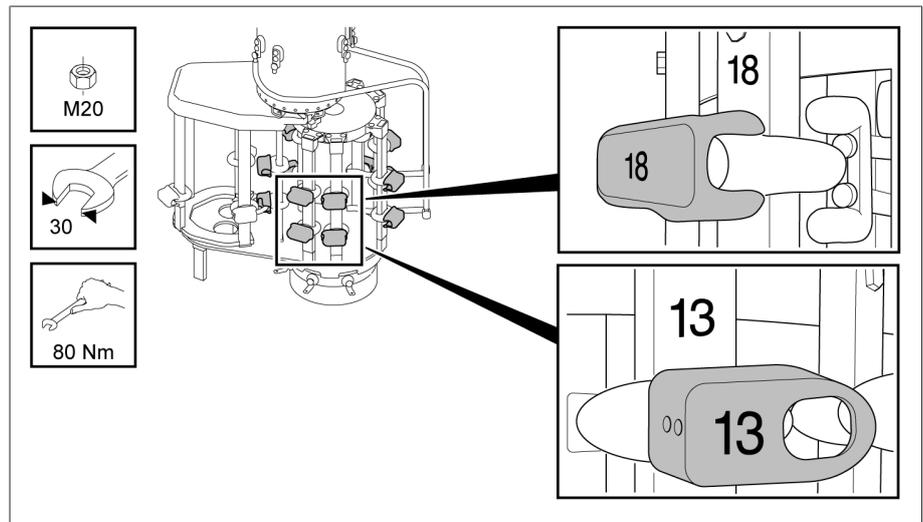


Figure 120: Tap selector connection contacts and change-over selector connection contacts

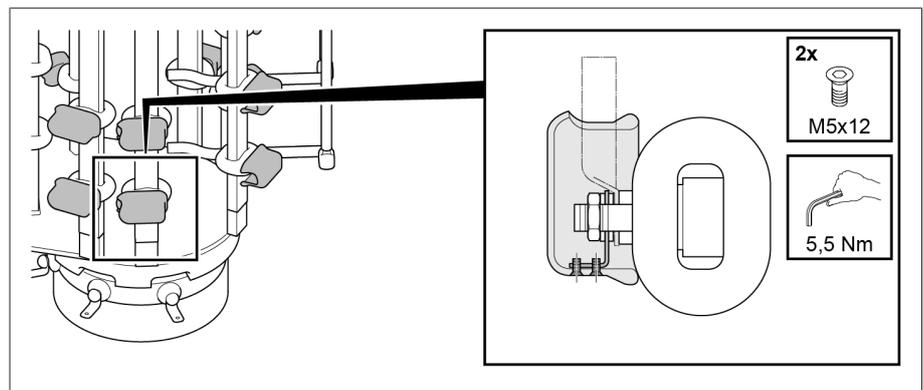


Figure 121: Screening caps

### 5.3.2.2 Connecting on-load tap-changer take-off lead

1. Connect the on-load tap-changer take-off lead to any through-hole on the take-off ring using the cable shoe and screw. The cable shoe and fastening materials are not included in the scope of delivery.
2. Take suitable measures to ensure the screw connection cannot come loose or settle (e.g. by using clamping washers).

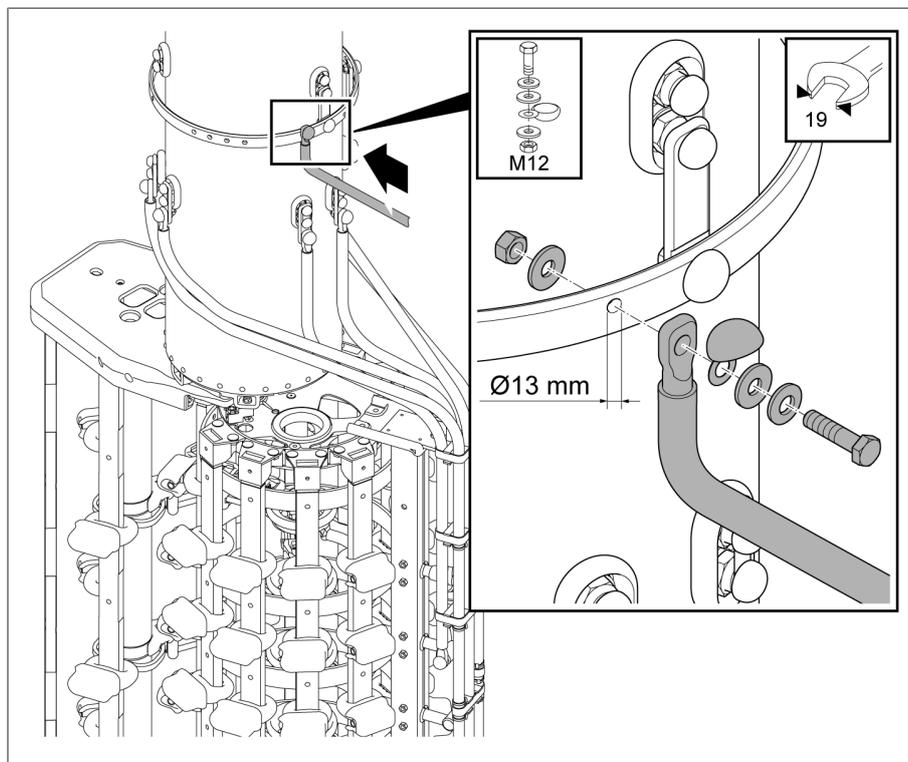


Figure 122: Take-off ring on oil compartment

### 5.3.3 Performing transformer ratio test before drying

#### NOTICE

#### Damage to the on-load tap-changer!

Damage to the on-load tap-changer due to transformer ratio test being incorrectly performed.

- > Do not perform more than 250 tap-change operations on the on-load tap-changer. If more than 250 tap-change operations are to be performed, completely fill the oil compartment with insulating fluid and lubricate sliding surfaces of contacts on the selector and selector gear with insulating fluid.
- > Only switch the on-load tap-changer from one operating position to the next via the upper gear unit. You can use a short tube (diameter 25 mm) with screwed-in coupling bolt (diameter 12 mm) with a hand wheel or crank for this, for example. When using a drill, do not exceed a maximum speed of 250 rpm.
- > Always check the operating position reached through the inspection window in the on-load tap-changer head cover. Never overshoot the end positions, which are indicated in the connection diagram supplied with the delivery.
- > For multiple-column applications with a shared drive, link all on-load tap-changer heads to one another using the horizontal drive shaft parts.



When actuating the change-over selector, a higher torque is required.

1. Switch the on-load tap-changer into the desired operating position. The diverter switch operation can be heard distinctly.
2. **NOTICE!** An incomplete tap-change operation may damage the on-load tap-changer. After operating the diverter switch, continue to crank the drive shaft of the upper gear unit for 2.5 revolutions in the same direction in order to correctly complete the tap-change operation.
3. Perform the transformer ratio test.
4. Repeat the transformer ratio test in all operating positions.
5. Switch the on-load tap-changer into adjustment position (see the accompanying connection diagram for the on-load tap-changer).

After the transformer ratio test, open the kerosene drain plug in the oil compartment if the on-load tap-changer is to be dried with kerosene in the transformer tank. After drying, the diverter switch insert must be removed, the kerosene drain plug in the oil compartment closed and the diverter switch insert refitted.

### 5.3.4 Performing DC resistance measurement on transformer

**NOTICE**

**Damage to the on-load tap-changer.**

Excessive measurement currents overload the contacts of the on-load tap-changer and thus cause damage to the on-load tap-changer.

- > Ensure that the maximum permissible measurement currents specified in the following table are not exceeded.
- > Perform the DC resistance measurement in various on-load tap-changer operating positions in accordance with the following table.

Status of oil compartment	Without interruption of the measured current	With interruption (measured current = 0 A before change of operating position)
Oil compartment empty	Maximum 10 A DC	Maximum 50 A DC
Oil compartment filled with insulating fluid	Maximum 50 A DC	Maximum 50 A DC

Table 5: Maximum permitted measured currents when performing DC resistance measurement on transformer

### 5.3.5 Drying on-load tap-changer in autoclave

**NOTICE**

**Damage to the on-load tap-changer!**

Moisture in the oil compartment reduces the dielectric strength of the insulating fluid and thus leads to damage to the on-load tap-changer.

- > Within 10 hours of drying, seal off oil compartment with on-load tap-changer head cover.

Dry on-load tap-changer in accordance with the following instructions to ensure the dielectric values assured by MR for the on-load tap-changer.

If drying in an autoclave, the following methods are possible:

- Vacuum drying
- Vapor-phase drying

As an alternative to drying the on-load tap-changer in an autoclave, it can also be dried in the transformer tank.

### 5.3.5.1 Vacuum-drying in the autoclave



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.3.10, Page 122].

#### 5.3.5.1.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

#### 5.3.5.1.2 Removing on-load tap-changer head cover

##### ▲ WARNING



##### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

##### NOTICE

##### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- Ensure that parts do not fall into the oil compartment.
- Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

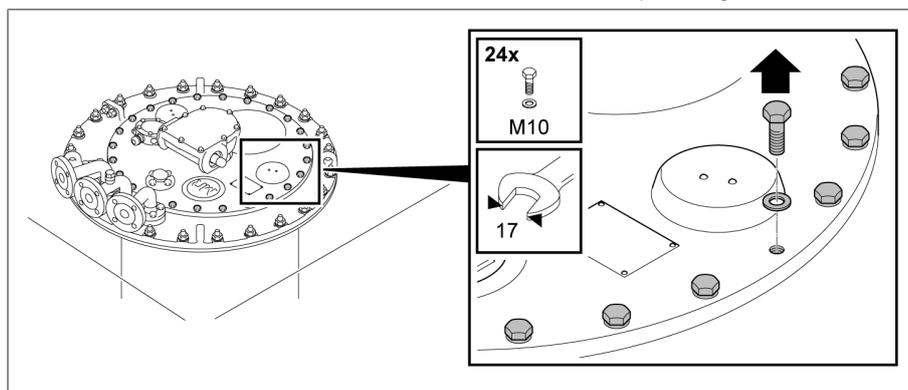


Figure 123: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

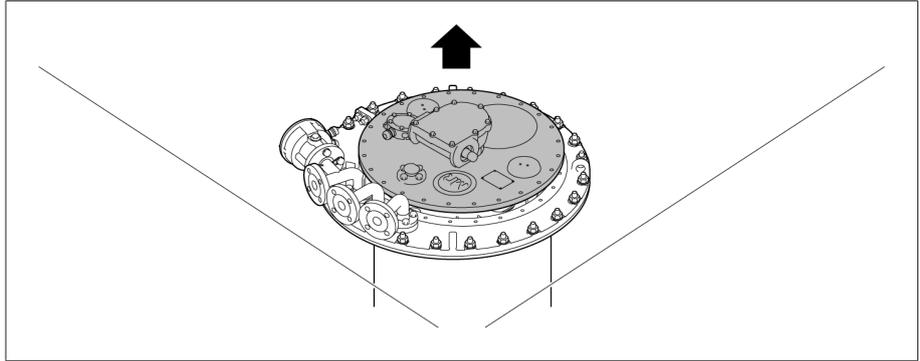


Figure 124: On-load tap-changer head cover

#### 5.3.5.1.3 Drying the on-load tap-changer

##### NOTICE

#### Damage to the on-load tap-changer head cover and on-load tap-changer accessories.

Both the on-load tap-changer head cover and the on-load tap-changer accessories will become damaged if they are dried.

- Never dry the on-load tap-changer head cover or the following accessories: motor-drive unit, drive shaft, protective relay, pressure monitoring device, pressure relief device, bevel gear, sensors such as temperature and humidity sensors or pressure sensors, oil filter unit.

1. Heat up the on-load tap-changer in air at atmospheric pressure with a temperature increase of approximately 10 °C/h to a final temperature of maximum 110 °C.
2. Pre-dry the on-load tap-changer in circulating air at a maximum temperature of 110 °C for a period of at least 20 hours.
3. Vacuum-dry on-load tap-changer at between 105 °C and maximum 125 °C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.3.5.1.4 Securing on-load tap-changer head cover

##### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- Ensure that the o-ring does not become damaged when mounting the cover.
- Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

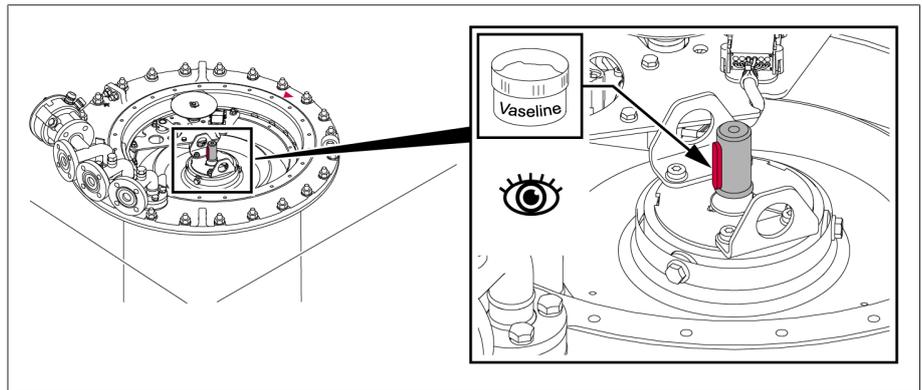


Figure 125: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

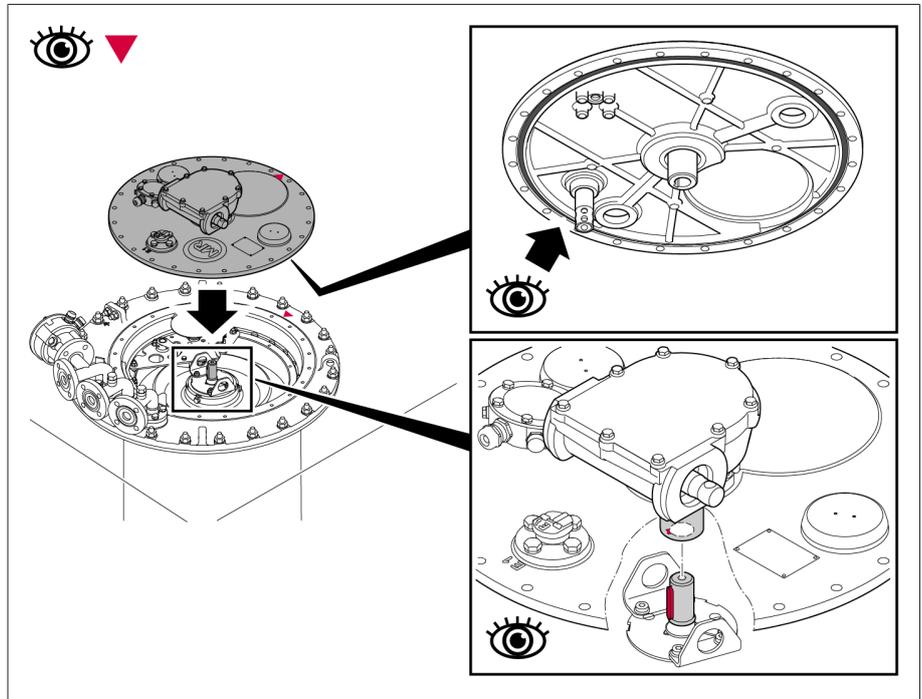


Figure 126: On-load tap-changer head cover with o-ring

3. Screw the on-load tap-changer head cover onto the on-load tap-changer head.

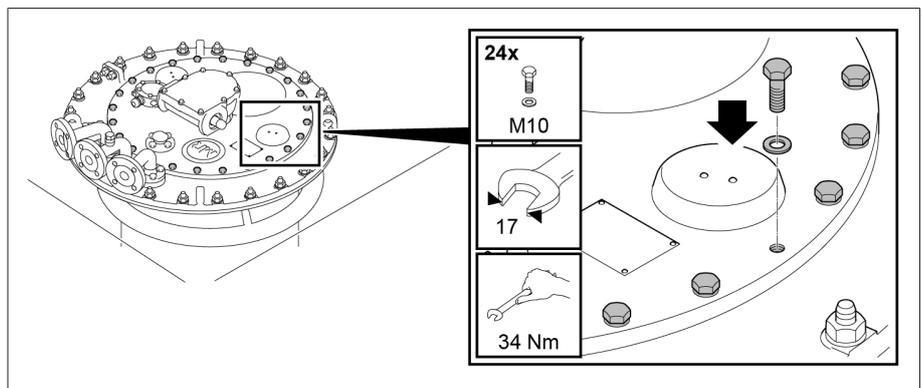


Figure 127: On-load tap-changer head cover

### 5.3.5.2 Vapor-phase drying in the autoclave



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.3.10, Page 122].

#### 5.3.5.2.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

#### 5.3.5.2.2 Removing on-load tap-changer head cover

##### ⚠ WARNING



##### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

##### NOTICE

##### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- Ensure that parts do not fall into the oil compartment.
- Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

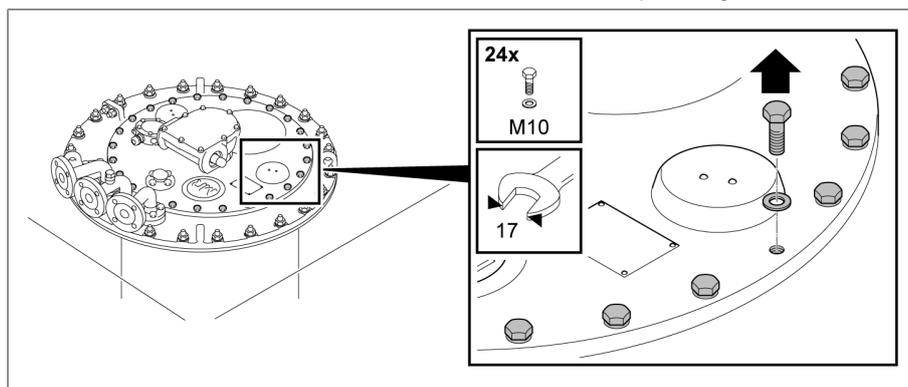


Figure 128: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

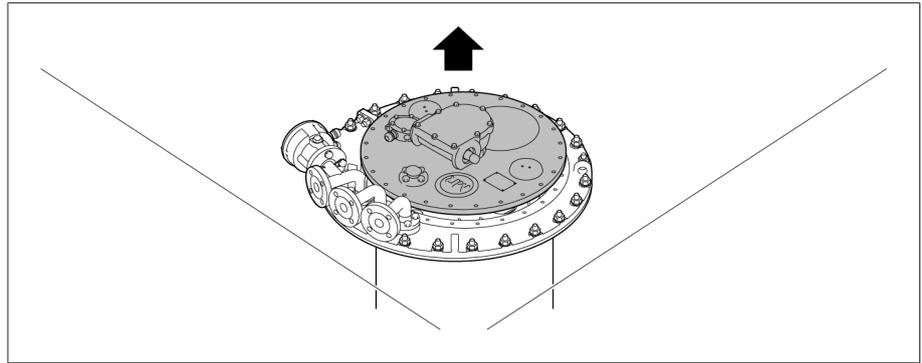


Figure 129: On-load tap-changer head cover

#### 5.3.5.2.3 Opening kerosene drain plug

- > **NOTICE!** Never remove the kerosene drain plug completely. Only unscrew the kerosene drain plug between the oil compartment base and selector gear clockwise until it starts to become hard to open.

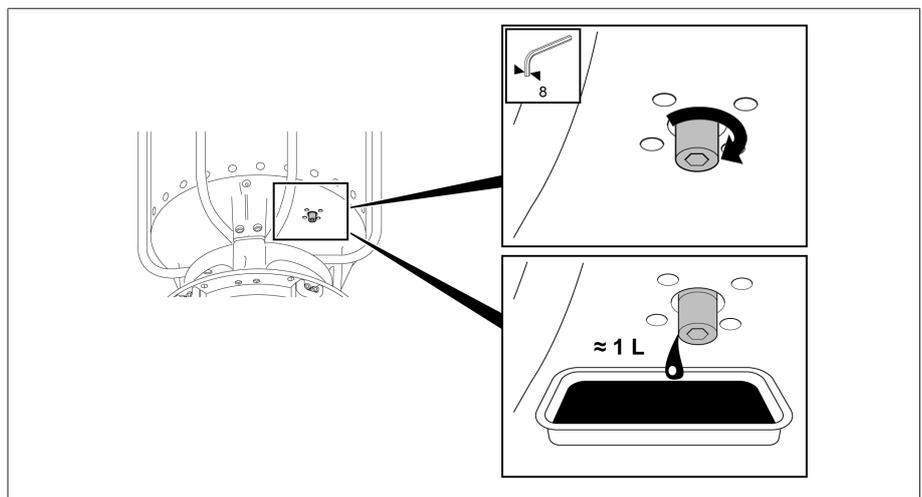


Figure 130: Kerosene drain plug

#### 5.3.5.2.4 Drying the on-load tap-changer

**NOTICE**

##### Damage to the on-load tap-changer head cover and on-load tap-changer accessories.

Both the on-load tap-changer head cover and the on-load tap-changer accessories will become damaged if they are dried.

- > Never dry the on-load tap-changer head cover or the following accessories: motor-drive unit, drive shaft, protective relay, pressure monitoring device, pressure relief device, bevel gear, sensors such as temperature and humidity sensors or pressure sensors, oil filter unit.

1. Supply kerosene vapor at a temperature of around 90°C. Keep this temperature constant for 3 to 4 hours.
2. Increase the kerosene vapor temperature by approx. 10°C/hour to the desired final temperature of max. 125°C at the on-load tap-changer.
3. Vacuum-dry on-load tap-changer at between 105°C and maximum 125°C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.3.5.2.5 Closing kerosene drain plug

- > **NOTICE!** An open kerosene drain plug leads to insulating fluid escaping from the oil compartment and therefore to damage to the on-load tap-changer. Close kerosene drain plug (tightening torque 20 Nm).

### 5.3.5.2.6 Securing on-load tap-changer head cover

#### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- > Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- > Ensure that the o-ring does not become damaged when mounting the cover.
- > Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

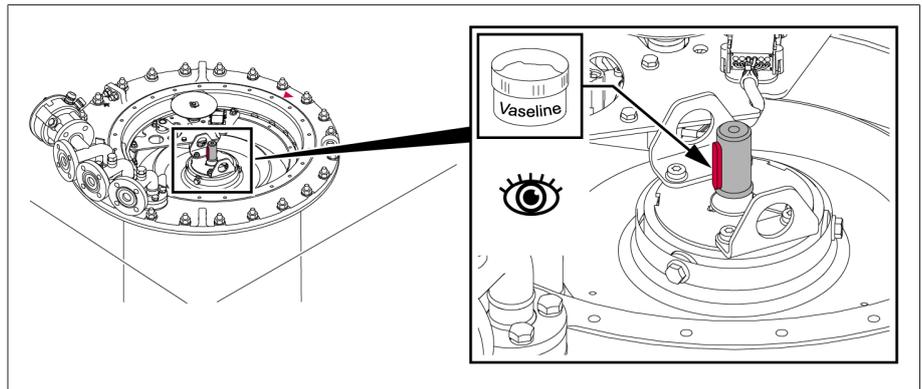


Figure 131: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

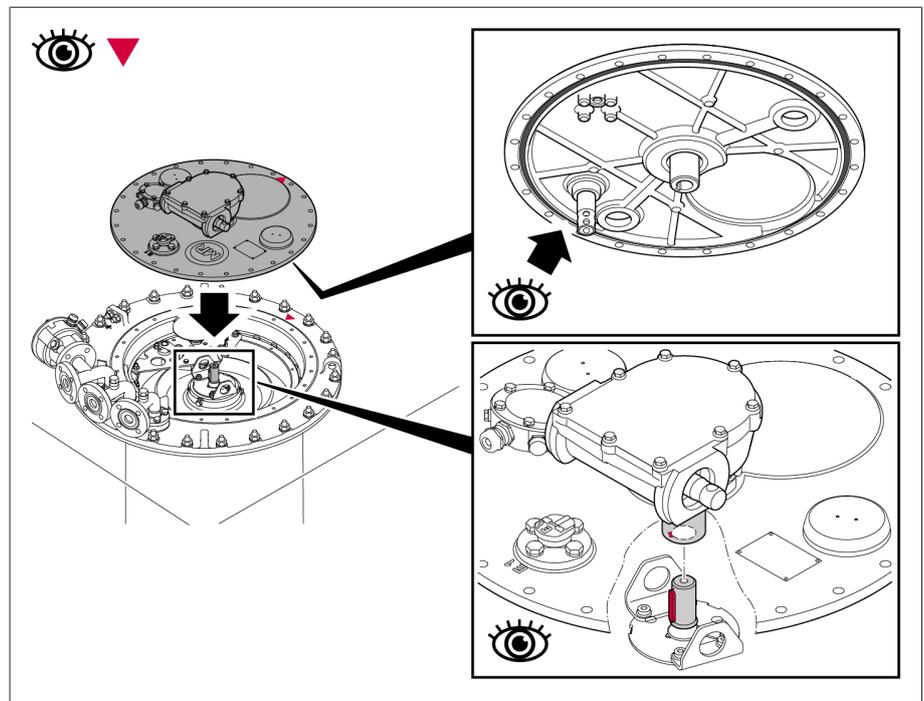


Figure 132: On-load tap-changer head cover with o-ring

- Screw the on-load tap-changer head cover onto the on-load tap-changer head.

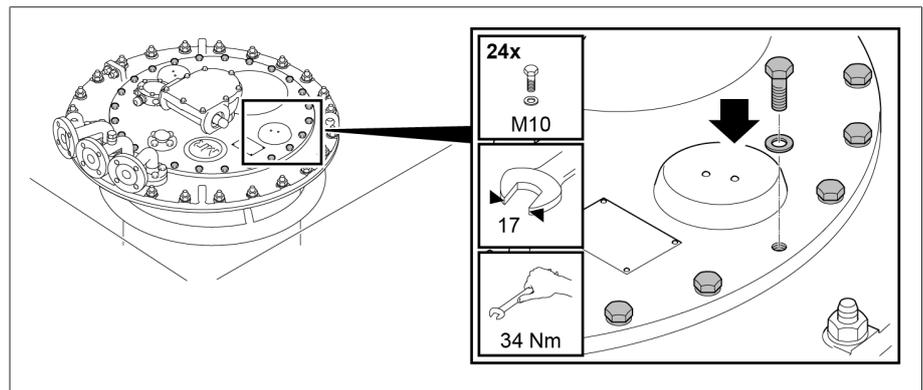


Figure 133: On-load tap-changer head cover

### 5.3.6 Lifting top part of on-load tap-changer head off supporting flange (bottom part)

#### 5.3.6.1 Removing on-load tap-changer head cover

**WARNING**



#### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- > Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- > De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- > Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

**NOTICE**

#### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- > Ensure that parts do not fall into the oil compartment.
- > Check that all small parts are accounted for.

- Ensure that the inspection window is sealed off with the cover.
- Remove temporary fasteners and spacers and slowly lower the on-load tap-changer.

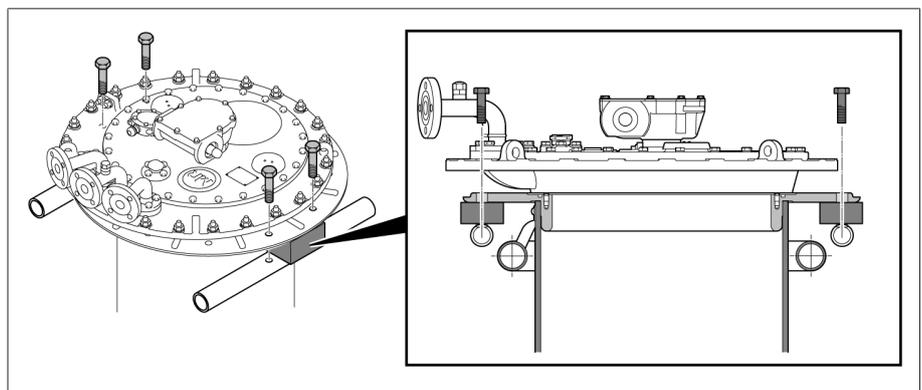


Figure 134: Temporary fasteners and spacers

3. Remove the screws and washers from the on-load tap-changer head cover.

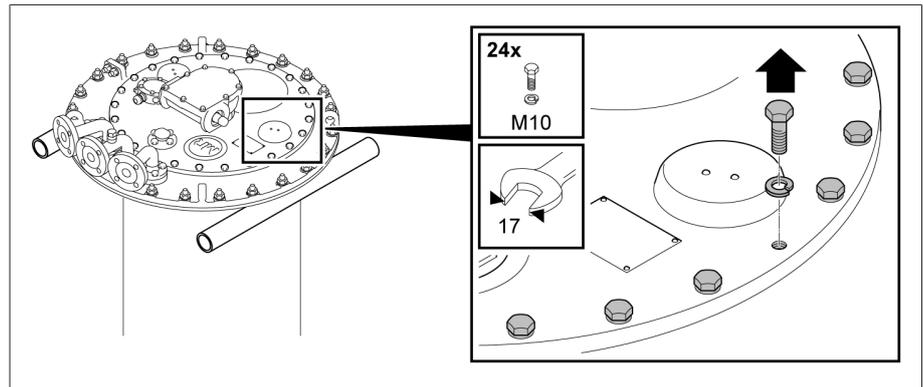


Figure 135: On-load tap-changer head cover

4. Remove on-load tap-changer head cover.

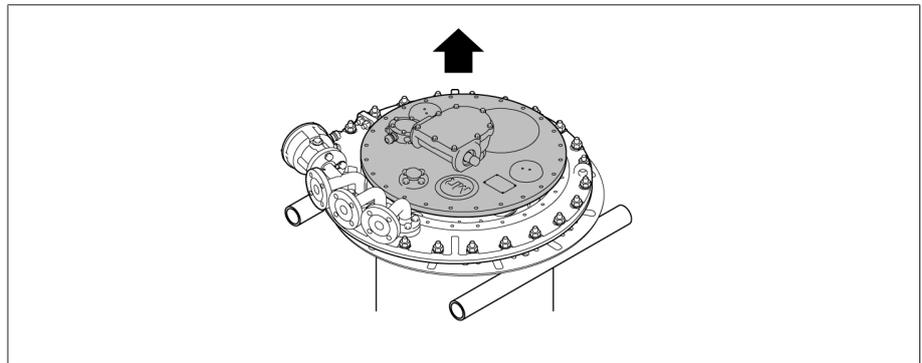


Figure 136: On-load tap-changer head cover

### 5.3.6.2 Removing tap position indicator disk

> Pull spring clip off shaft end and remove tap position indicator disk.

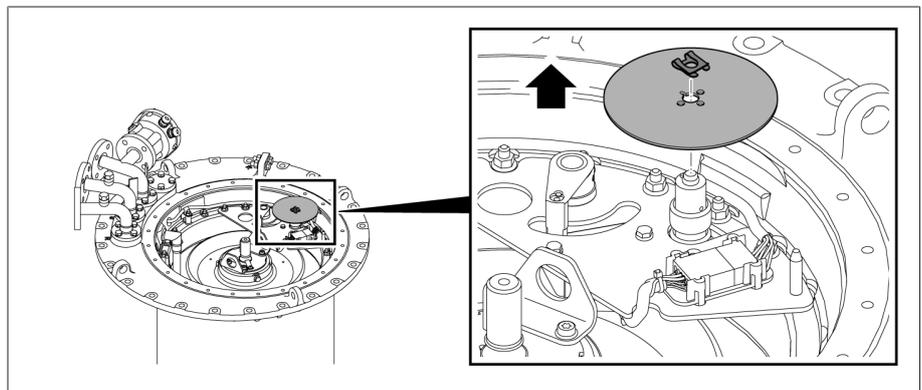


Figure 137: Tap position indicator disk

### 5.3.6.3 Removing the tap-change supervisory device

**⚠ DANGER**



#### Electric shock!

If supply voltage is applied to the tap-change supervisory device, this can result in electric shock.

> Disconnect the tap-change supervisory device from the supply voltage and secure it to prevent it from being switched back on again.

**NOTICE**

#### Damage to the tap-change supervisory device!

Removing the tap-change supervisory device without due care may damage the tap-change supervisory device, thereby resulting in damage to the on-load tap-changer.

> Remove the tap-change supervisory device with care in order not to damage or rip out the connecting leads.

1. Take the tap-change supervisory device plug connector out of the mounting bracket and disconnect it.

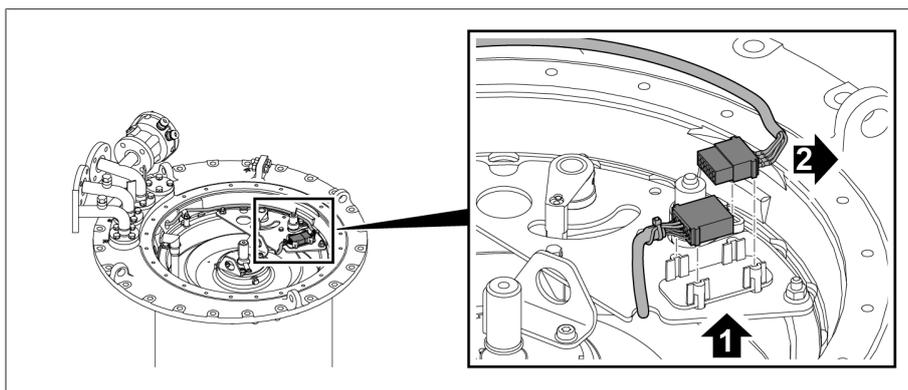


Figure 138: Plug connector

2. Remove nuts and locking elements on the mounting plate.

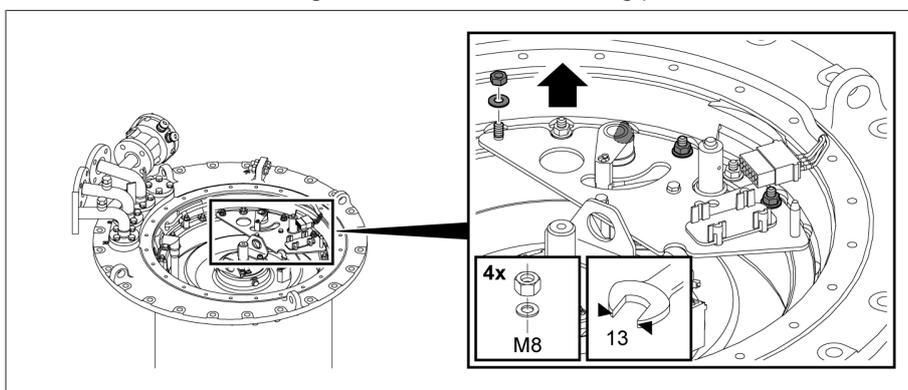


Figure 139: Mounting plate

3. Remove mounting plate with tap-change supervisory device and drive shaft.

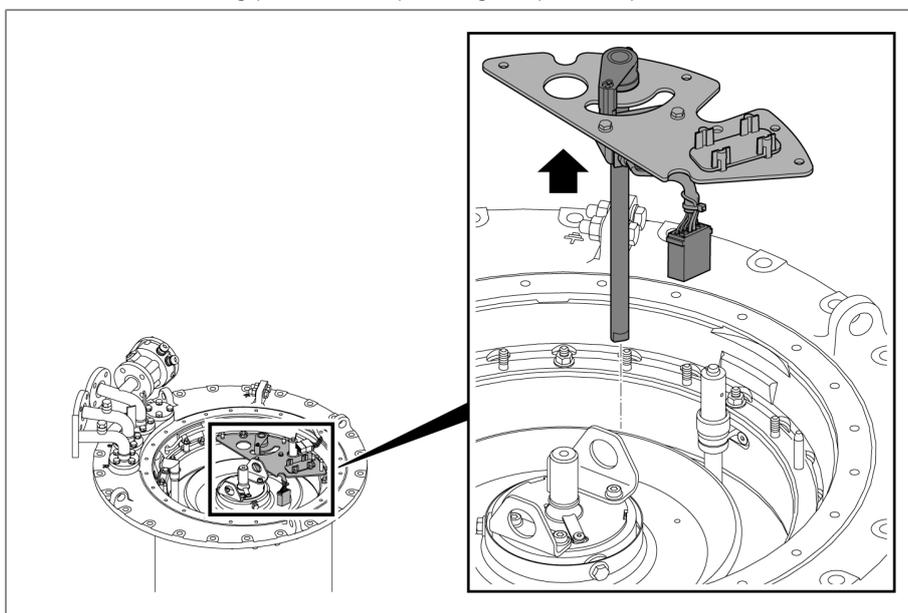


Figure 140: Mounting plate with tap-change supervisory device and drive shaft

4. Lift the lead of the tap-change supervisory device off the spacer bolt.

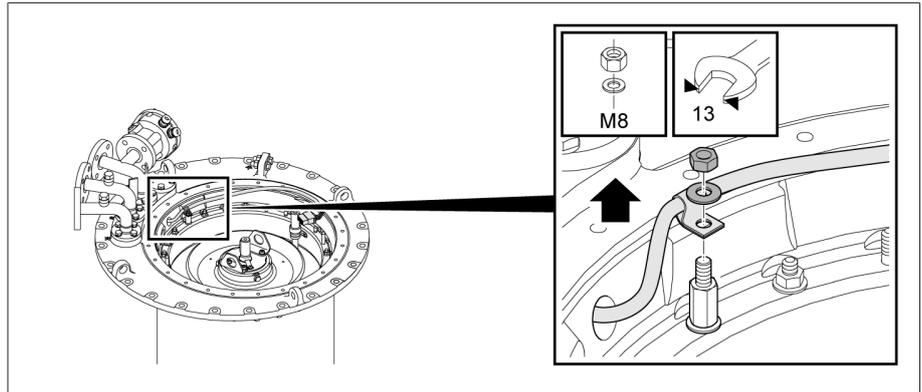


Figure 141: Spacer bolt and lead of the tap-change supervisory device

5. Swivel lead of the tap-change supervisory device out of the on-load tap-changer head.

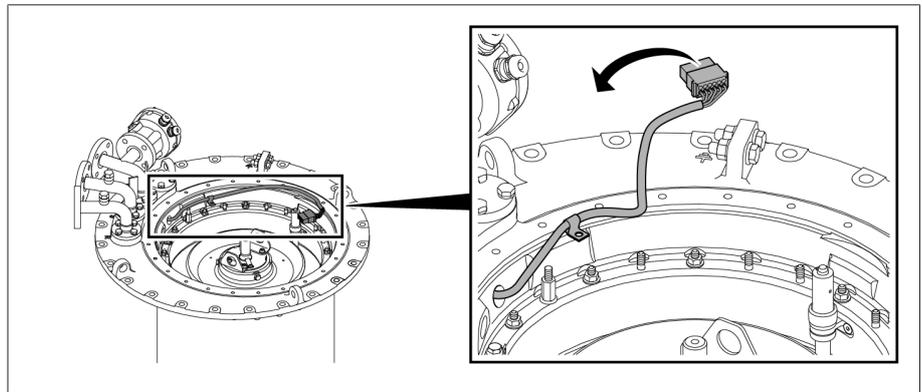


Figure 142: Lead of tap-change supervisory device

6. Remove spacer bolt with locking element.

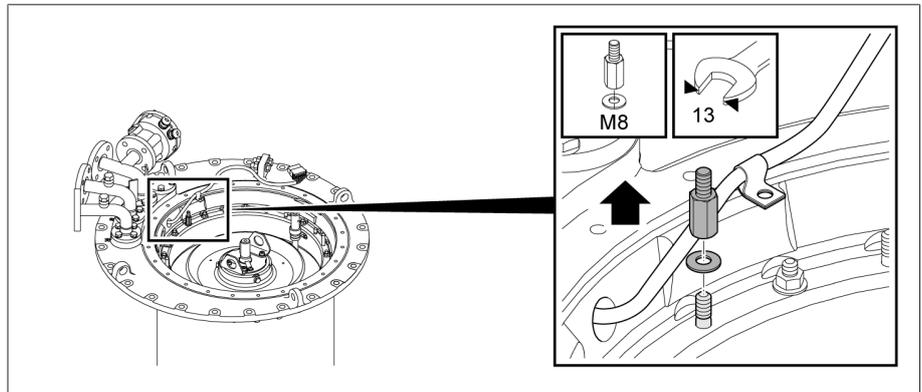


Figure 143: Spacer bolt

#### 5.3.6.4 Removing the oil suction pipe

1. Remove cable ties from the oil suction pipe.

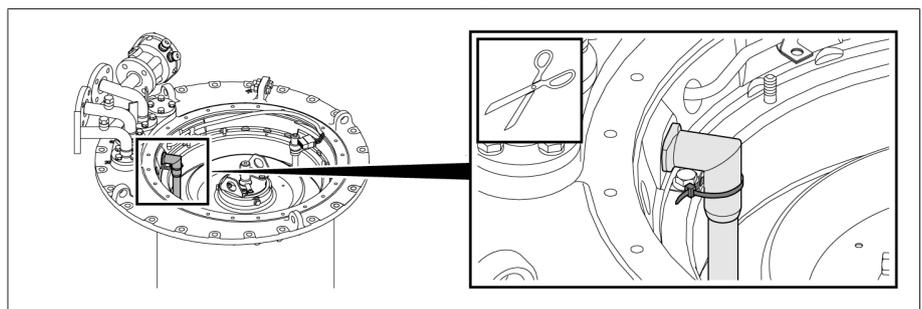


Figure 144: Oil suction pipe

2. Pull the oil suction pipe out of the on-load tap-changer head.

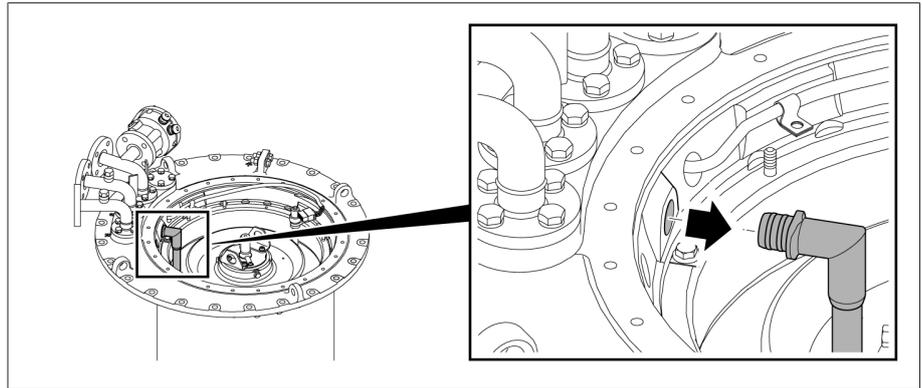


Figure 145: Oil suction pipe

3. Remove the mounting bracket.

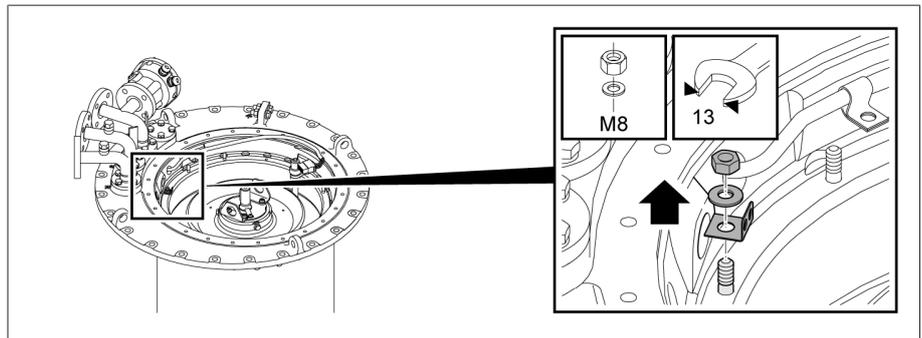


Figure 146: Mounting bracket

### 5.3.6.5 Lifting top part of on-load tap-changer head off supporting flange

1. Remove nuts and locking elements between top part of on-load tap-changer head and supporting flange.

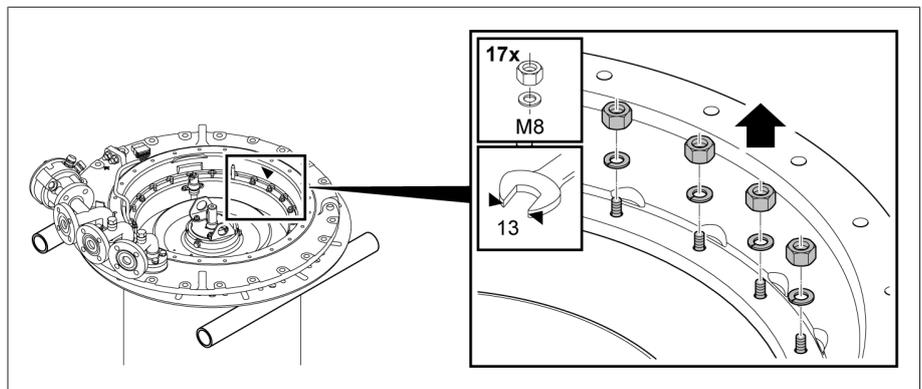


Figure 147: Top part of on-load tap-changer head with nuts

2. Lift top part of on-load tap-changer head off supporting flange.

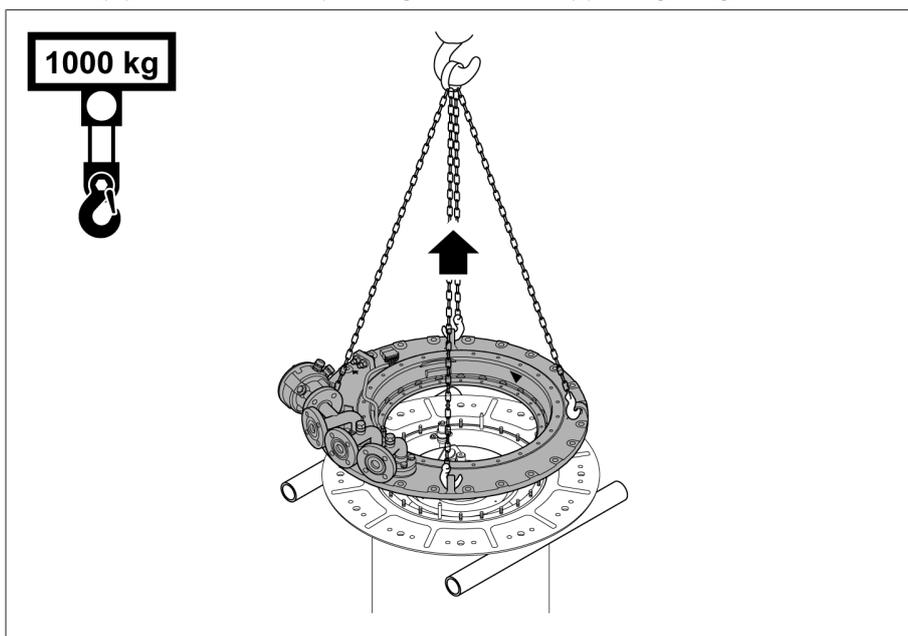


Figure 148: Top part of on-load tap-changer head

### 5.3.7 Attaching the bell-type tank and connecting the on-load tap-changer to the top part of the on-load tap-changer head

#### 5.3.7.1 Attaching bell-type tank

1. Clean sealing surface of supporting flange, place o-ring on supporting flange.

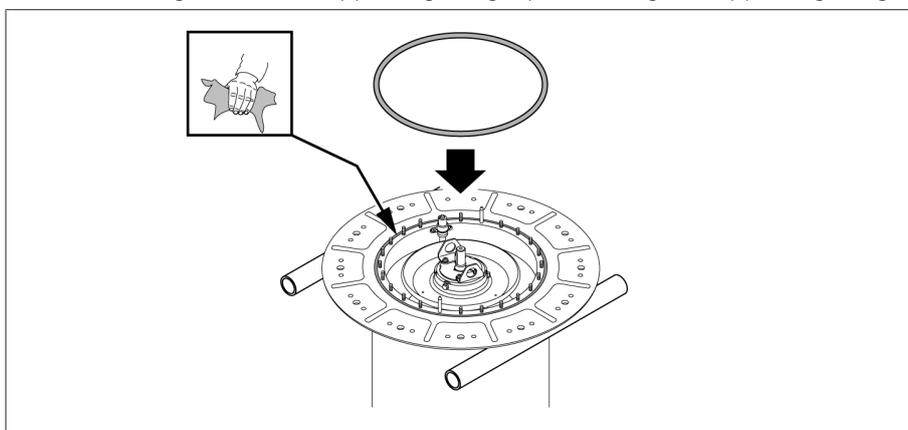


Figure 149: Supporting flange with o-ring

2. Lift the bell-type tank over the active part of the transformer.

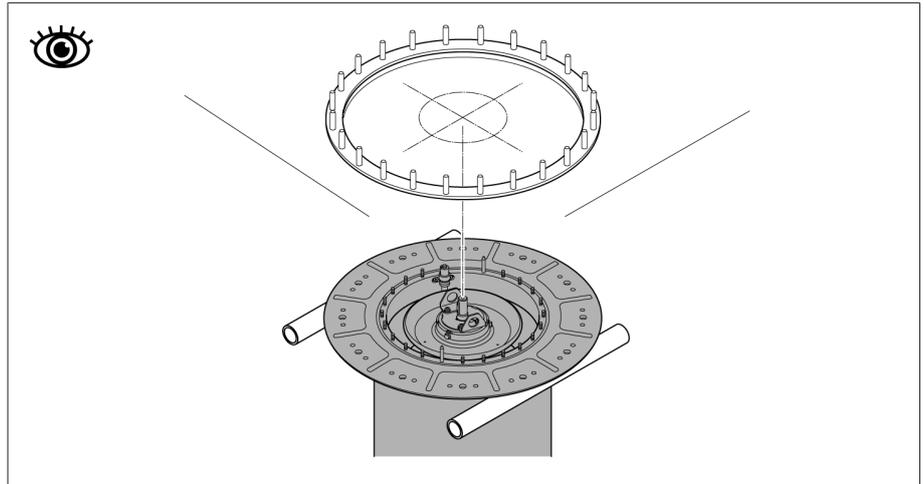


Figure 150: Bell-type tank

### 5.3.7.2 Positioning top part of on-load tap-changer head on bell-type tank

1. **NOTICE!** Unsuitable gaskets may lead to oil escaping and therefore to damage to the on-load tap-changer. Place a gasket **1** suitable for the insulating fluid used on the mounting flange **2**. Clean the sealing surfaces on the mounting flange and on-load tap-changer head.

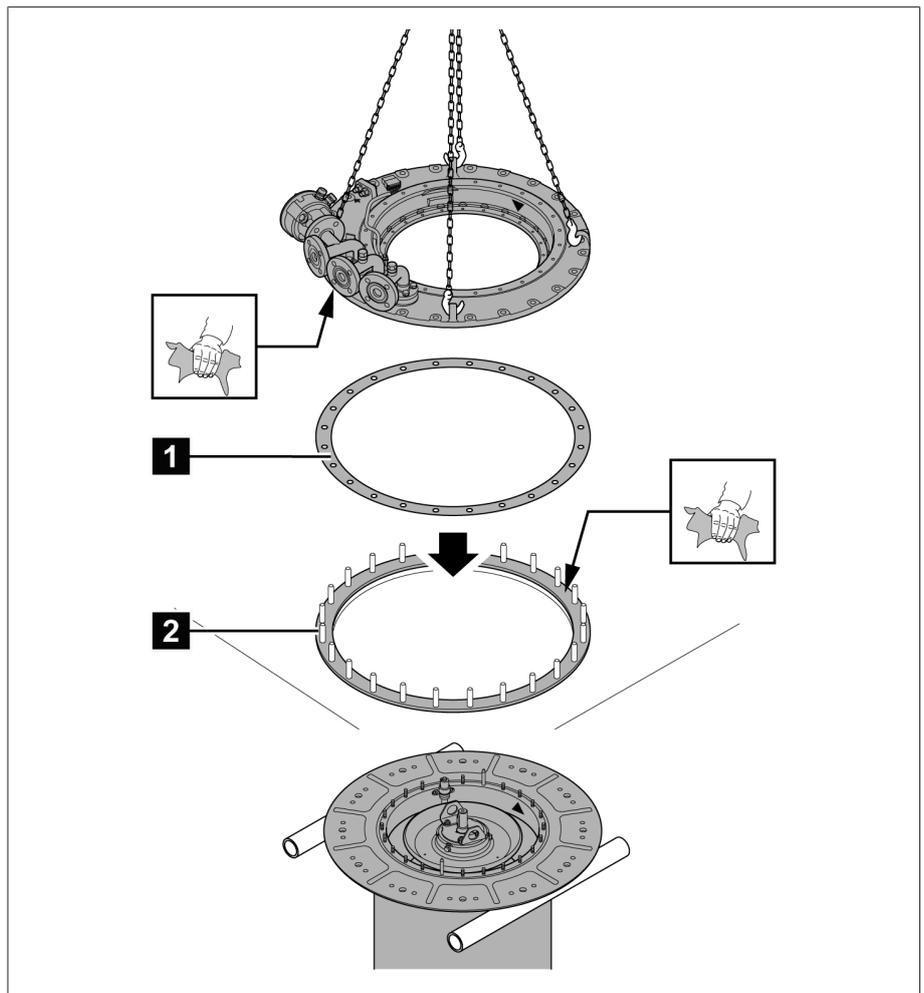


Figure 151: Mounting flange with gasket

2. Lower and position the top part of the on-load tap-changer head on mounting flange so that the triangular markings, pins and mounting holes on the top part and bottom part of the on-load tap-changer head are aligned.

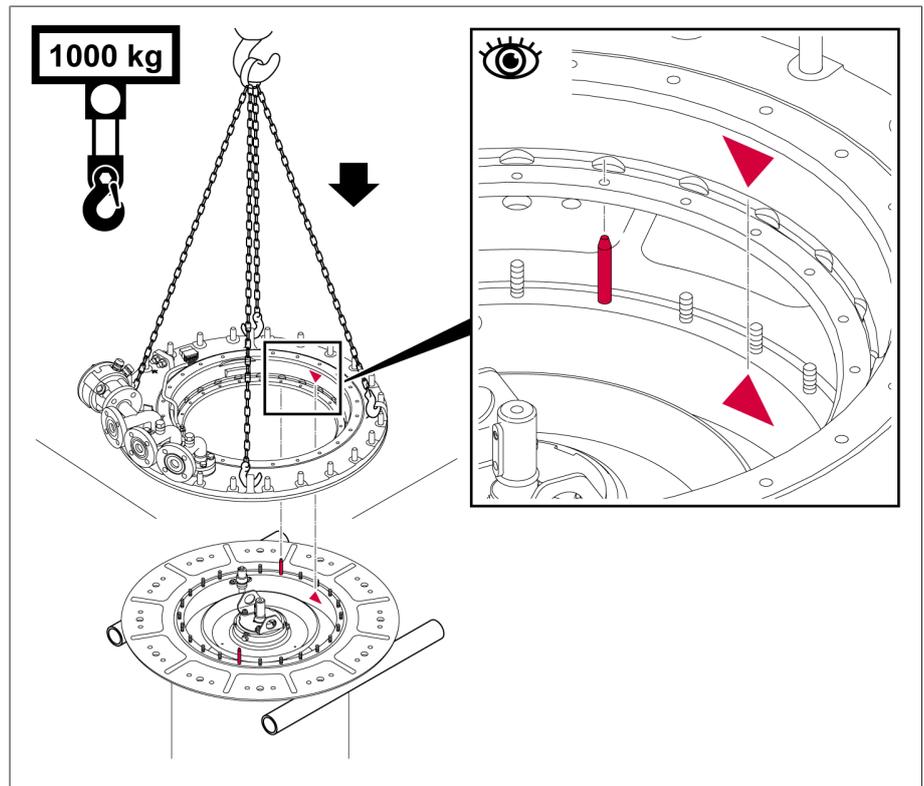


Figure 152: Markings and aligning pins

### 5.3.7.3 Connecting on-load tap-changer to top part of on-load tap-changer head

#### NOTICE

**Incorrectly lifting the on-load tap-changer will damage it!**

If the connection screws of the supporting flange are used to lift the on-load tap-changer, the screws may be damaged, which makes it impossible to properly screw the on-load tap-changer and the on-load tap-changer head together!

- > Always lift the on-load tap-changer with the specified lifting traverse, and never with the connection screws of the supporting flange.

1. **NOTICE!** Damage to the on-load tap changer due to escaping insulating fluid. Ensure that the seal in the oil compartment is clean, intact, and not twisted.
2. Carefully insert the lifting device into the oil compartment with the claws turned in.

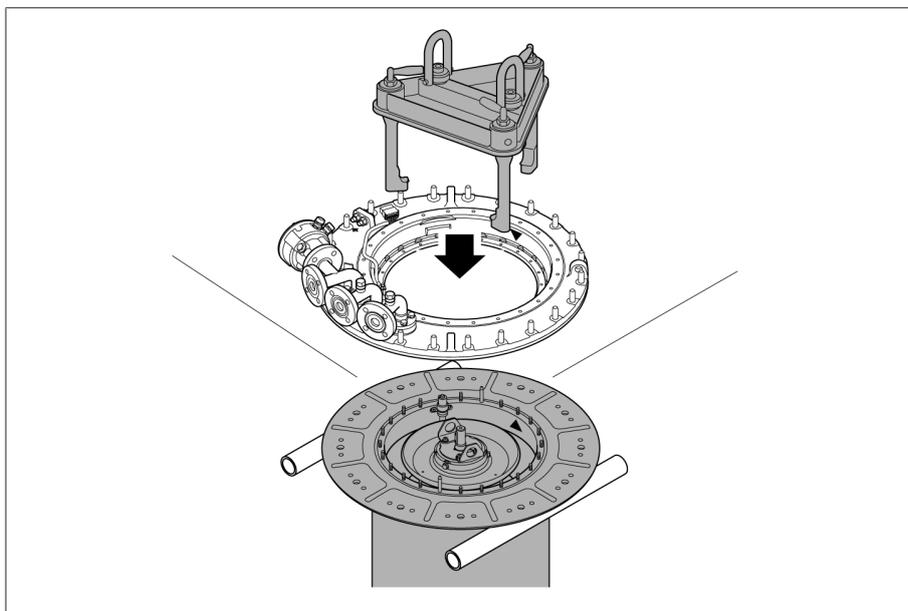


Figure 153: Lifting device

3. **NOTICE!** Inaccurate alignment of on-load tap-changer head to the supporting flange will damage the on-load tap-changer when it is lifted. Swing claws of the lifting device outwards; use the lifting device to lift the oil compartment. Ensure that the triangular markings are aligned and that all supporting flange stud bolts go easily through the mounting holes of the on-load tap-changer head.

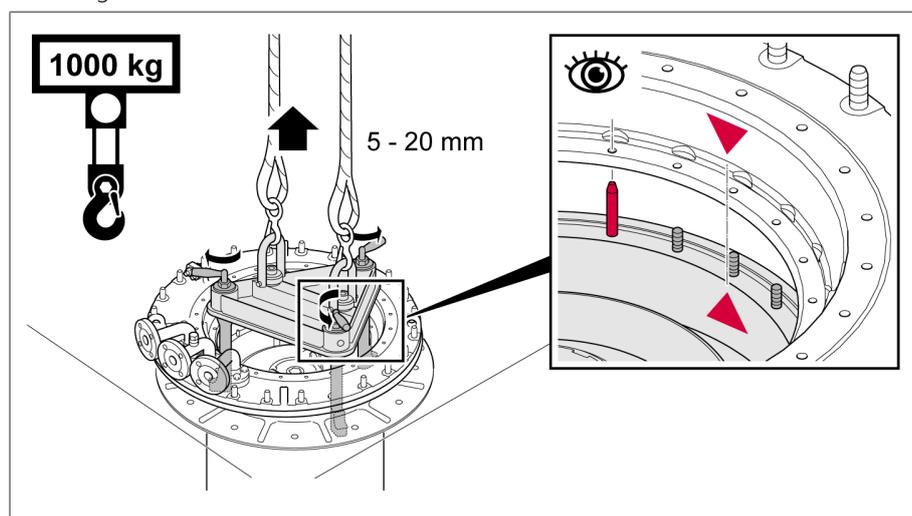


Figure 154: Lifting the on-load tap-changer



When fitting the top part and bottom part of the on-load tap-changer head together, leave the pins for the mounting plate of the tap-change supervisory device, the pins for the mounting bracket of the oil suction pipe and the spacer bolts for the lead of the tap-change supervisory device free.

1. Screw the top part of the on-load tap-changer head to the bottom part using the nuts and locking elements.

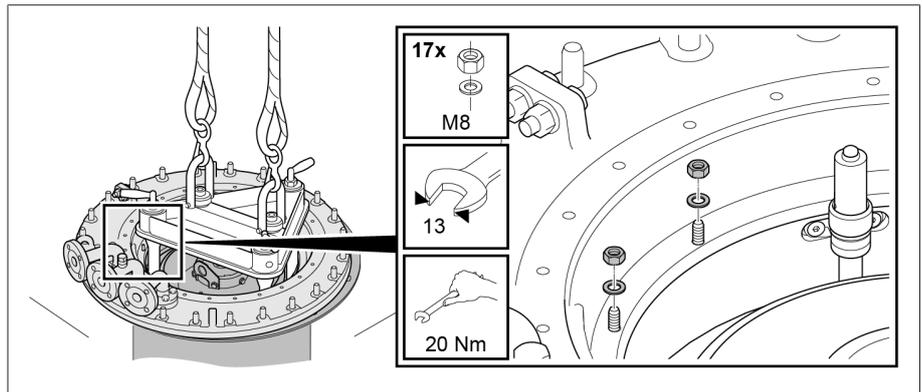


Figure 155: Screwing the top part of the on-load tap-changer head to the bottom part

2. Remove the lifting device with the claws turned in.

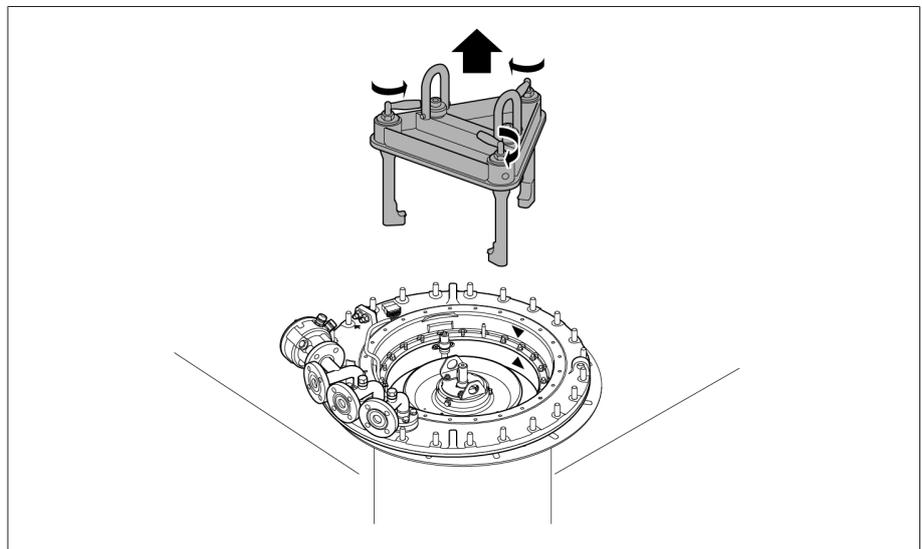


Figure 156: Removing the lifting device

3. Screw the on-load tap-changer head to the mounting flange.

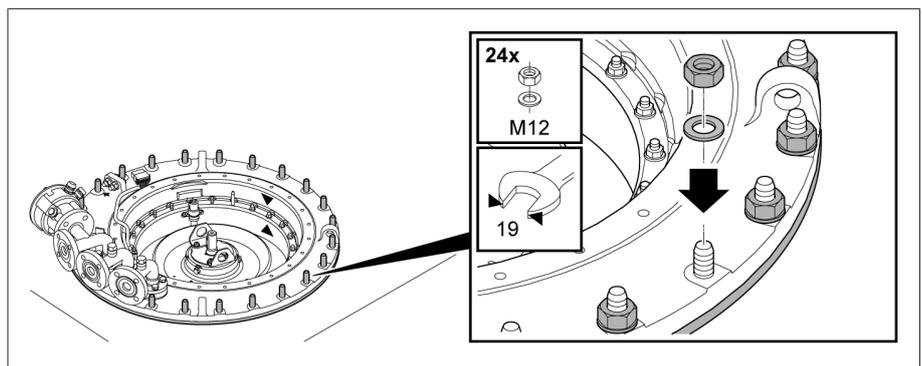


Figure 157: Screwing the on-load tap-changer head to the mounting flange

### 5.3.7.4 Inserting oil suction pipe

1. Fasten the mounting bracket.

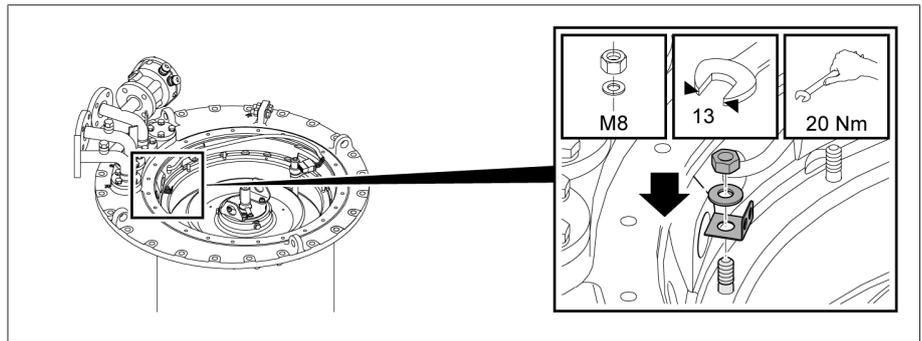


Figure 158: Mounting bracket

2. Insert oil suction pipe into on-load tap-changer head.

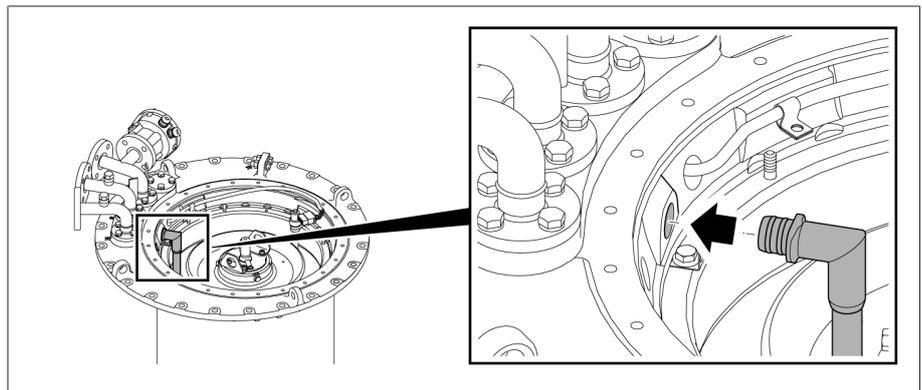


Figure 159: Inserting oil suction pipe

3. Fasten oil suction pipe to mounting bracket with cable tie provided. Turn the cable tie so the closure is facing in toward the mounting bracket.

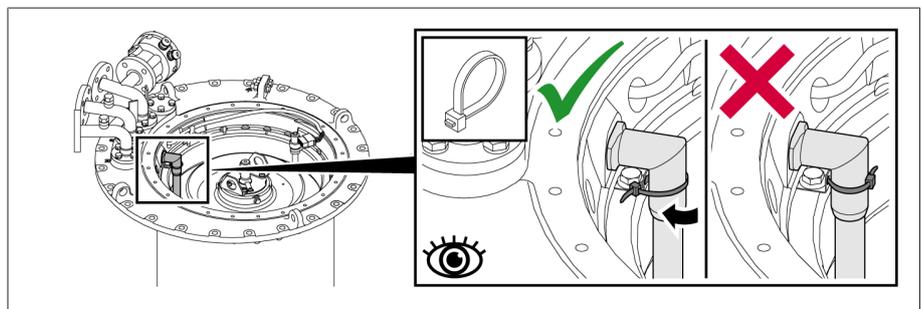


Figure 160: Cable tie

### 5.3.7.5 Inserting the tap-change supervisory device

1. Insert mounting plate with tap-change supervisory device and drive shaft.

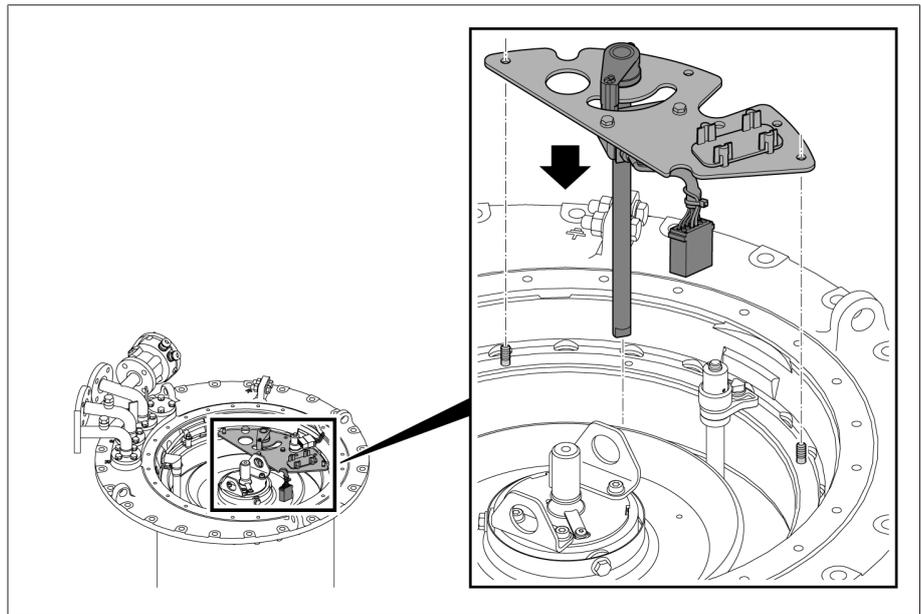


Figure 161: Mounting plate with tap-change supervisory device and drive shaft

2. Check that drive shaft is seated correctly in the plug connector.

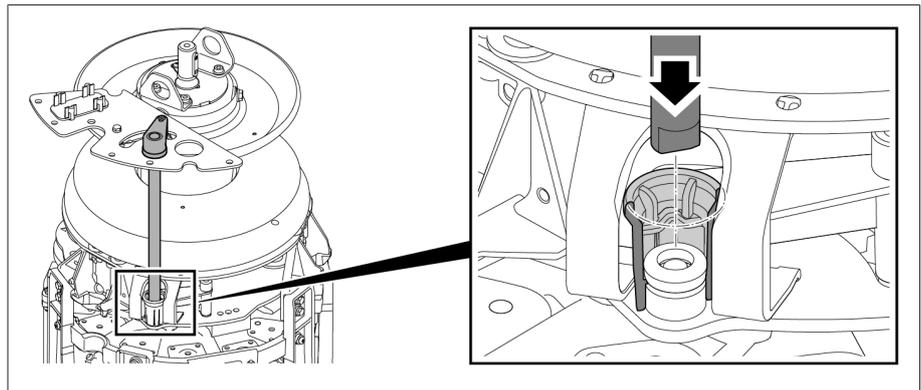


Figure 162: Drive shaft and plug connector

3. Attach mounting plate.

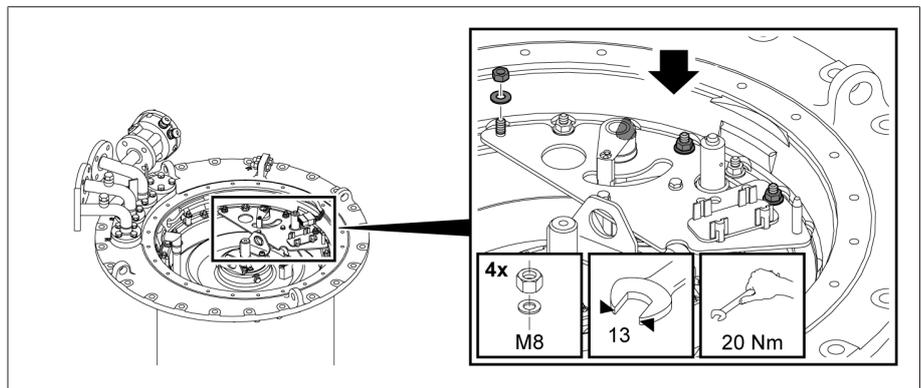


Figure 163: Mounting plate

4. Attach spacer bolt for fastening the lead of the tap-change supervisory device.

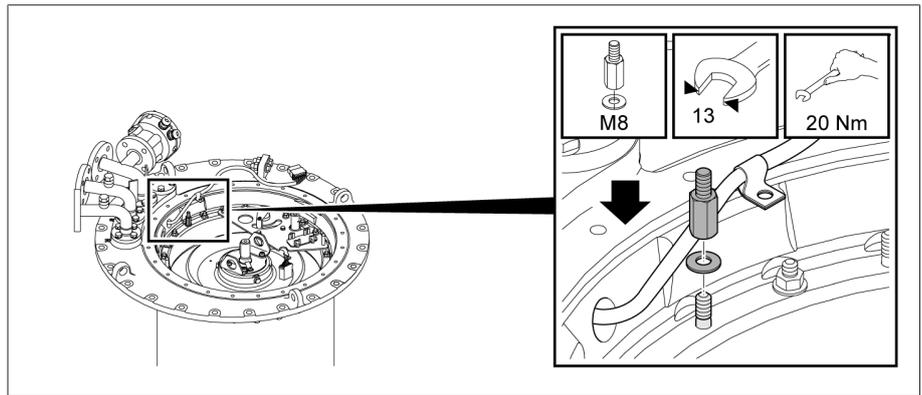


Figure 164: Spacer bolt

5. Fasten lead of tap-change supervisory device to spacer bolt.

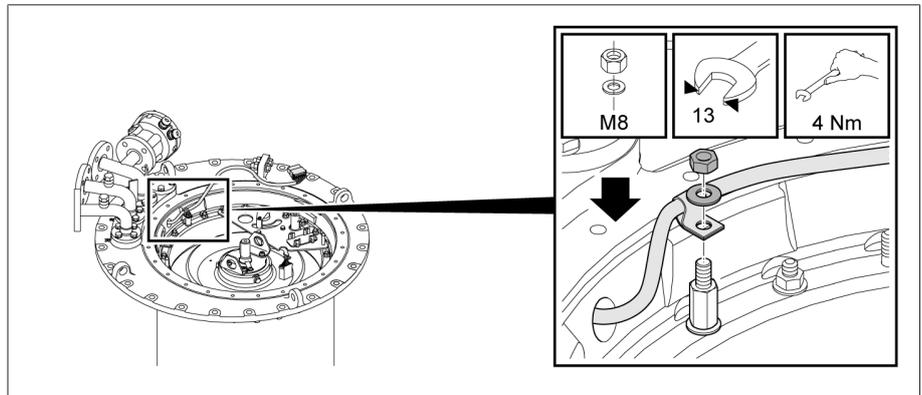


Figure 165: Spacer bolt

6. Connect plug connector outside its bracket.

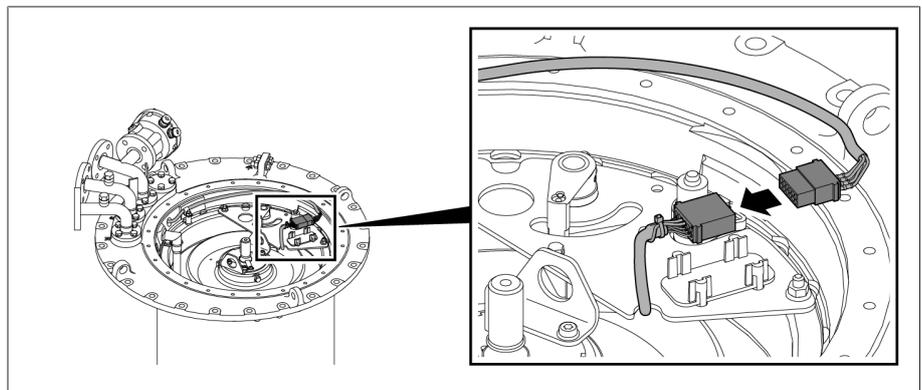


Figure 166: Plug connector

7. Insert plug connector into the bracket.

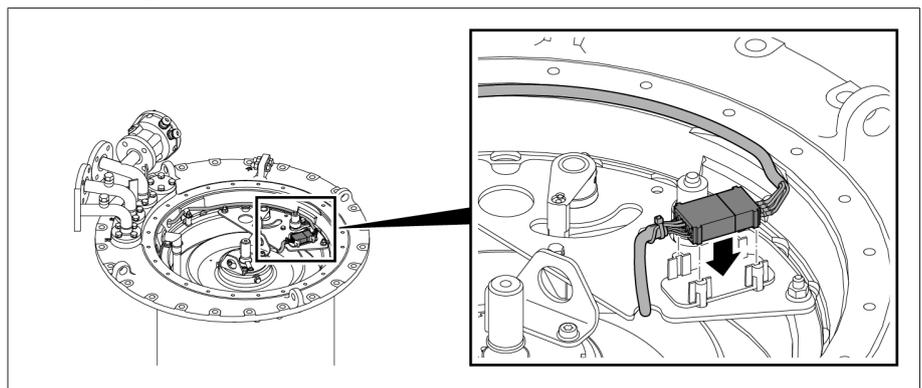


Figure 167: Plug connector in bracket

### 5.3.7.6 Inserting tap position indicator disk

Due to the coupling pin, the tap position indicator disk can only be installed when in the correct position.

- Place tap position indicator disk on indicator drive shaft, slide spring clip on to shaft end.

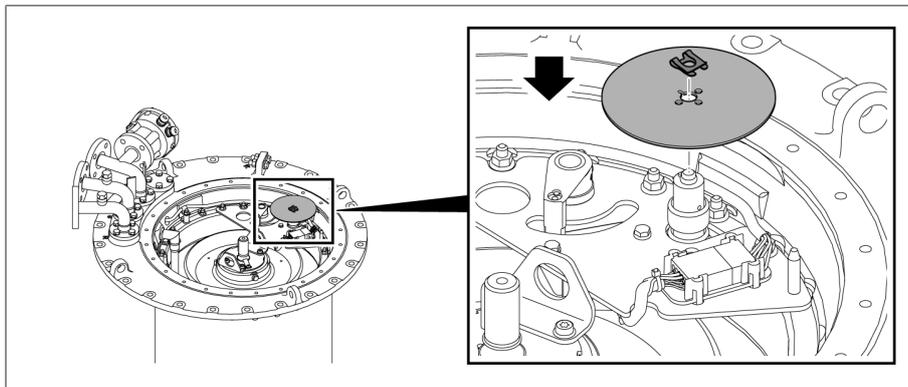


Figure 168: Tap position indicator disk

### 5.3.7.7 Securing on-load tap-changer head cover

#### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- Ensure that the o-ring does not become damaged when mounting the cover.
- Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

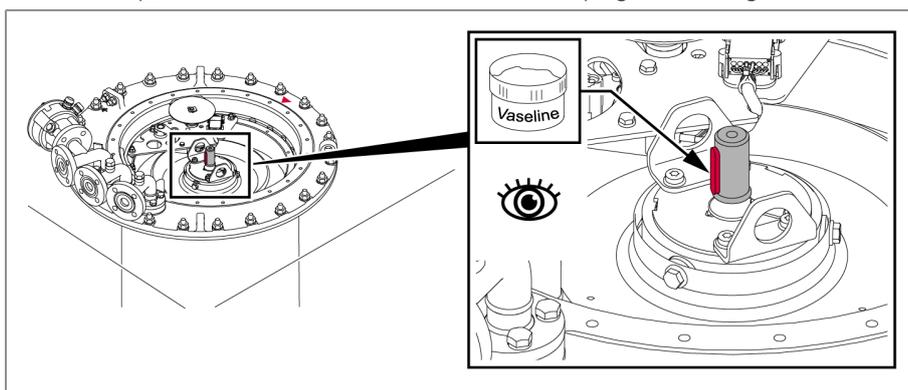


Figure 169: Feather key

- Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

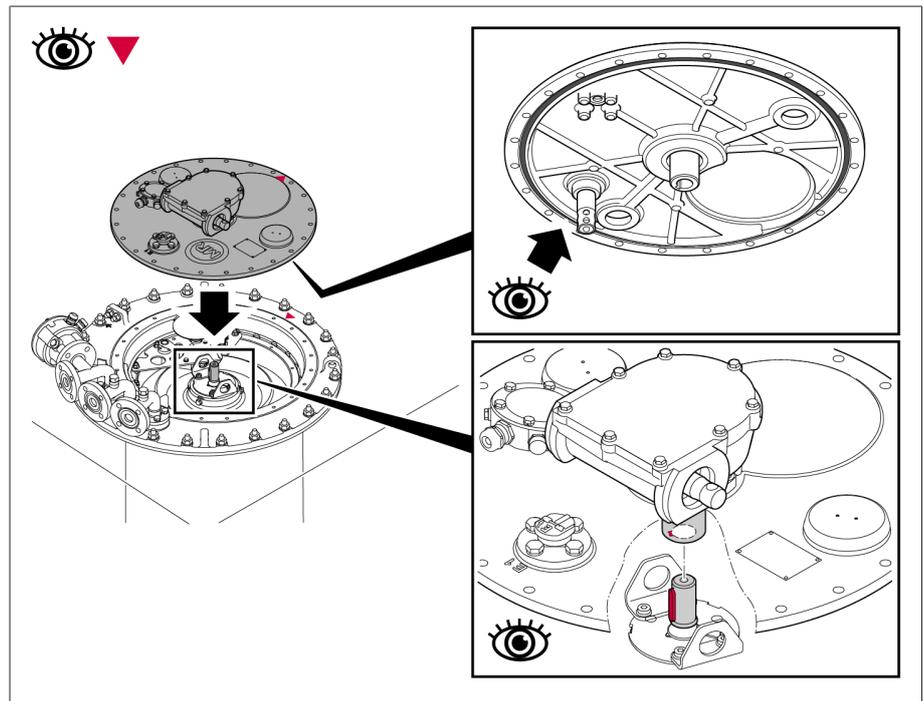


Figure 170: On-load tap-changer head cover with o-ring

- Screw the on-load tap-changer head cover onto the on-load tap-changer head.

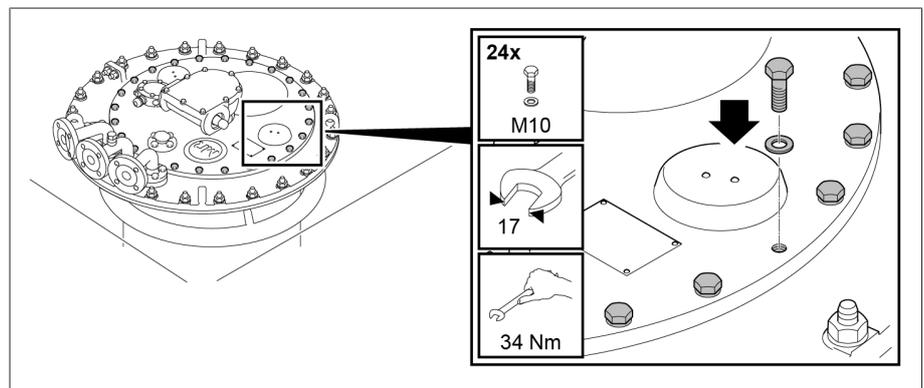


Figure 171: On-load tap-changer head cover

### 5.3.8 Drying on-load tap-changer in transformer tank

Dry on-load tap-changer in accordance with the following instructions to ensure the dielectric values assured by MR on the on-load tap-changer.

If you want to dry the on-load tap-changer in the transformer tank, fully assemble the transformer first and then undertake drying.

If drying in the transformer tank, the following methods are possible:

- Vacuum-drying
- Vapor-phase drying

As an alternative to drying the on-load tap-changer in the transformer tank, it can also be dried in an autoclave.

### 5.3.8.1 Vacuum-drying in the transformer tank



The on-load tap-changer head cover remains closed during the entire drying process.

1. Establish a connecting lead between either connections E2 and Q or connections E2 and R on the on-load tap-changer head.
2. Seal off unused pipe connections with a suitable blank cover.

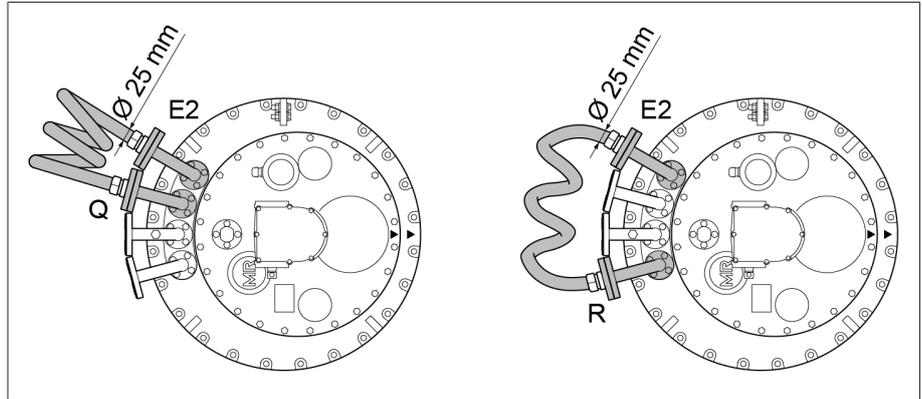


Figure 172: Connecting lead

### Vacuum-drying in the transformer tank

1. Heat up the on-load tap-changer in air at atmospheric pressure with a temperature increase of approximately 10 °C/h to a final temperature of maximum 110 °C.
2. Pre-dry the on-load tap-changer in circulating air at a maximum temperature of 110 °C for a period of at least 20 hours.
3. Vacuum-dry on-load tap-changer at between 105 °C and maximum 125 °C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.3.10, Page 122].

### 5.3.8.2 Vapor-phase drying in the transformer tank

If you have opened the kerosene drain plug already (e.g. after the transformer ratio test), you can begin the drying [► Section 5.3.8.2.4, Page 120] right away.

Otherwise, you first have to open the kerosene drain plug before you can begin the drying.

#### 5.3.8.2.1 Removing diverter switch insert

##### 5.3.8.2.1.1 Moving on-load tap-changer to adjustment position

- Move the on-load tap-changer to the adjustment position. The adjustment position is indicated in the on-load tap-changer connection diagram included in delivery.

### 5.3.8.2.1.2 Removing on-load tap-changer head cover

#### ⚠ WARNING



#### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- > Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- > De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- > Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

#### NOTICE

#### Damage to the on-load tap-changer!

Small parts in the oil compartment may block the diverter switch insert, thereby damaging the on-load tap-changer.

- > Ensure that parts do not fall into the oil compartment.
- > Check that all small parts are accounted for.

1. Ensure that the inspection window is sealed off with the cover.
2. Remove the screws and washers from the on-load tap-changer head cover.

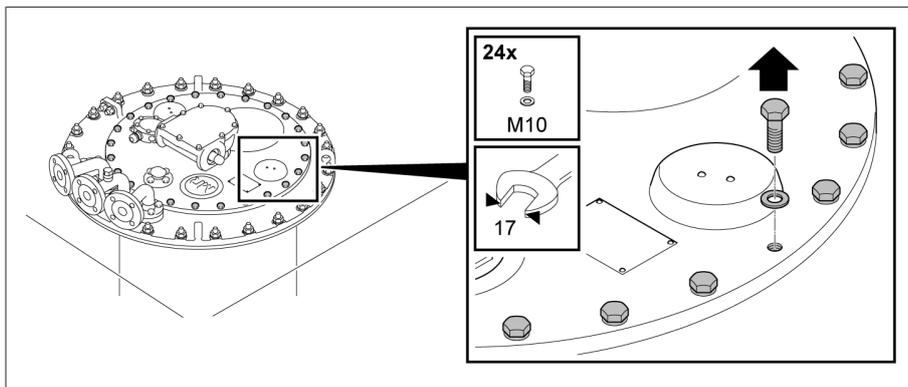


Figure 173: On-load tap-changer head cover

3. Remove on-load tap-changer head cover.

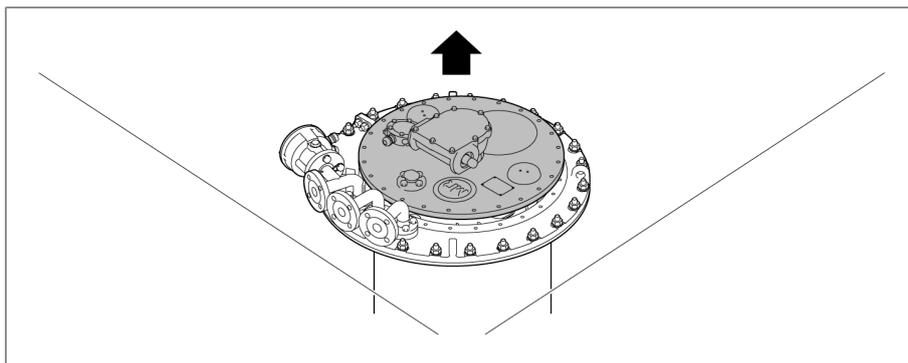


Figure 174: On-load tap-changer head cover

### 5.3.8.2.1.3 Removing tap position indicator disk

> Pull spring clip off shaft end and remove tap position indicator disk.

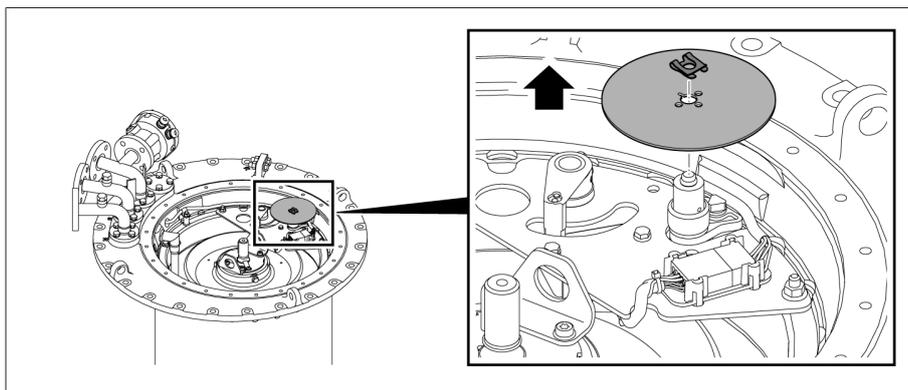


Figure 175: Tap position indicator disk

### 5.3.8.2.1.4 Removing the tap-change supervisory device

#### NOTICE

#### Damage to the tap-change supervisory device!

Removing the tap-change supervisory device without due care may damage the tap-change supervisory device, thereby resulting in damage to the on-load tap-changer.

> Remove the tap-change supervisory device with care in order not to damage or rip out the connecting leads.

1. Take the tap-change supervisory device plug connector out of the mounting bracket and disconnect it.

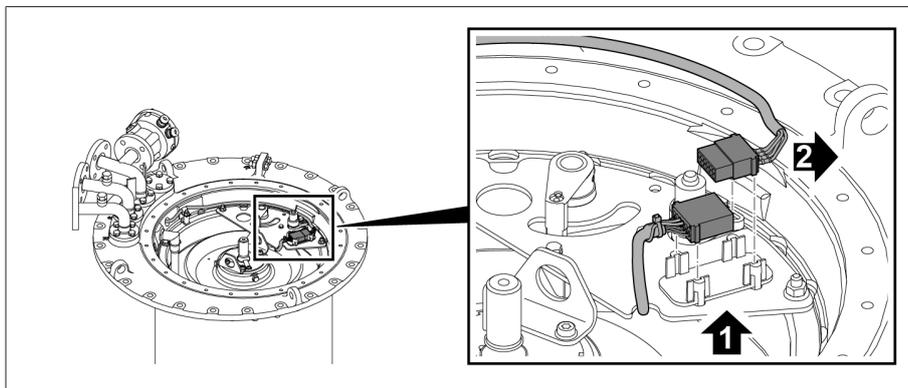


Figure 176: Plug connector

2. Remove nuts and locking elements on the mounting plate.

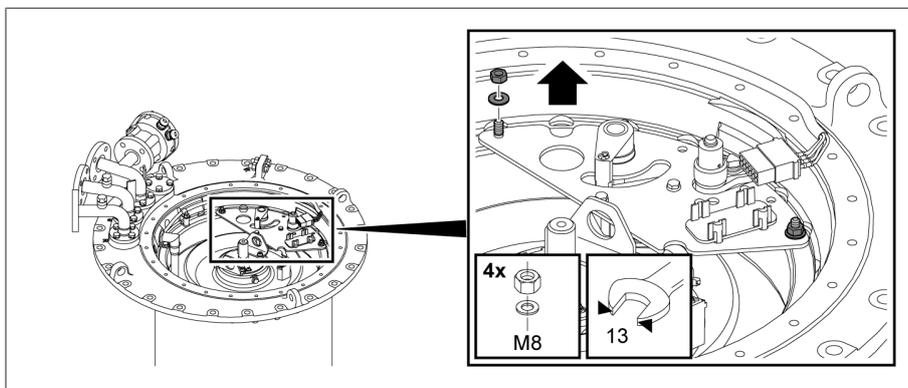


Figure 177: Mounting plate

3. Remove mounting plate with tap-change supervisory device and drive shaft.

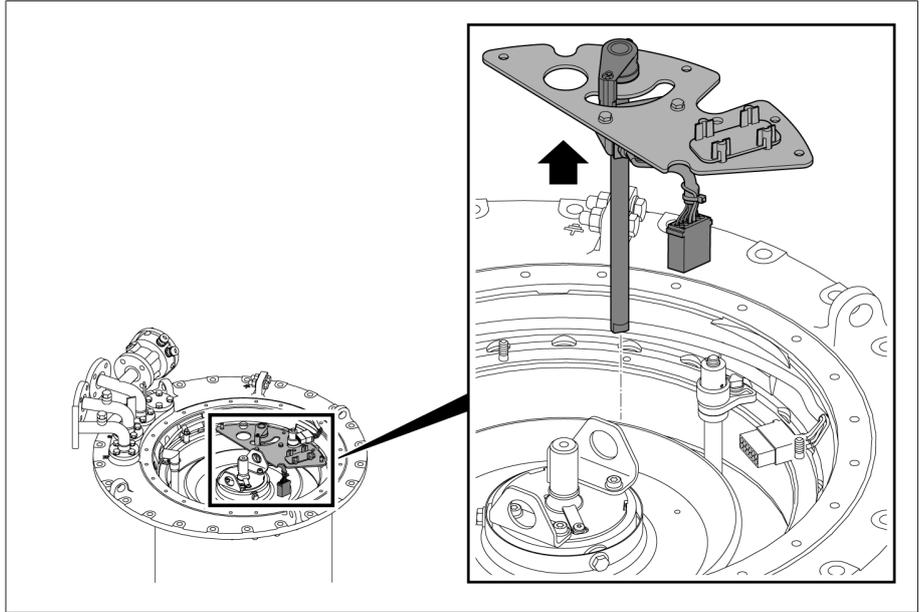


Figure 178: Mounting plate with tap-change supervisory device and drive shaft

4. Swivel lead of the tap-change supervisory device out of the on-load tap-changer head in the direction of the arrow.

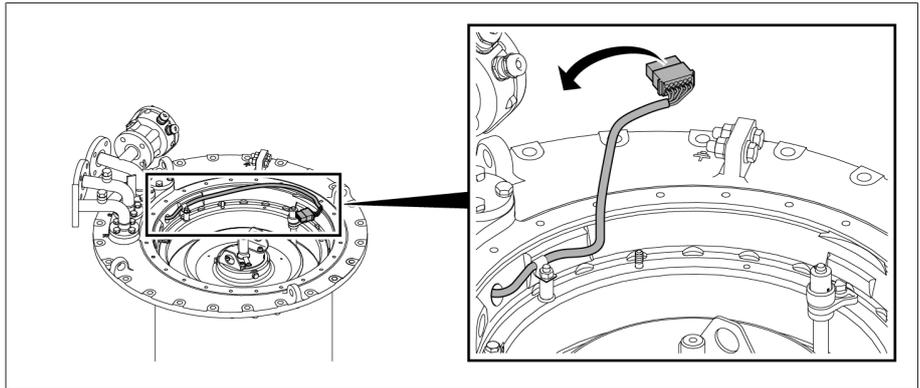


Figure 179: Lead of tap-change supervisory device

### 5.3.8.2.1.5 Lifting out diverter switch insert

1. **⚠ CAUTION!** Danger of lacerations when turning the coupling tube without an operating wrench. If the markings on the coupling flange and on-load tap-changer head are not aligned, turn the coupling tube so that the markings align, either by directly turning the shielding ring while wearing gloves or by using an operating wrench.

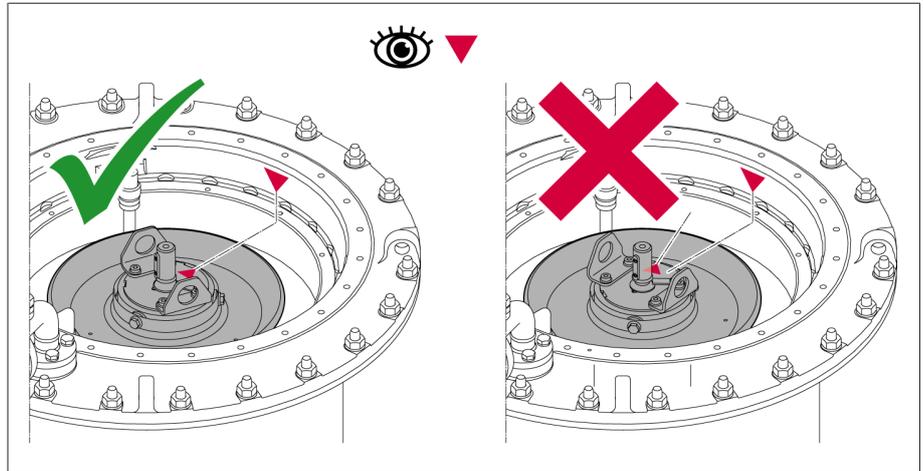


Figure 180: Aligning the coupling tube

2. Insert the lifting gear in the eyebolts of the coupling tube and position vertically above the diverter switch insert.
3. A weight load of up to 200 kg can occur immediately when lifting out the diverter switch insert. Lift the diverter switch insert slowly and vertically out of oil compartment, ensuring that the protective ring on the indicator drive shaft does not become detached when doing so.

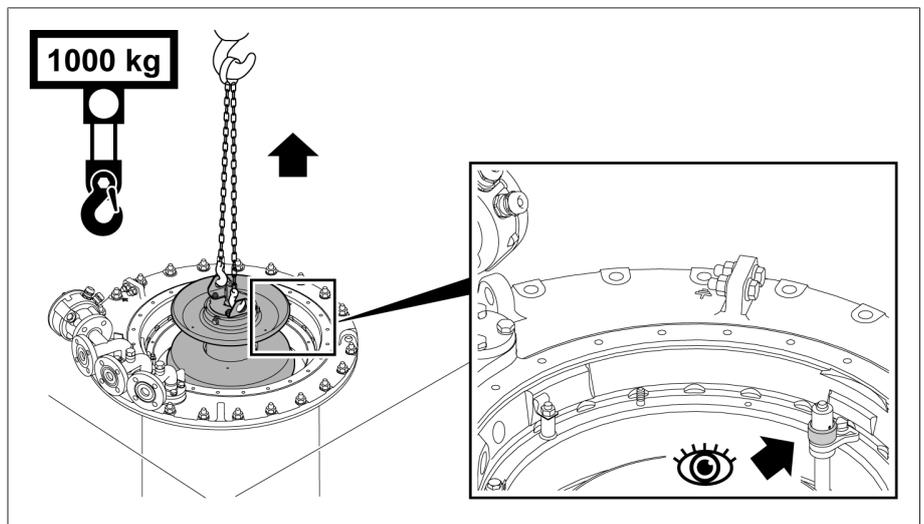


Figure 181: Diverter switch insert

4. **⚠ CAUTION!** An unstably positioned diverter switch insert may tip, resulting in injuries or property damage. Place the diverter switch insert on a level surface and secure it against tipping. Do not operate the diverter switch insert or change the position of the selector coupling when the diverter switch insert is not installed.

### 5.3.8.2.2 Opening kerosene drain plug

- > **NOTICE!** Unscrew kerosene drain plug with extended socket wrench counter-clockwise until it starts to offer resistance to turning. Never unscrew the kerosene drain plug all the way.

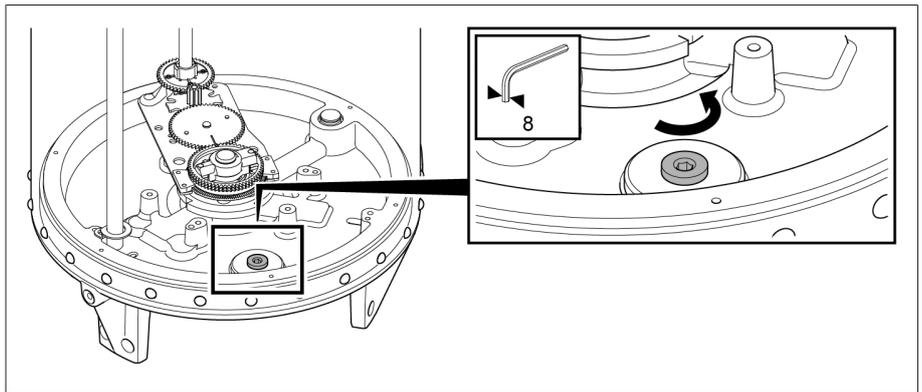


Figure 182: Kerosene drain plug

### 5.3.8.2.3 Inserting diverter switch insert

#### 5.3.8.2.3.1 Inserting diverter switch insert

1. To fit the diverter switch insert, ensure that the selector coupling is in the adjustment position.

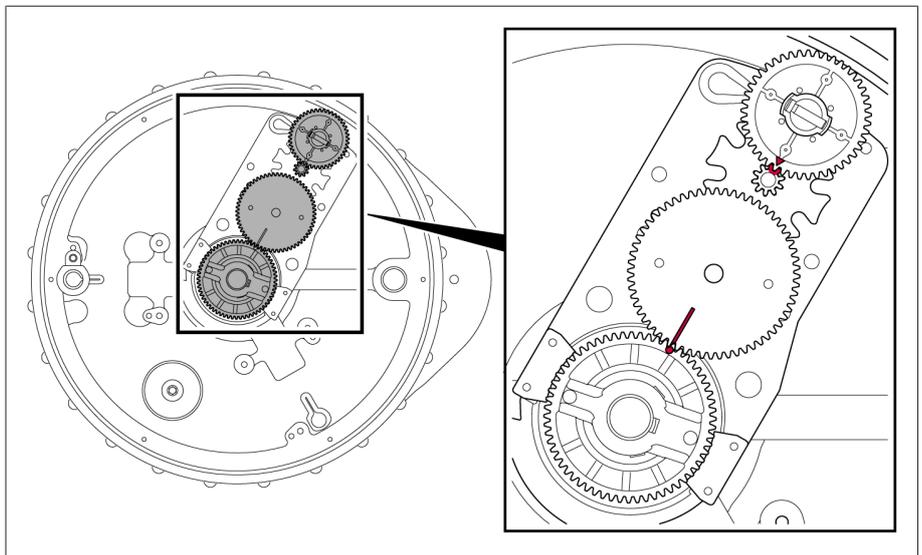


Figure 183: Adjustment markings in oil compartment base

2. **NOTICE!** Damage to the on-load tap-changer by mixing up the diverter switch inserts. Ensure that there are the same the number of markings on the diverter switch insert and on the on-load tap-changer head.

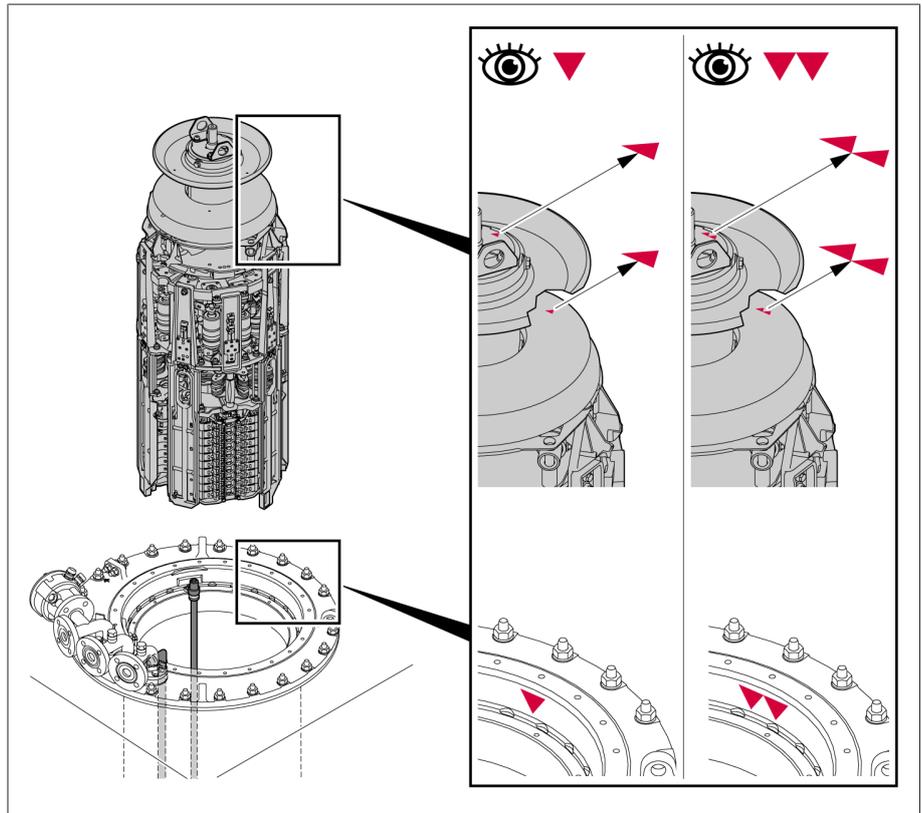


Figure 184: Same number of markings

3. **⚠ CAUTION!** Danger of lacerations when turning the coupling tube without an operating wrench. If the markings on the diverter switch insert are not aligned, turn the coupling tube so that the markings align, either by directly turning the shielding ring while wearing gloves or by using an operating wrench. Switch over the diverter switch insert if necessary.

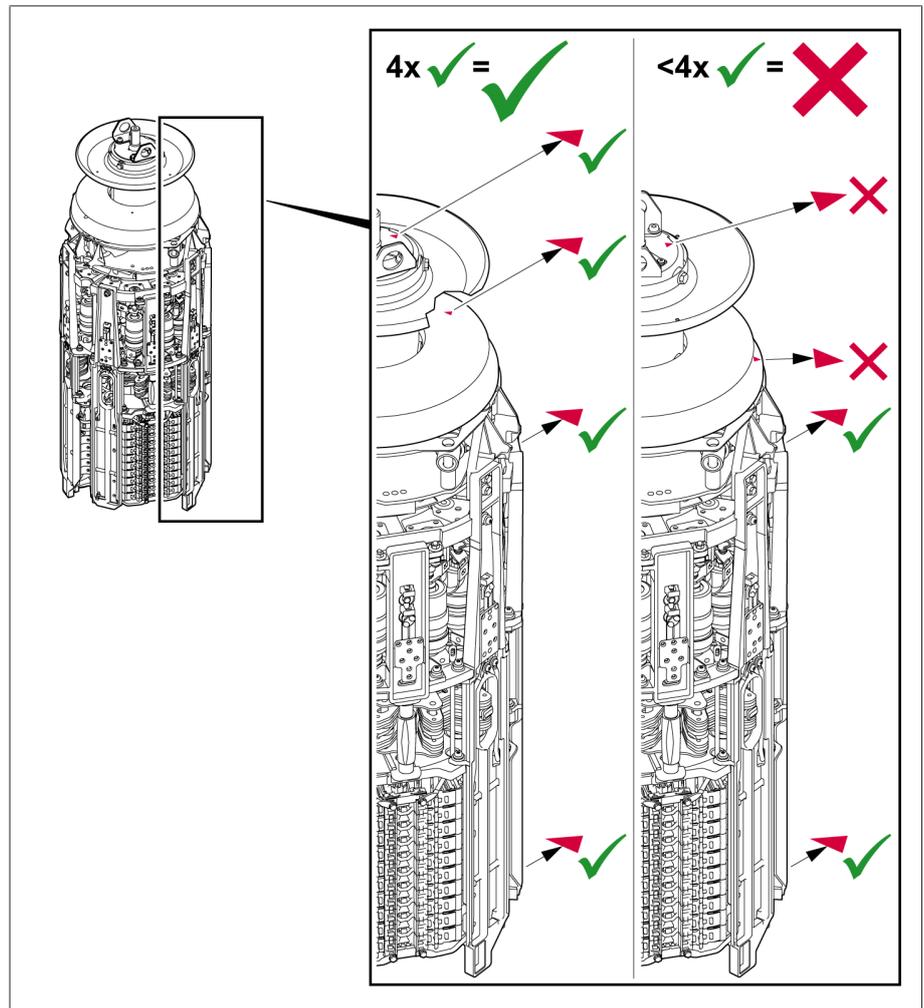


Figure 185: Markings on the diverter switch insert

4. Attach lifting gear to diverter switch insert and position diverter switch insert over oil compartment.
5. Align the diverter switch insert such that the markings on the diverter switch insert and on the on-load tap-changer head align. Ensure that the protective ring is on the indicator drive shaft. Slowly lower diverter switch insert until it

meets the oil compartment base. The shape of the selector coupling ensures that coupling is only possible in the correct position. The oil compartment of on-load tap-changers with  $U_m \geq 300$  kV contains an additional guide tube.

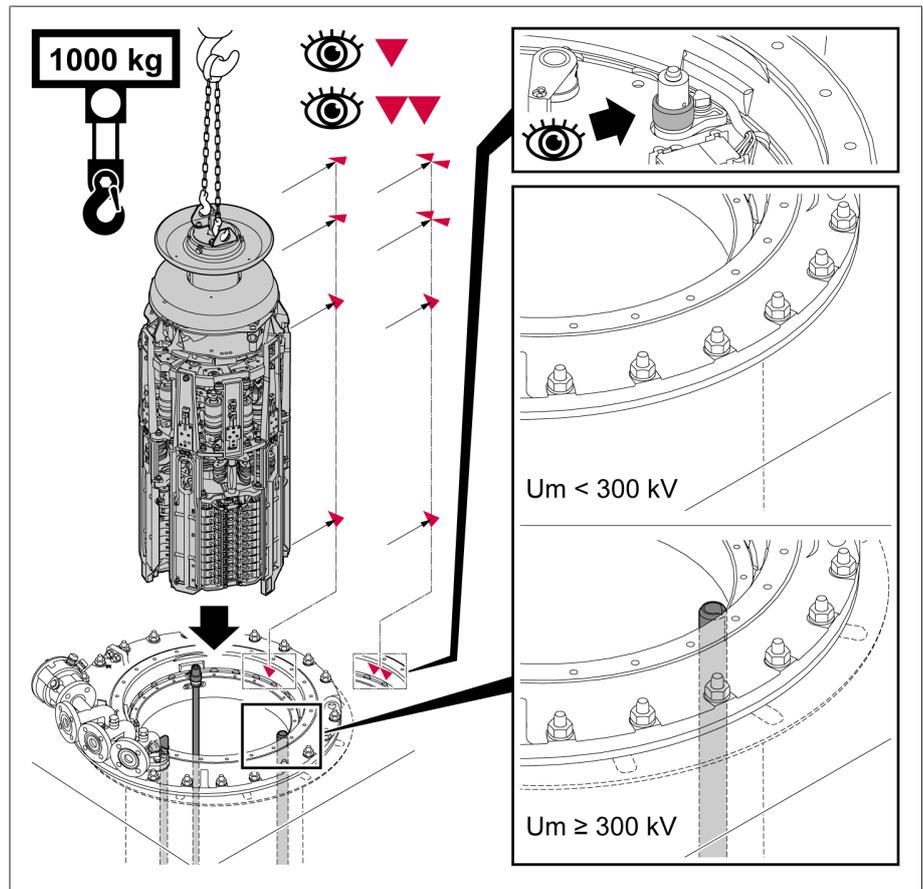


Figure 186: Markings on the diverter switch insert and the on-load tap-changer head

6. Check the distance between the upper rim edge of the adapter shaft on the diverter switch insert and the mounting surface of the on-load tap-changer head. The distance must be  $13 \pm 2$  mm.

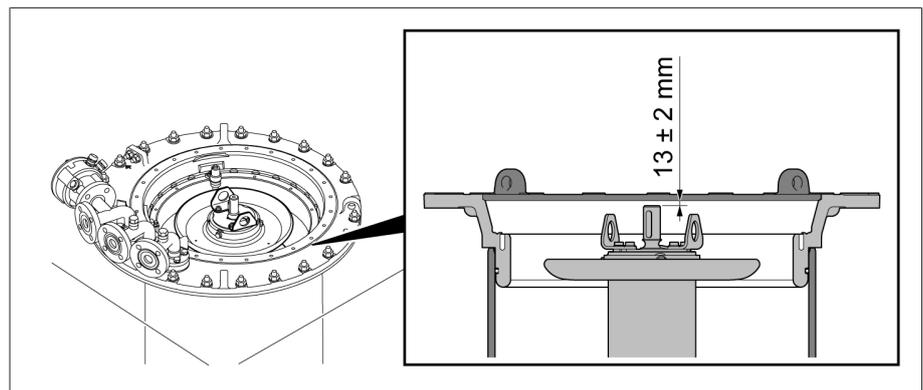


Figure 187: Distance between the upper rim edge of the adapter shaft of the diverter switch insert and the mounting surface of the on-load tap-changer head

### 5.3.8.2.3.2 Inserting the tap-change supervisory device

1. Insert mounting plate with tap-change supervisory device and drive shaft.

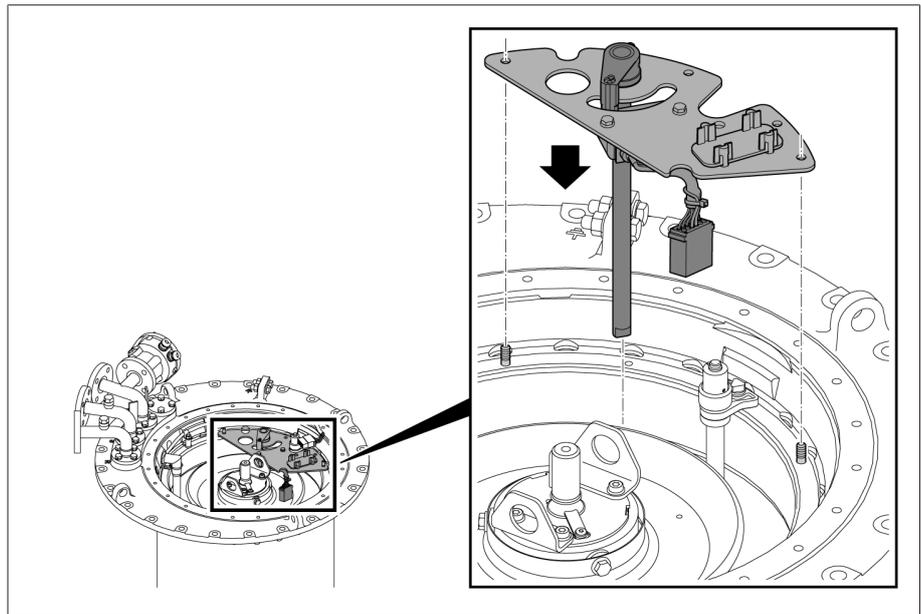


Figure 188: Mounting plate with tap-change supervisory device and drive shaft

2. Check that drive shaft is seated correctly in the plug connector.

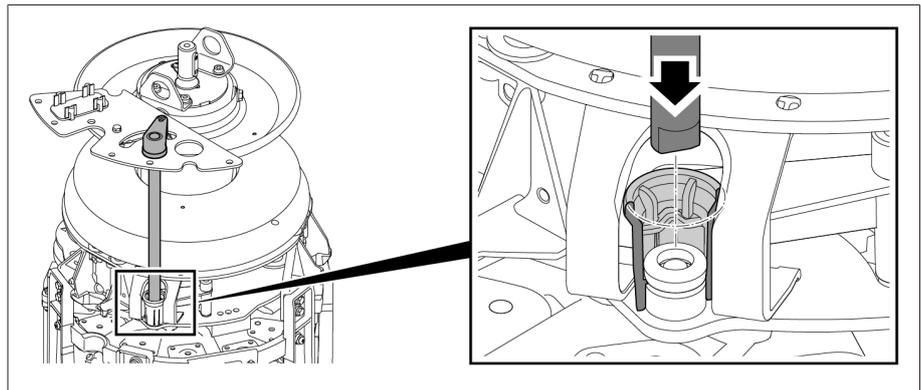


Figure 189: Drive shaft and plug connector

3. Attach mounting plate.

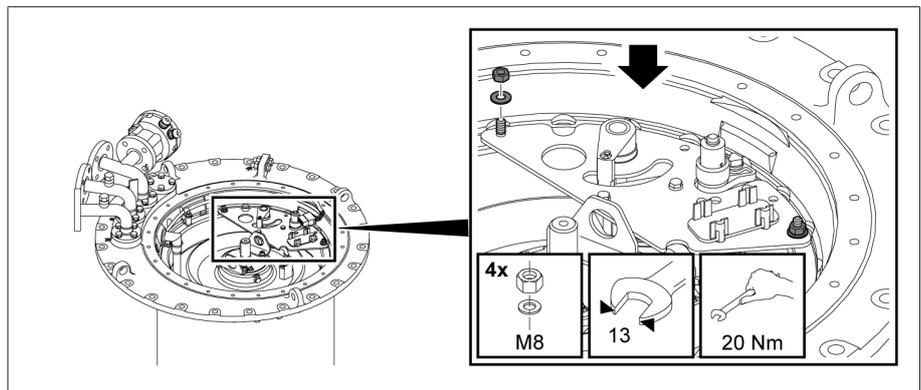


Figure 190: Mounting plate

4. Connect plug connector outside its bracket.

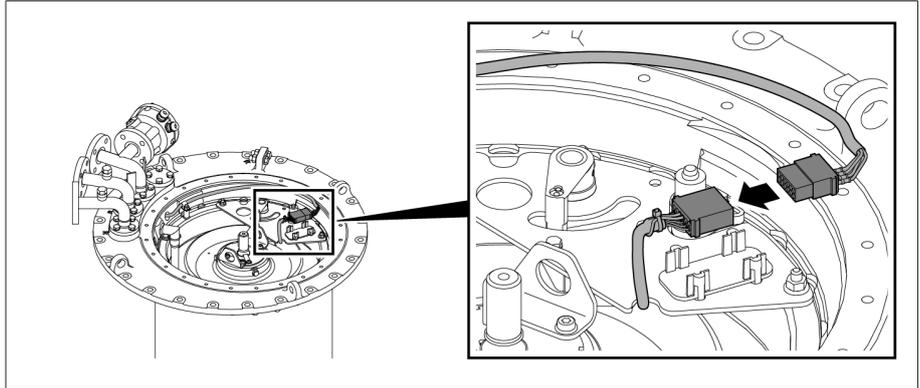


Figure 191: Plug connector

5. Insert plug connector into the bracket.

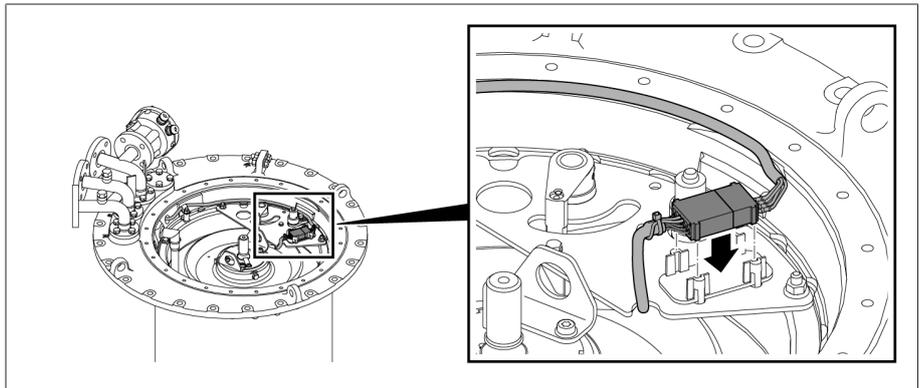


Figure 192: Plug connector in bracket

#### 5.3.8.2.3.3 Inserting tap position indicator disk

- Due to the coupling pin, the tap position indicator disk can only be installed when in the correct position.

> Place tap position indicator disk on indicator drive shaft, slide spring clip on to shaft end.

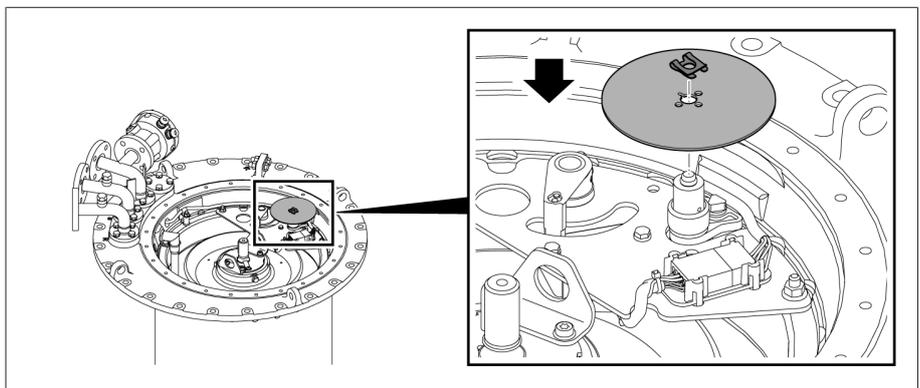


Figure 193: Tap position indicator disk

#### 5.3.8.2.3.4 Securing on-load tap-changer head cover

### NOTICE

#### Damage to the on-load tap-changer!

A missing or damaged o-ring as well as unclean sealing surfaces lead to insulating fluid escaping and therefore to damage to the on-load tap-changer.

- > Ensure that the o-ring is positioned untwisted in the on-load tap-changer head cover.
- > Ensure that the o-ring does not become damaged when mounting the cover.
- > Ensure that the sealing surfaces on the on-load tap-changer head cover and on-load tap-changer head are clean.

1. Check that the feather key is securely positioned in the adapter shaft. Where necessary, use Vaseline to secure the feather key against falling out.

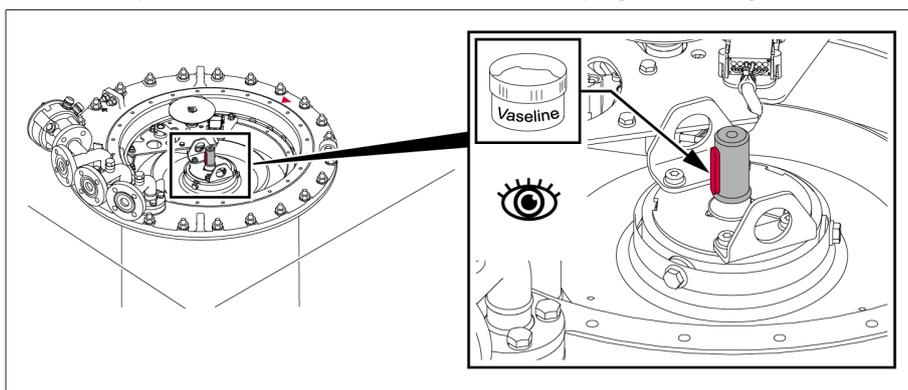


Figure 194: Feather key

2. Position the on-load tap-changer head cover on the on-load tap-changer head in such a way that the red triangular markings on the on-load tap-changer head and the on-load tap-changer head cover are aligned.

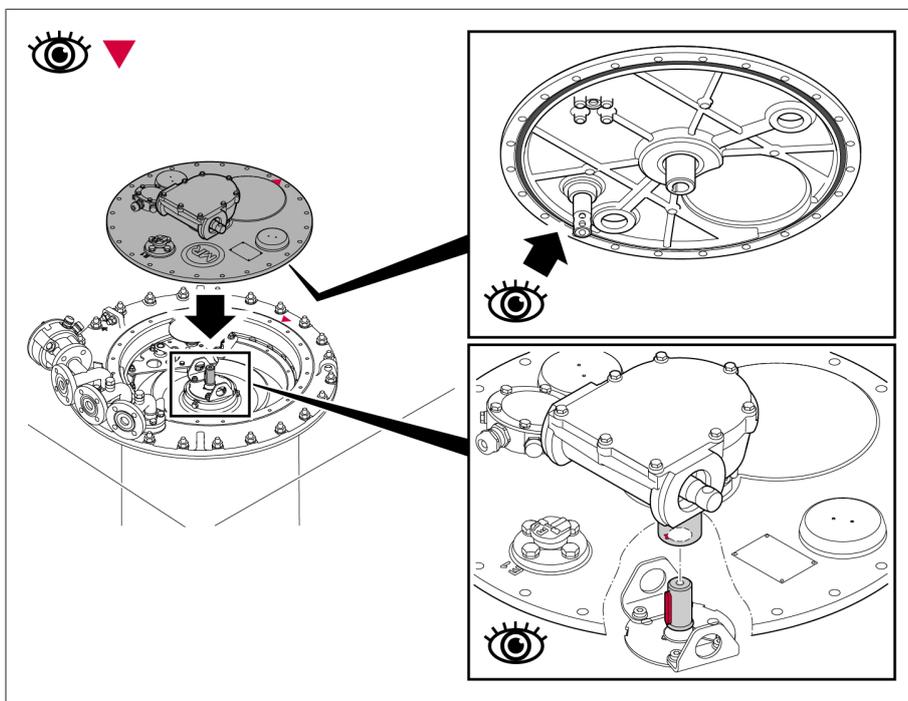


Figure 195: On-load tap-changer head cover with o-ring

3. Screw the on-load tap-changer head cover onto the on-load tap-changer head.

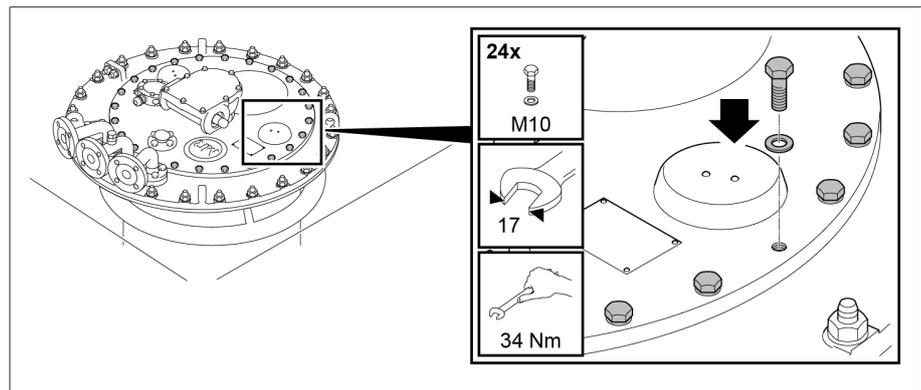


Figure 196: On-load tap-changer head cover

#### 5.3.8.2.4 Drying the on-load tap-changer

1. Connect pipe connections R and Q of on-load tap-changer head to the kerosene vapor lead using one shared lead.
2. Seal off unused pipe connections with a suitable blank cover.

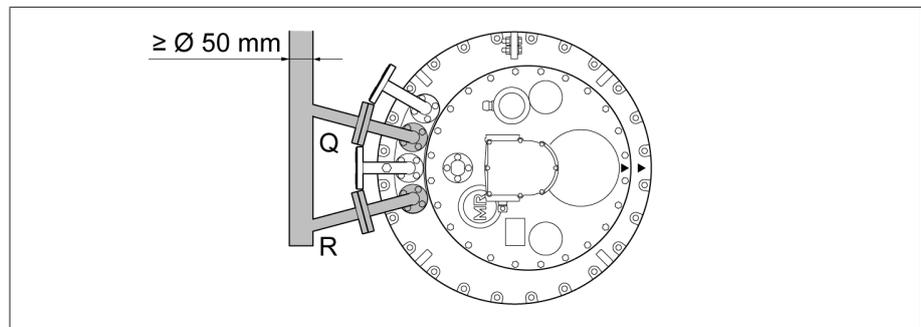


Figure 197: Shared lead

#### Vapor-phase drying in the transformer tank

1. Supply kerosene vapor at a temperature of around 90°C. Keep this temperature constant for 3 to 4 hours.
2. Increase the kerosene vapor temperature by approx. 10°C/hour to the desired final temperature of max. 125°C at the on-load tap-changer.
3. Vacuum-dry on-load tap-changer at between 105°C and maximum 125°C for at least 50 hours.
4. Residual pressure of no more than 10<sup>-3</sup> bar.

#### 5.3.8.2.5 Closing kerosene drain plug

##### NOTICE

#### Damage to the on-load tap-changer!

Moisture in the oil compartment reduces the dielectric strength of the insulating fluid and thus leads to damage to the on-load tap-changer.

> Within 10 hours of drying, seal off oil compartment with on-load tap-changer head cover.

1. Remove [▶ Section 5.3.8.2.1, Page 108] the diverter switch insert.
2. **NOTICE!** An open kerosene drain plug leads to insulating fluid escaping from the oil compartment and therefore to damage to the on-load tap-changer. Close kerosene drain plug by turning clockwise with extended socket wrench (tightening torque 20 Nm).
3. Insert [▶ Section 5.3.8.2.3, Page 113] the diverter switch insert.



If you wish to perform another transformer ratio test after drying, proceed as described in the section "Performing transformer ratio test following drying" [► Section 5.3.10, Page 122].

### 5.3.9 Filling the oil compartment of the on-load tap-changer with insulating fluid

#### NOTICE

#### Damage to the on-load tap-changer!

Unsuitable insulating fluids cause damage to the on-load tap-changer.

- > Only use insulating fluids [► Section 9.1.2, Page 210] approved by the manufacturer.

After drying, completely fill the oil compartment (diverter switch insert fitted) with insulating fluid again as soon as possible so that an impermissible amount of humidity is not absorbed from the surroundings.

1. Establish a connecting lead between pipe connection E2 and one of the pipe connections R, S or Q to ensure equal pressure in the oil compartment and transformer during evacuation.

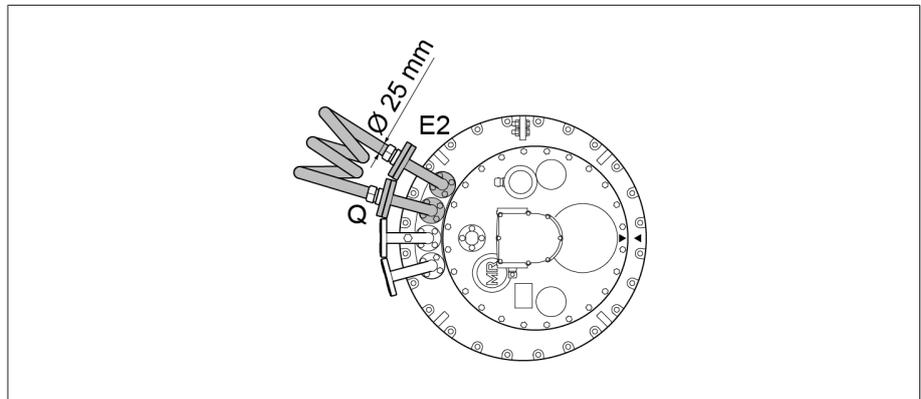


Figure 198: Connecting lead between E2 and Q

2. Fill on-load tap-changer with new insulating fluid using one of the two free pipe connections of the on-load tap-changer head.

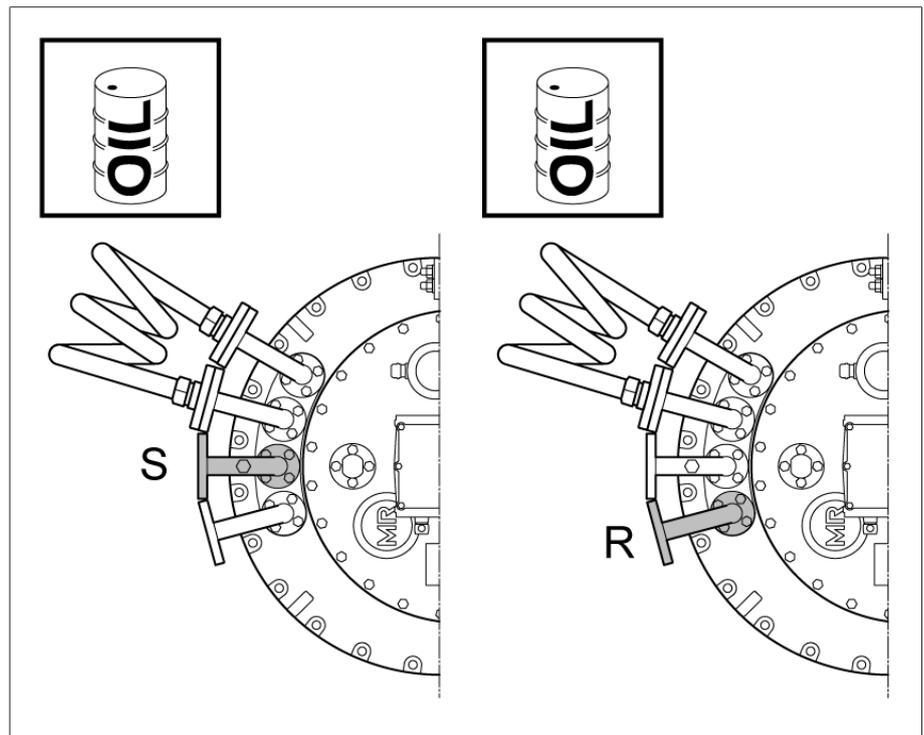


Figure 199: Pipe connections S and R

### 5.3.10 Performing transformer ratio test after drying

#### NOTICE

#### Damage to the on-load tap-changer!

Damage to the on-load tap-changer due to transformer ratio test being incorrectly performed.

- Ensure that the selector / de-energized tap changer is fully immersed in the insulating fluid and that the oil compartment of the on-load tap-changer is completely filled with insulating fluid.
- Only switch the on-load tap-changer from one operating position to the next via the upper gear unit. You can use a short tube (diameter 25 mm) with screwed-in coupling bolt (diameter 12 mm) with a hand wheel or crank for this, for example. When using a drill, do not exceed a maximum speed of 250 rpm.
- Always check the operating position reached through the inspection window in the on-load tap-changer head cover. Never overshoot the end positions, which are indicated in the connection diagram supplied with the delivery.
- For multiple-column applications with a shared drive, link all on-load tap-changer heads to one another using the horizontal drive shaft part.



When actuating the change-over selector, a higher torque is required.

1. Switch the on-load tap-changer into the desired operating position. The diverter switch operation can be heard distinctly.
2. **NOTICE!** An incomplete tap-change operation may damage the on-load tap-changer. After operating the diverter switch, continue to crank the drive shaft of the upper gear unit for 2.5 revolutions in the same direction in order to correctly complete the tap-change operation.

3. Perform the transformer ratio test.
4. Repeat the transformer ratio test in all operating positions.
5. Switch the on-load tap-changer into adjustment position (see the accompanying connection diagram for the on-load tap-changer).

## 5.4 Fitting protective devices and drive components

### 5.4.1 Electrically connecting the temperature sensor



Size the cable for the electrical connection of the temperature sensors such that you can turn the sensors if necessary when mounting the drive shaft.

- › Electrically connect the temperature sensors in accordance with the connection diagram provided.

### 5.4.2 Connecting the tap-change supervisory device

**⚠ DANGER**



#### **Risk of fatal injury due to electrical voltage!**

Danger of death due to electrical voltage when assembling and connecting the device.

- › De-energize the device and system peripherals and lock them to prevent them from being switched back on.
- › Connect monitoring contacts integrated into the on-load tap-changer head (terminal box on pipe connection Q) to the motor-drive unit terminals using a connecting lead as specified in the connection diagram provided.

### 5.4.3 Installing protective relay in piping and connecting

**⚠ WARNING**



#### **Danger of explosion!**

Explosive gases in the protective relay can deflagrate or explode and result in severe injury or death.

- › Wait 15 minutes after switching off the transformer before beginning further work on the protective relay so that the gases can dissipate.
- › Ensure that there are no ignition sources such as naked flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- › De-energize all auxiliary circuits before beginning work.
- › Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).



Always perform all transformer tests with the protective relay attached and connected.

### 5.4.3.1 Checking function of protective relay

Check the function of the protective relay before installing it in piping between on-load tap-changer head and oil conservator. The associated contact positions for checking electrical continuity are shown in the dimensional drawing provided.

1. Loosen the three screws on the terminal box cover and lift off the terminal box cover.

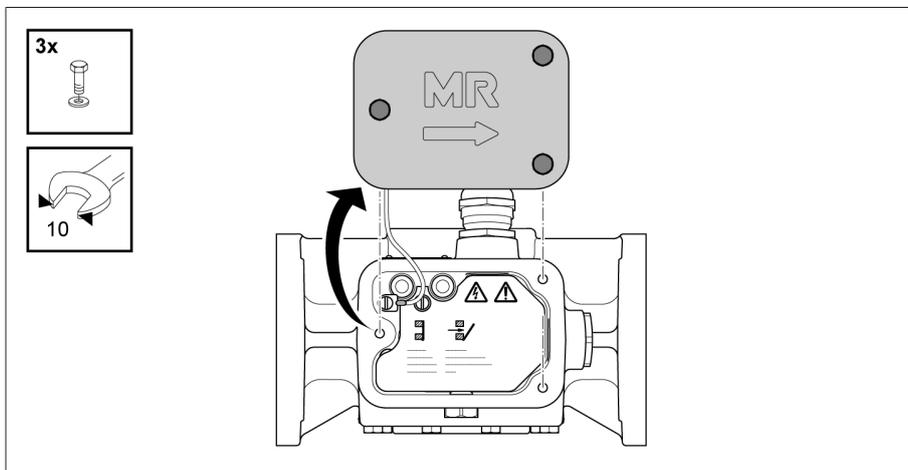


Figure 200: Terminal box cover

2. Remove the slotted head screw for potential tie-in and remove the terminal box cover with wire.

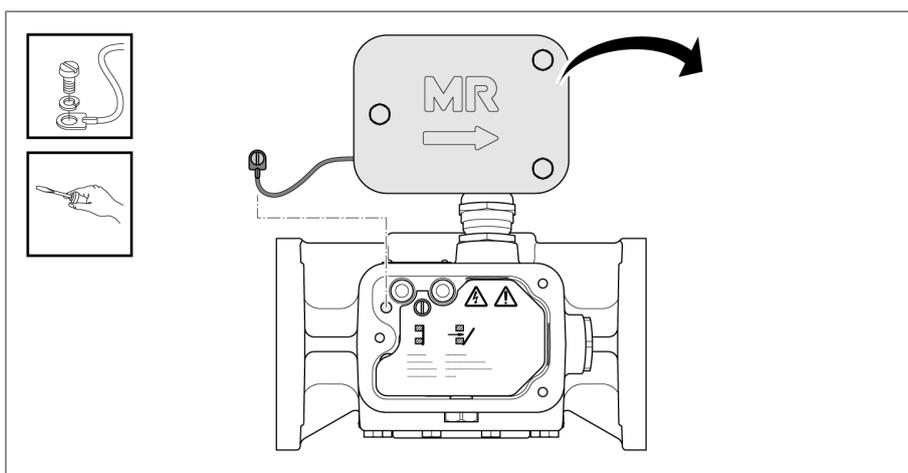


Figure 201: Terminal box cover

#### NOTICE

#### Damage to protective relay!

Damage to protective relay resulting from improper operation.

- > Never press both test buttons at the same time.

3. Press OFF test button.
  - » Flap valve is inclined. Line marker appears in the middle of the inspection window.

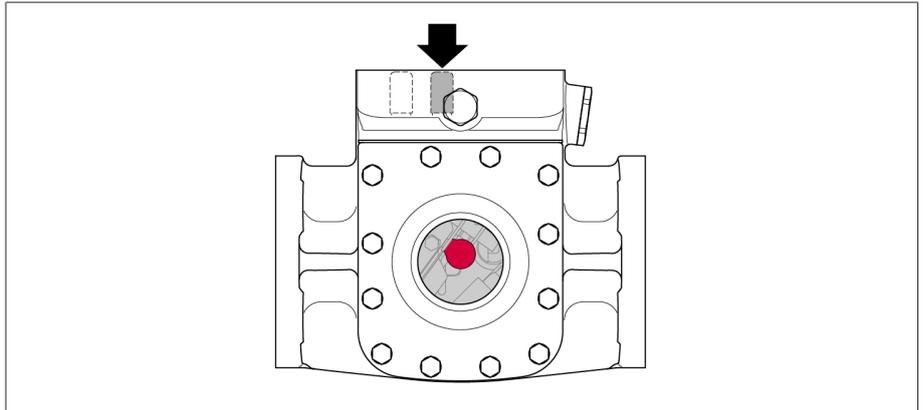


Figure 202: OFF position

4. Press OPERATION test button.
  - » Flap valve is vertical.

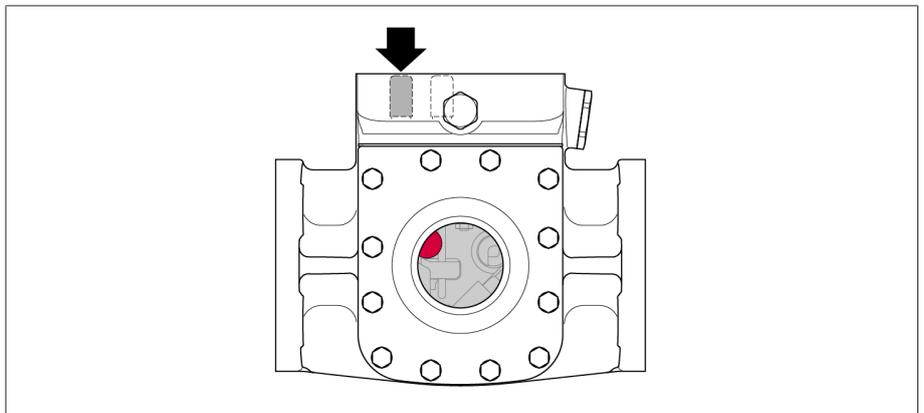


Figure 203: OPERATION position

5. Position the wire for the terminal box cover and affix using the slotted head screw.

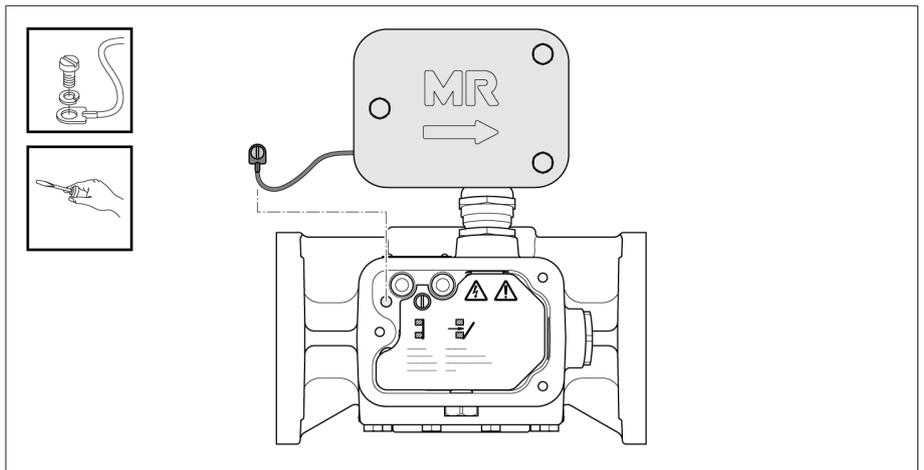


Figure 204: Terminal box cover

6. Attach the terminal box cover and secure with screws.

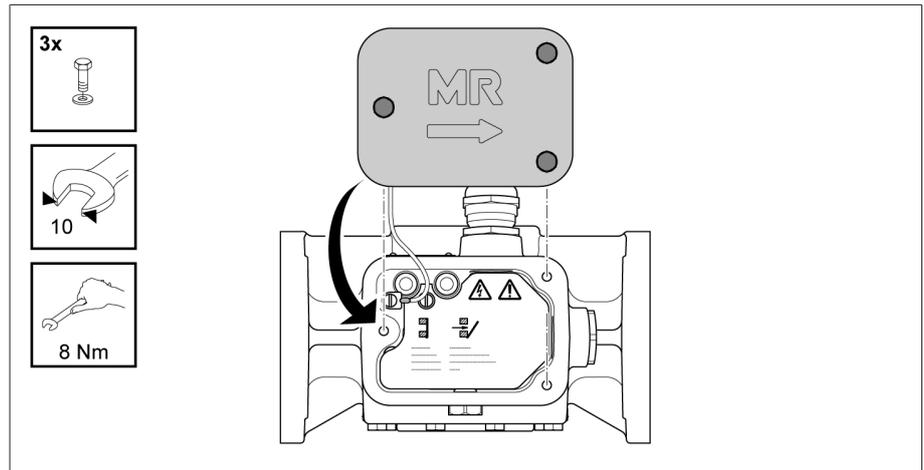


Figure 205: Terminal box cover

#### 5.4.3.2 Installing protective relay in piping

Ensure the following for installation and proper function of the protective relay:

1. Ensure that there are no foreign bodies in the piping or in the oil conservator.
2. Install protective relay such that it can be easily accessed for subsequent maintenance work.
3. Install protective relay with good support and free from vibrations.
4. The test buttons must be at the top.
5. The interior diameter of the piping must be at least 25 mm.
6. The magnetic field strength (bushings, busbars etc.) must be  $< 20 \text{ kA/m}$ .  
Higher field strengths have a negative effect on the function of the protective relay.
7. The piping from the protective relay to the oil conservator must be routed with an inclination of at least 2% ( $1.2^\circ$ ) to ensure the switching gases can escape freely.

8. The protective relay is intended for a horizontal operating position in close proximity to the on-load tap-changer head. A positive inclination of up to  $5^\circ$  from horizontal is permitted in the direction to the conservator. An inclination of up to  $5^\circ$  from vertical to either side is permitted.

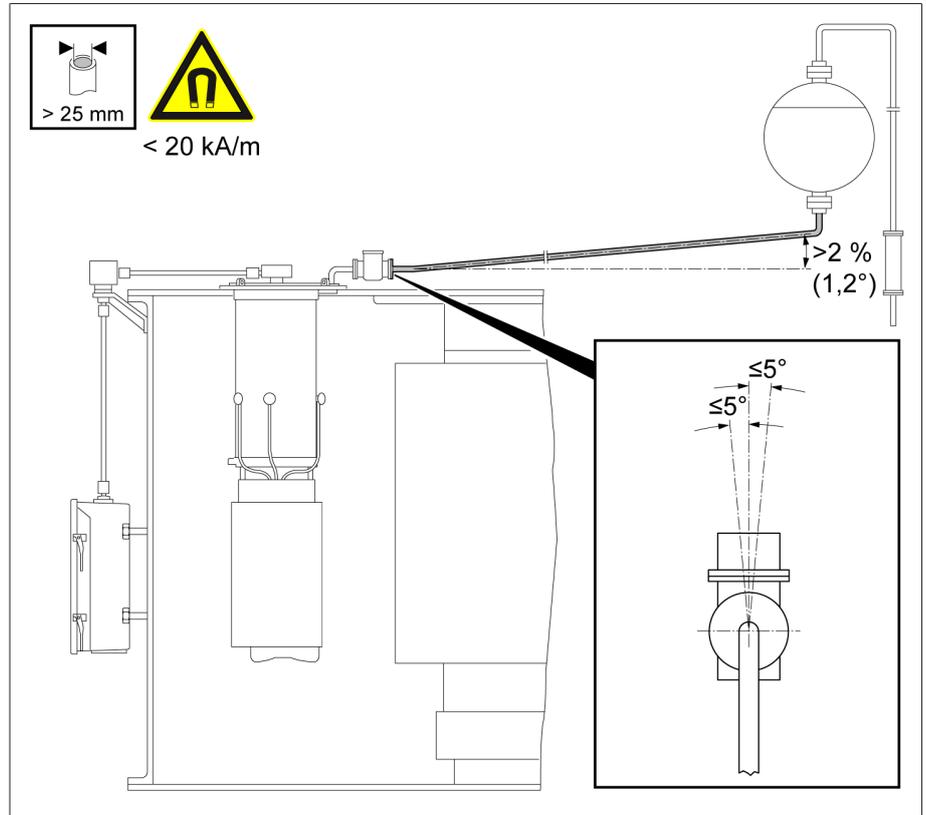


Figure 206: Protective relay installation

9. The reference arrow on the terminal box cover must point toward the on-load tap-changer's oil conservator.

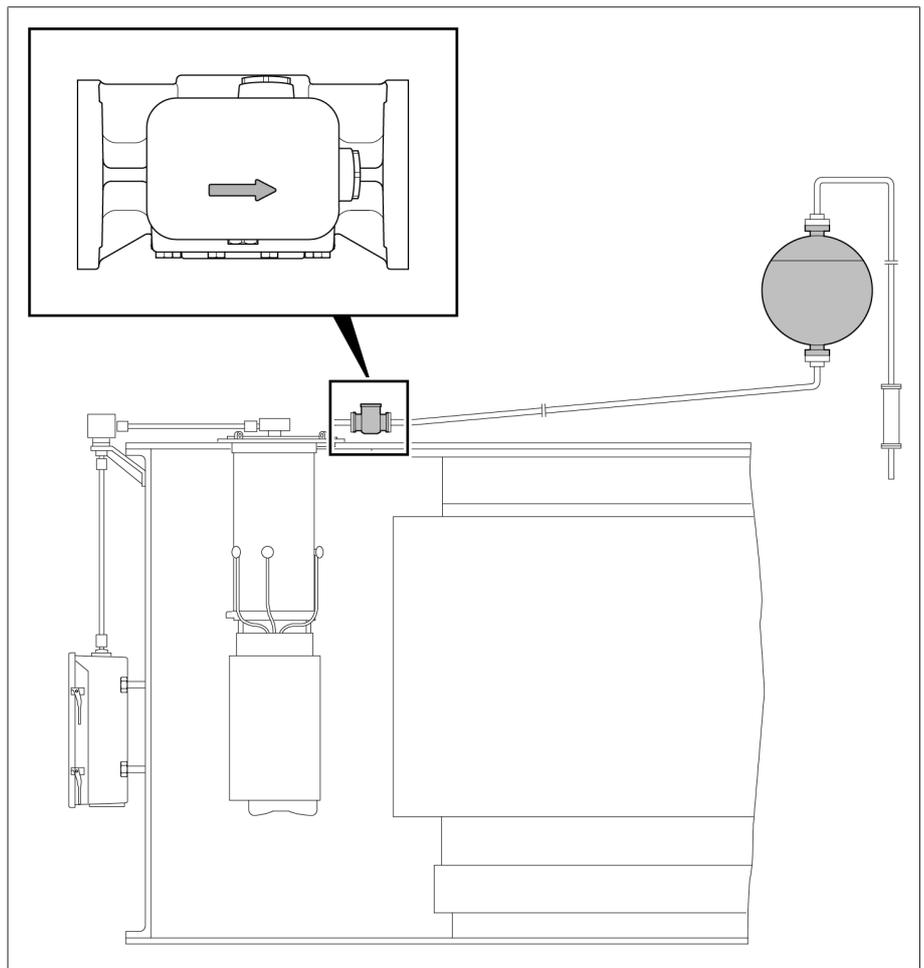


Figure 207: Reference arrow pointing towards the on-load tap-changer's oil conservator

10 Install a stop-cock with a nominal width of at least 25 mm between the protective relay and oil conservator.

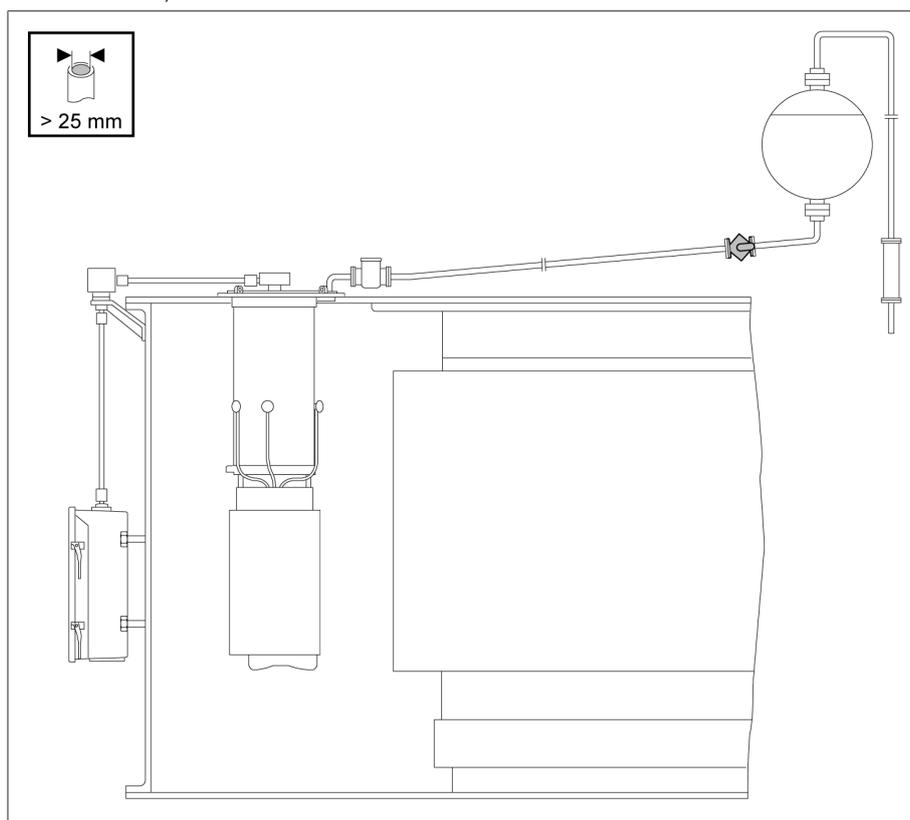


Figure 208: Stop-cock

#### 5.4.3.3 Making the electrical connections for the protective relay

The protective relay's dry-reed magnetic switching tubes are supplied in the standard version as either NC or NO contacts. Other contact combinations can be supplied as special versions and are shown in the dimensional drawing provided.

**▲ WARNING**



#### **Risk of death or severe injury!**

Risk of death or severe injury due to improper electrical connection of the protective relay.

- > Loop the protective relay into the tripping circuit of the circuit breakers of the transformer to be protected so that the transformer is immediately de-energized by the circuit breakers when the protective relay is tripped.
- > Systems which only generate an alarm message are not permitted.

1. Insert cable gland (RS 2001, 2001/V, 2001/H, 2001/E, 2001/5, 2001/R) or adapter (RS 2003 and RS 2004) in the tapped hole with the most favorable position.

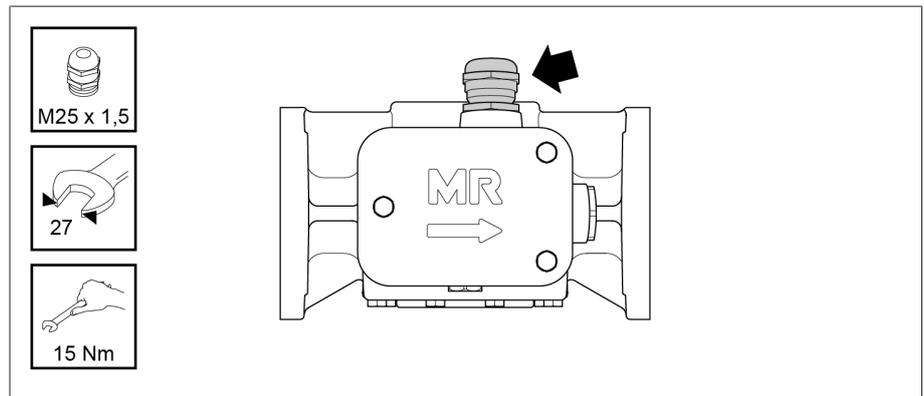


Figure 209: Tapped hole

2. Seal open tapped hole with dummy plug.

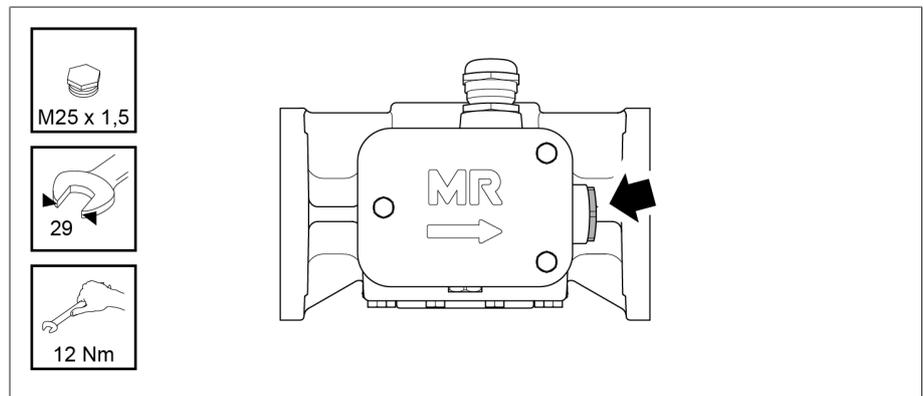


Figure 210: Sealed with dummy plug

3. Loosen the three screws on the terminal box cover and lift off the terminal box cover.

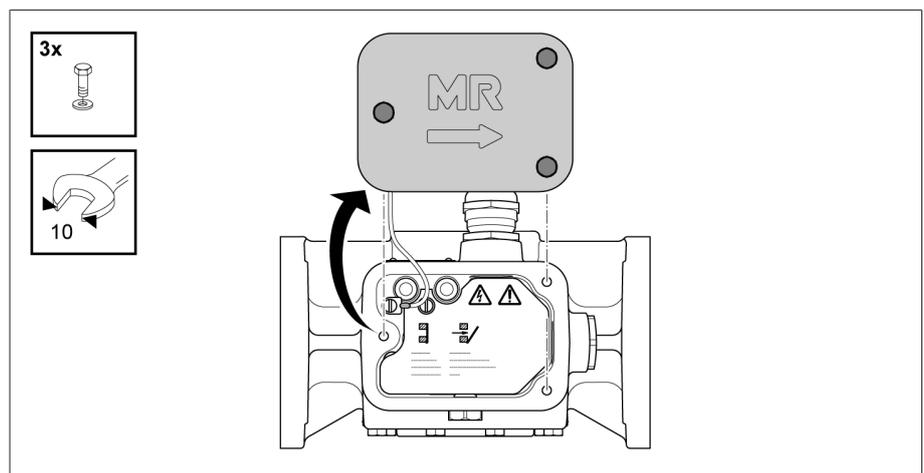


Figure 211: Terminal box cover

4. Take off the slotted head screw for potential tie-in and remove the terminal box cover with wire.

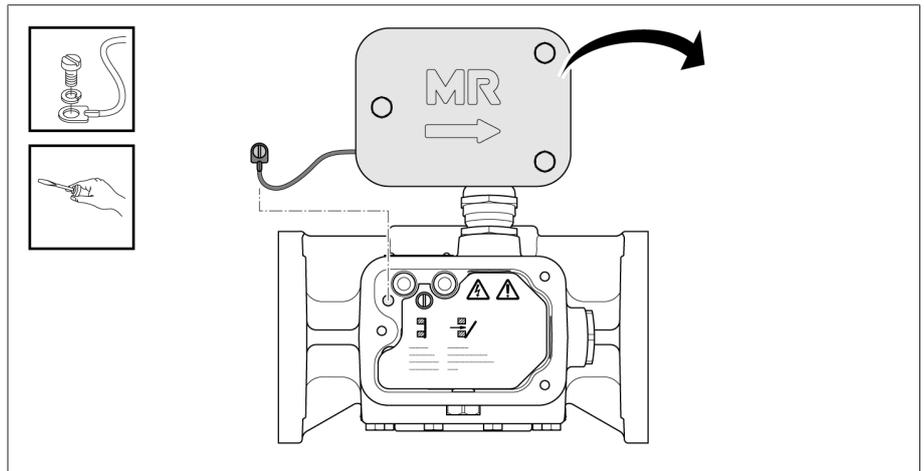


Figure 212: Terminal box cover

5. Remove screw for the protective cover and take off the protective cover.

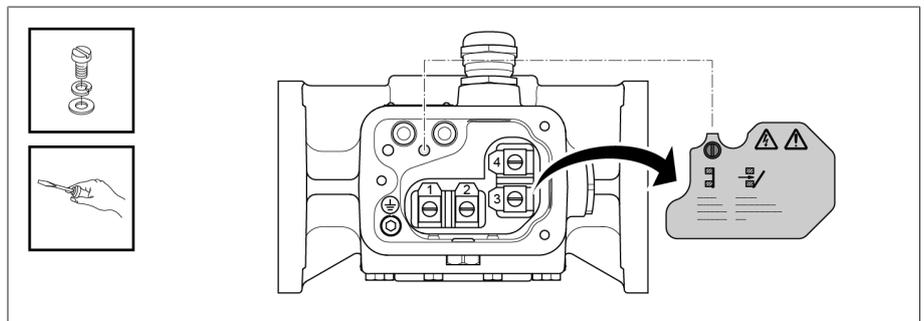


Figure 213: Protective cover

6. Guide cable through cable gland and into protective relay. Ensure that the cable gland is well connected and sealed.

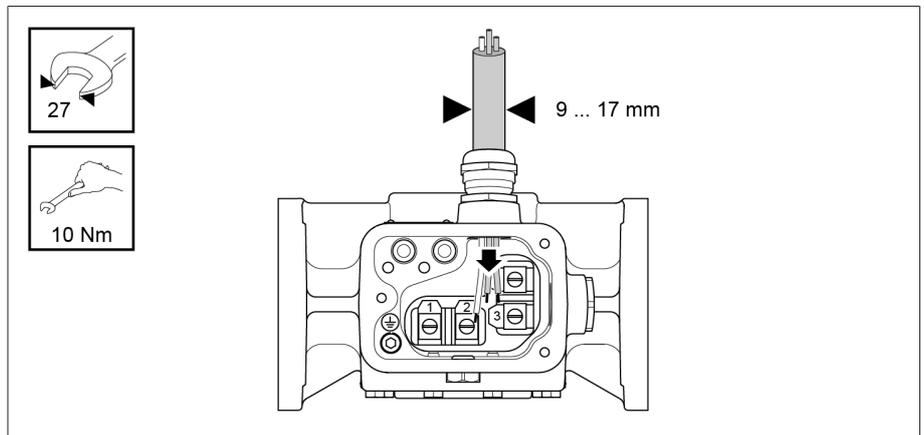


Figure 214: Cable bushing

7. Connect the electric cables to the connection terminals in accordance with the connection diagram on the dimensional drawing.

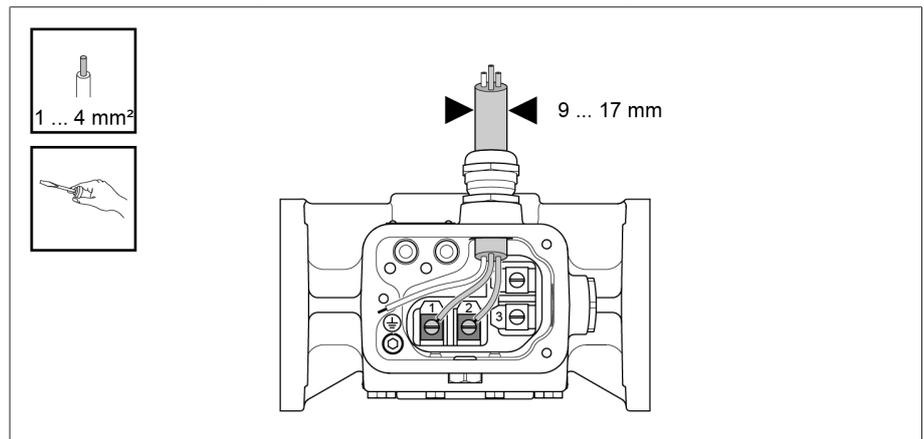


Figure 215: Electrical cables

8. Connect protective conductor to cylinder head screw.

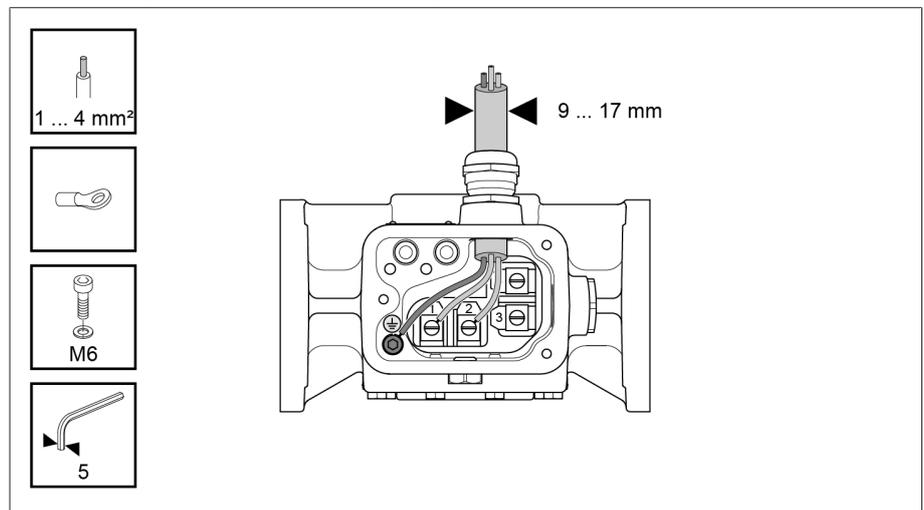


Figure 216: Protective conductor

9. Insert the protective cover and secure using the screw.

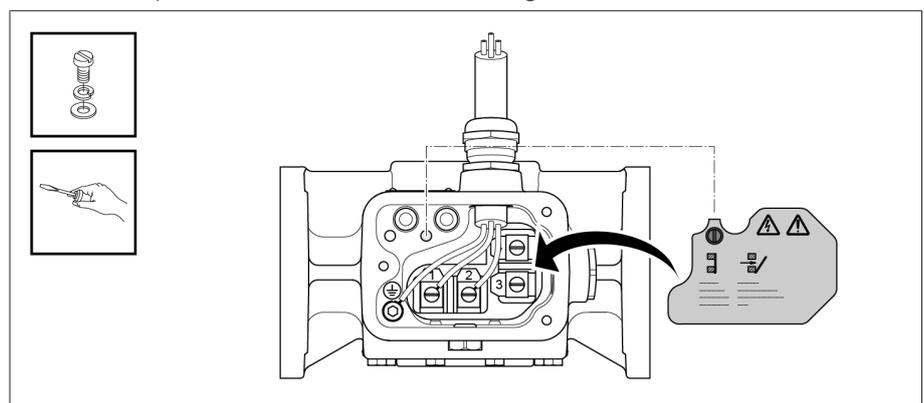


Figure 217: Protective cover

10. Position the wire for the terminal box cover and affix using the slotted head screw.

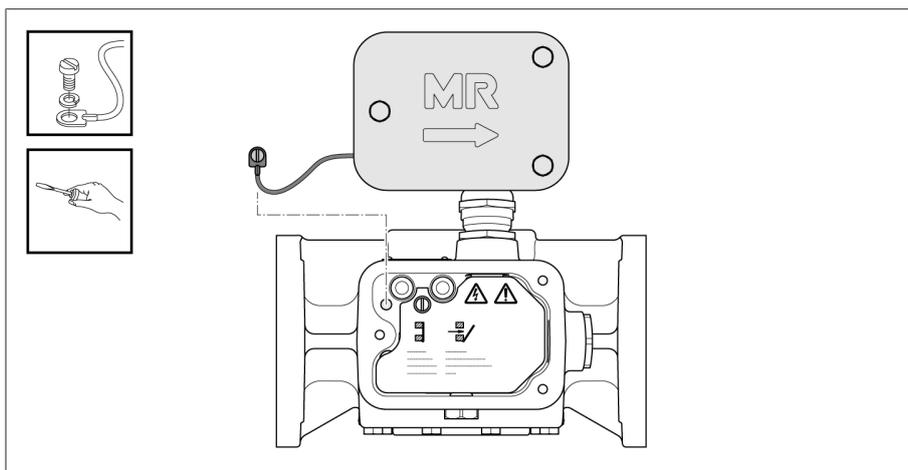


Figure 218: Terminal box cover

11. Attach the terminal box cover and secure with screws.

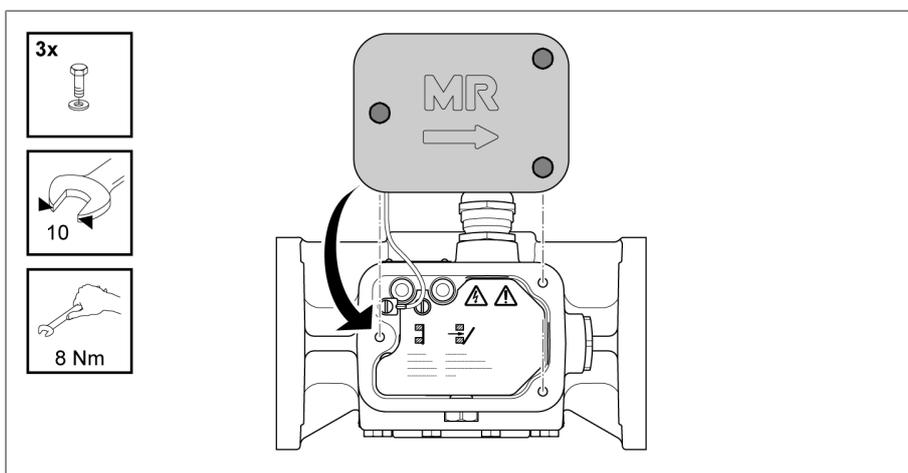


Figure 219: Terminal box cover

#### 5.4.4 Installing and connecting the pressure monitoring device

##### 5.4.4.1 Checking the function of the pressure monitoring device

Check the function of the pressure monitoring device before you install it on the pipe bend or the on-load tap-changer head.

1. Remove the cover cap.

2. Activate the snap-action switch.  
» Sensor is in the OFF position above the snap-action switch.

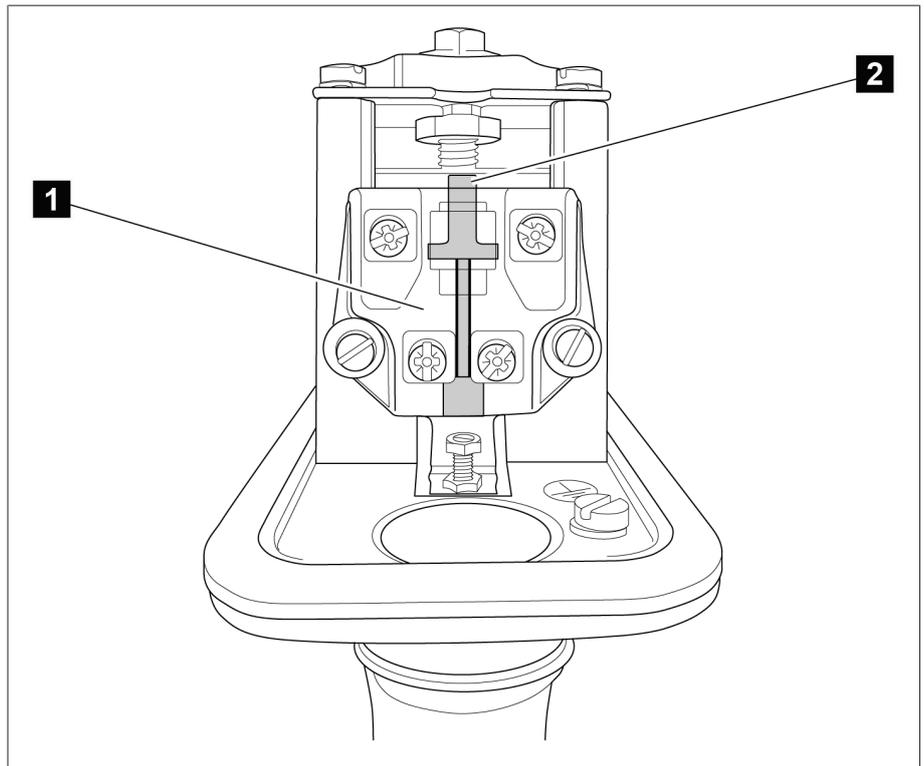


Figure 220: OFF position

1	Snap-action switch
2	Sensor in the OFF position

3. Activate the snap-action switch again.
  - » Sensor is in the OPERATION position below the snap-action switch.

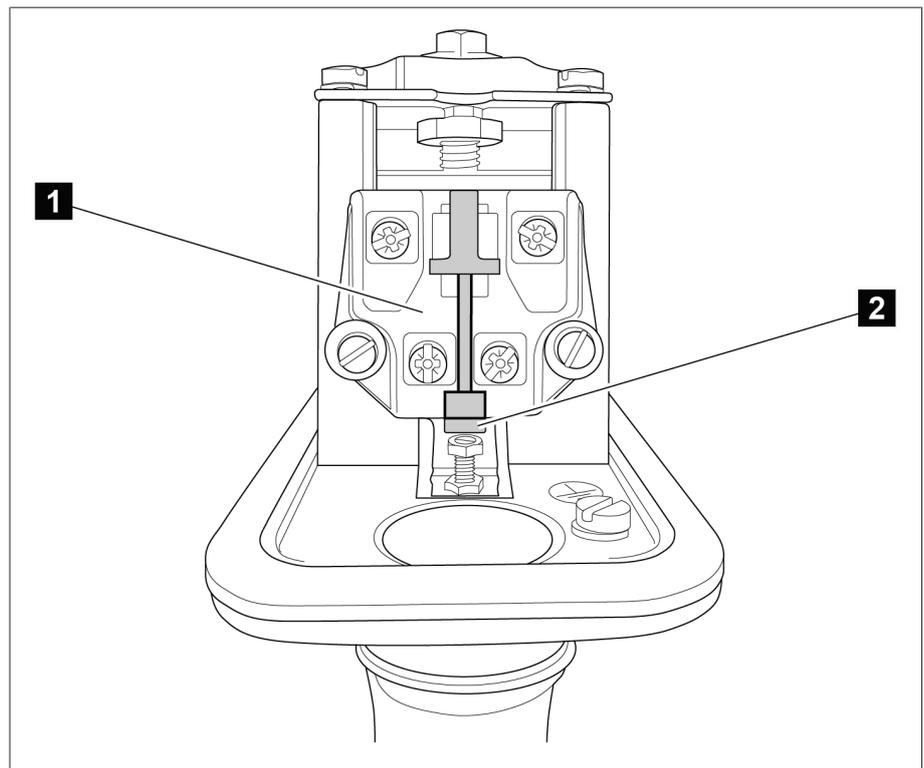


Figure 221: OPERATION position

1	Snap-action switch
2	Sensor in the OPERATION position

4. Secure the cover cap.

Always check the position of the sensor!

#### 5.4.4.2 Installing the pressure monitoring device

The pressure monitoring device can be installed in 2 variants.

- Fastening on the on-load tap-changer head (vertical installation)
- Fastening onto the pipe bend (horizontal installation)

It is installed via the holes on the mounting ring. A mounting seal has to be installed under the pressure monitoring device during installation.

During fastening, ensure that the ventilation is on top.

Ensure that there is sufficient space above the pressure monitoring device to remove the cover cap.

#### 5.4.4.3 Making the electrical connections for the pressure monitoring device

**Risk of fatal injury due to electrical voltage!**

**⚠ DANGER**



Danger of death due to electrical voltage when assembling and connecting the device.

- > De-energize the device and system peripherals and lock them to prevent them from being switched back on.

**⚠ WARNING****Danger of death or severe injury!**

Risk of severe injury or death due to improper electrical connection of the pressure monitoring device.

- > Loop the pressure monitoring device into the tripping circuit of the circuit breakers of the transformer to be protected so that the transformer is immediately de-energized by the circuit breakers when the pressure monitoring device is tripped.

- > Circuits which only generate an alarm message are not permitted.

1. Remove the cover cap.
2. Insert Use the tapped hole for routing leads for this.
3. Connect the leads to the terminals of the snap-action switch.  
The snap-action switch is designed as a normally open and normally closed switch; it flips after being triggered and can be reset.
4. Connect all of the electrical leads and the protective conductor.  
Either 1 or 2 leads can be connected per terminal for the lead connection ( $\emptyset$  0.75...2.5 mm<sup>2</sup>).
5. Secure the cover cap.
6. Ensure the fixing screw is positioned correctly, see also dimensional drawing supplied.

**5.4.5 Fitting motor-drive unit**

- > Fit motor-drive unit to transformer as described in relevant MR operating instructions for motor-drive unit.

**5.4.6 Fitting drive shaft**

Observe the following during mounting:

**Resistance to corrosion of components**

The square tubes, coupling brackets, coupling bolts, screws, and locking washers are corrosion-resistant. We therefore recommend not applying the same external coating to these parts as to the transformer tank.

**Cutting square tubes, telescopic protective tubes, and protective cover**

The square tubes, the telescopic protective tube and the protective cover are supplied over-length (graded standard lengths). You must cut these parts to the required size before mounting on the transformer. In rare cases, you also have to cut the inner tube of the telescopic protective tube to the desired length. The maximum permitted total drive shaft length of the drive - last column = 15 m.

Standard lengths	Motor-drive unit	Manual drive
400	•	•
600	•	•
900	•	•
1300	•	•
1700	•	•
2000	•	•
2500	Not permitted	• <sup>1)</sup>

Table 6: Graded standard lengths of square tubes

<sup>1)</sup>  $l > 2000$  only possible for vertical installation without shaft protection! Telescopic protective tubes for manual drives with vertical dimensions  $V1 > 2462$  are to be supplied with vertical intermediate bearing, as with the motor-drive unit.

#### 5.4.6.1 Fitting a vertical drive shaft without cardan joint

##### Permitted axial displacement

Minor axial displacements of the vertical drive shaft are permitted as long as they do not exceed 35 mm per 1000 mm of square tube length (this corresponds to  $2^\circ$ ).

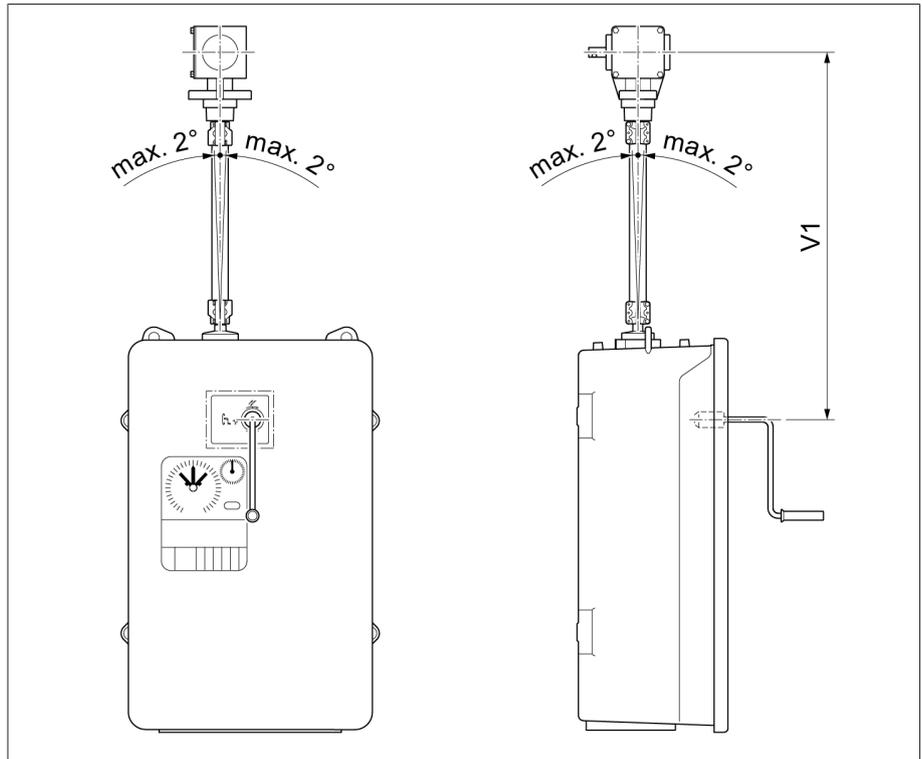


Figure 222: Permitted maximum axial displacement of vertical drive shaft without cardan joint

To fit the vertical drive shaft to the drive, proceed as follows:

1. **⚠ CAUTION!** Switch off motor protective switch Q1 in the motor-drive unit (position O). If this is not done, the motor-drive unit may be started inadvertently and cause injuries.
2. Fasten the bevel gear to the transformer.

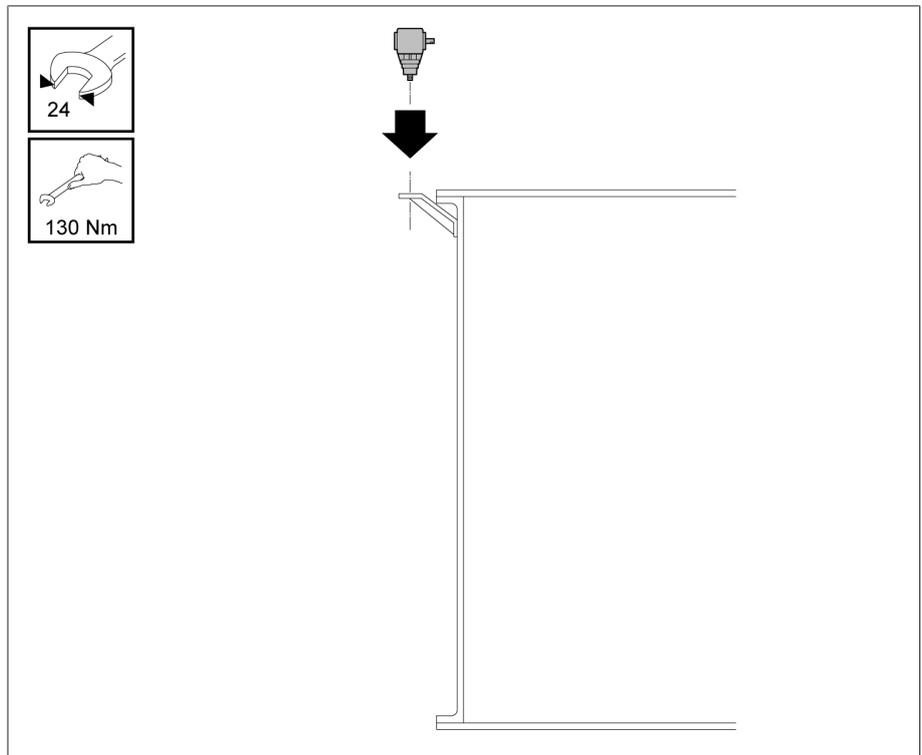


Figure 223: Bevel gear

3. Determine dimension A between shaft end of drive and shaft end of bevel gear. Shorten square tube to length of  $A - 9$  mm.

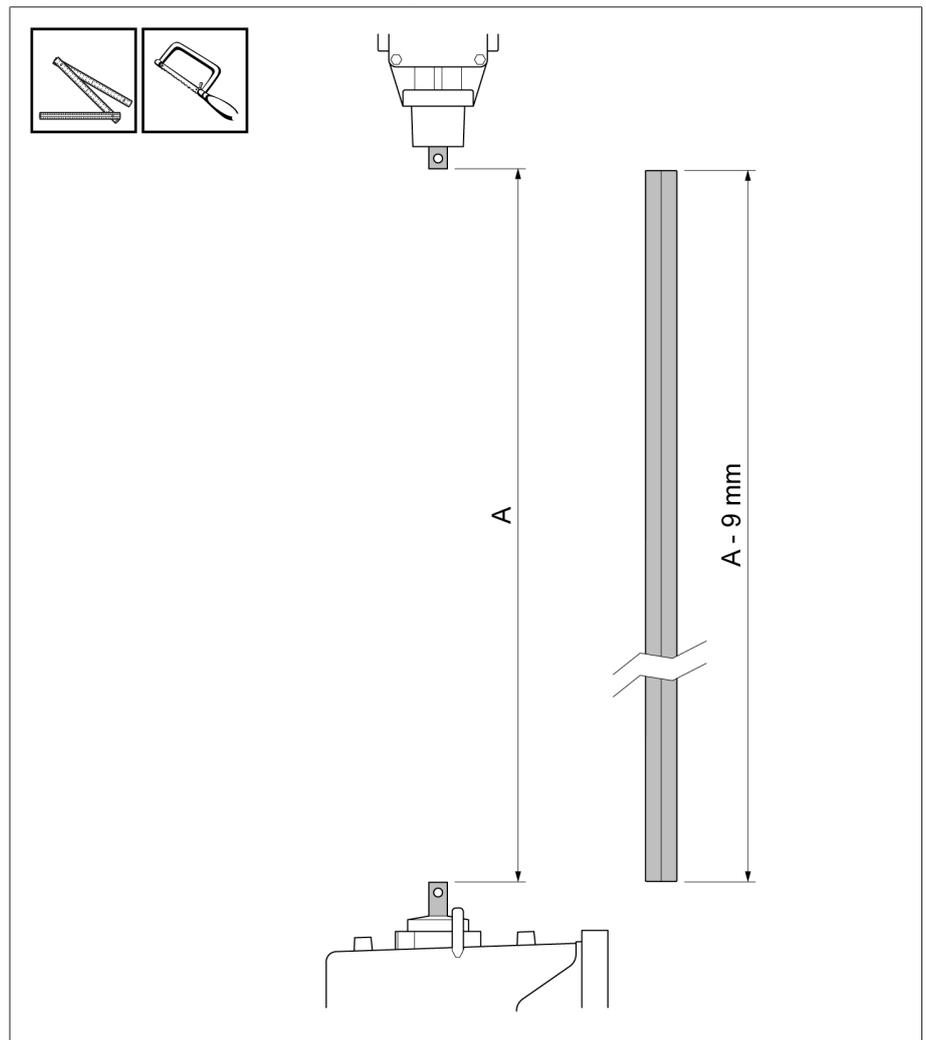


Figure 224: Shortening square tube

4. Deburr cut surfaces of square tube.

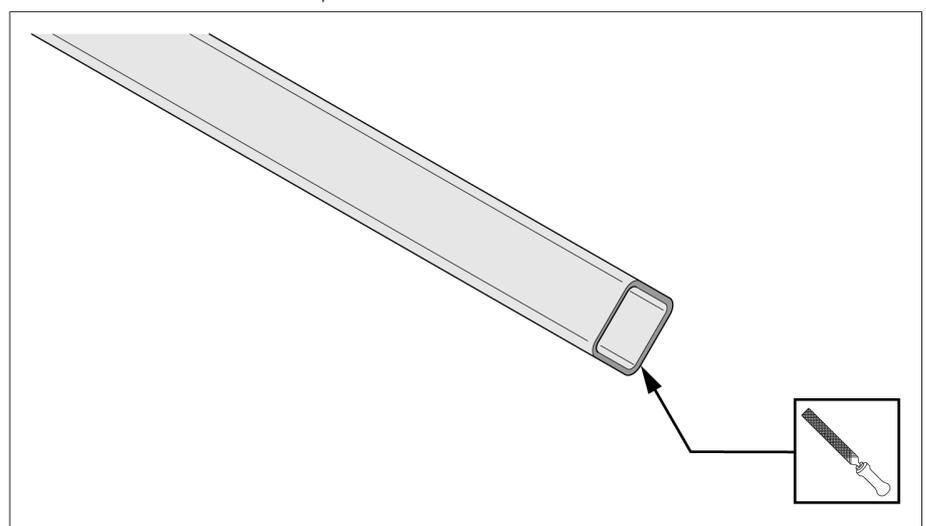


Figure 225: Deburring cut surfaces

5. Slide the loosely screwed-together coupling part onto square tube until stop is reached.

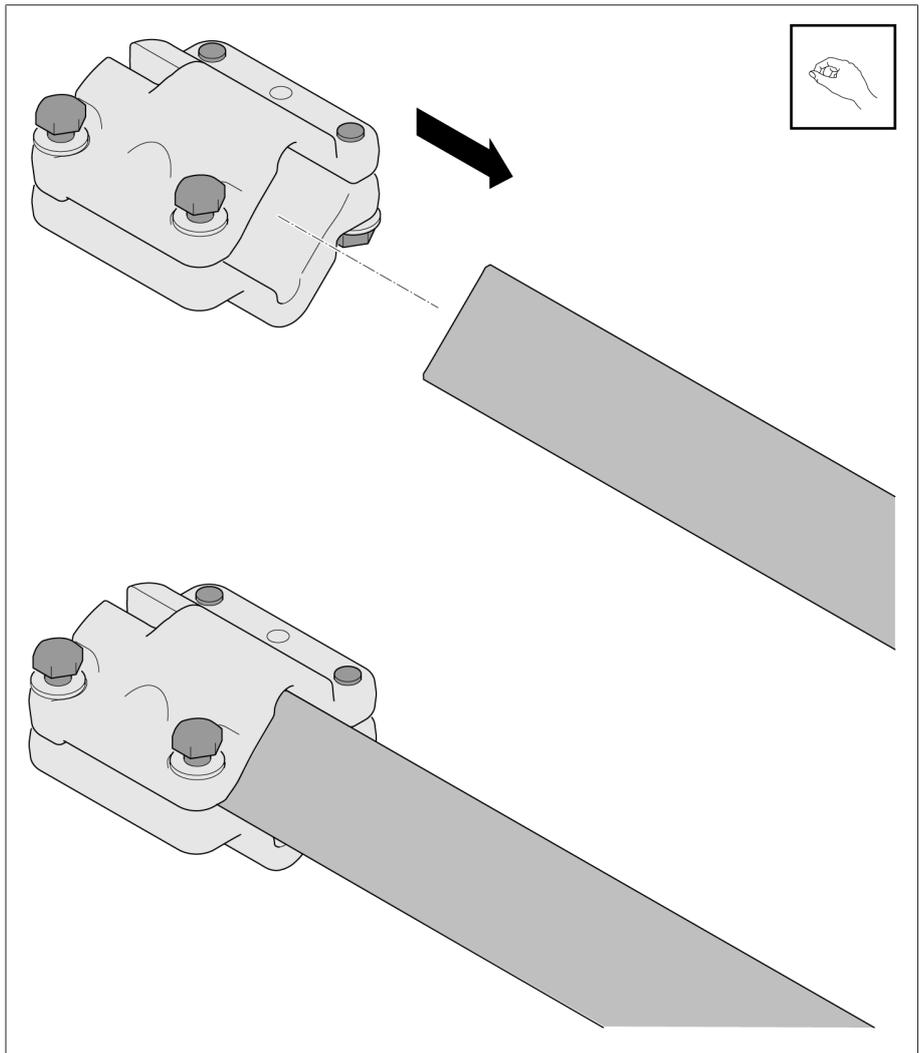


Figure 226: Slide coupling part onto square tube

6. Insert coupling bolt into shaft end of drive. Grease coupling part, coupling bolt and shaft end (e.g. ISOFLEX TOPAS L32). Slide square tube with coupling part onto shaft end.

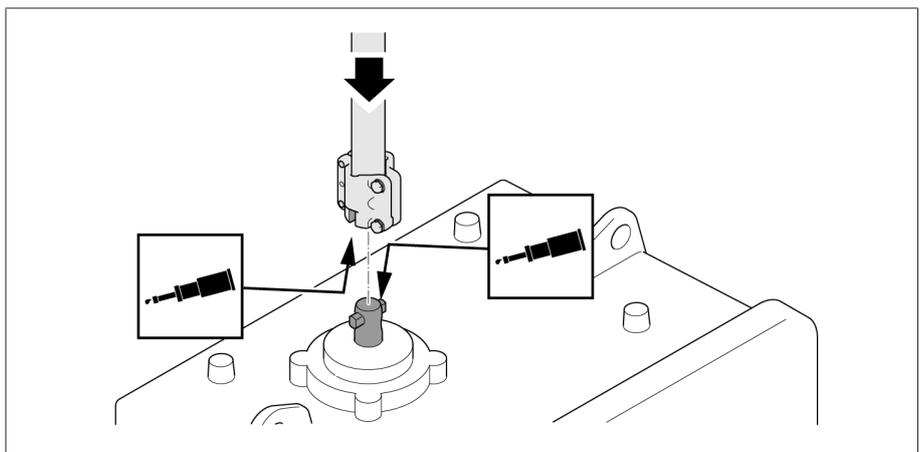


Figure 227: Sliding square tube with coupling part onto shaft end

7. Attach square tube to drive.

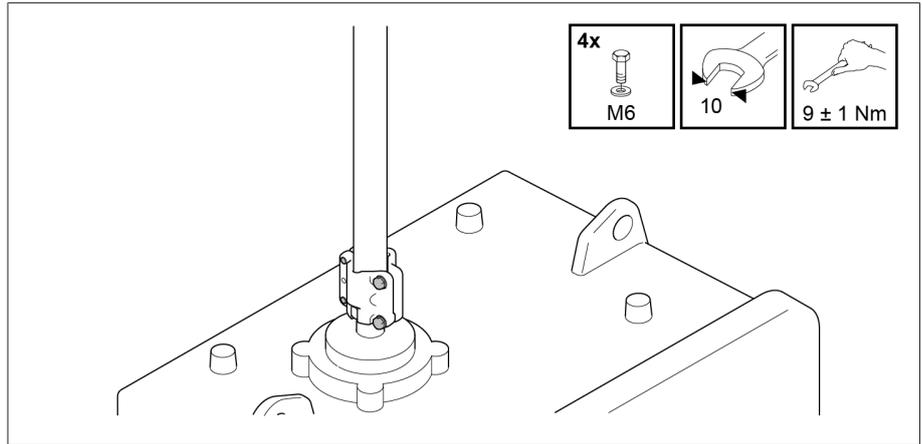


Figure 228: Attaching square tube to drive

8. Pivot square tube away from axis.

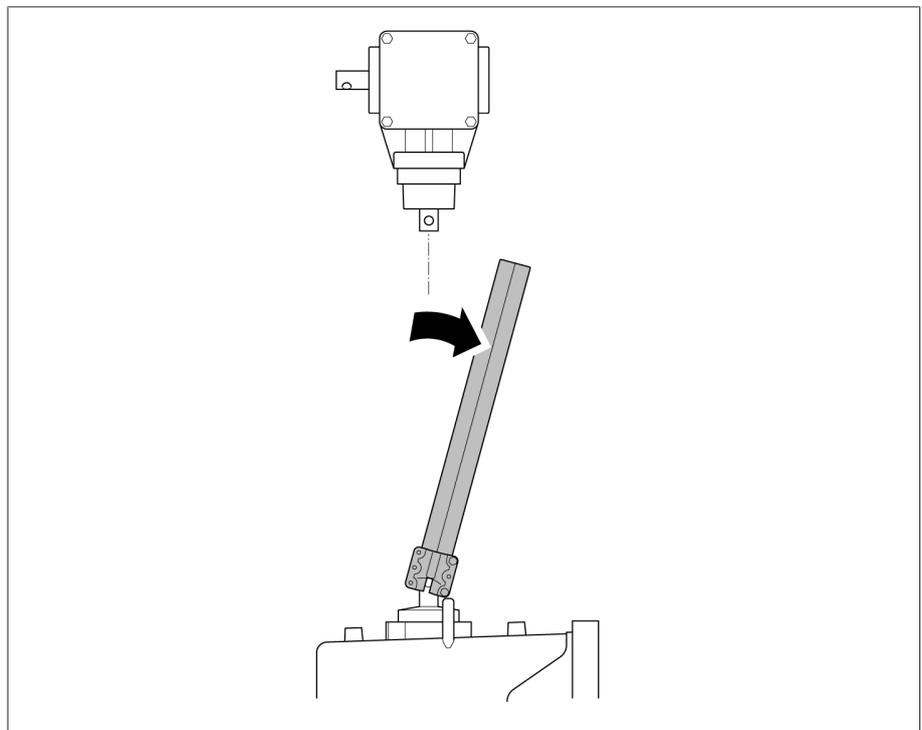


Figure 229: Pivoting square tube away from axis

9. When installing inner tube of telescopic protective tube, shorten on the side without slots if necessary. The minimum dimension for overlapping the two protective tubes is 100 mm.



Inner tube must not be deformed and must be deburred in order to slide easily in the outer tube.

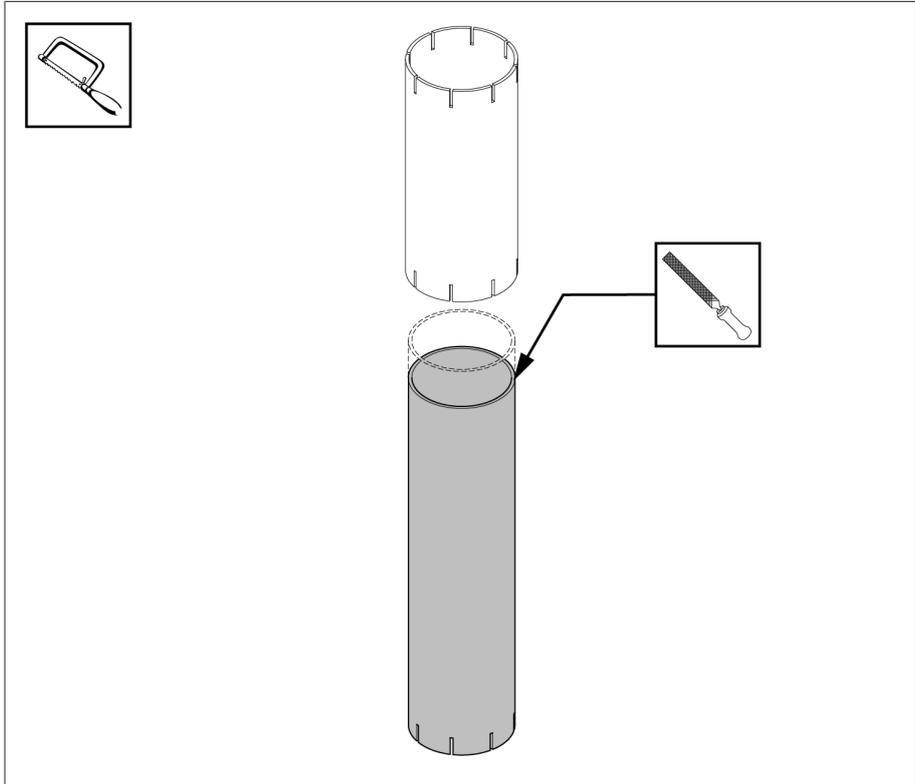


Figure 230: Deburring inner tube

Dimension A (= distance between shaft end of drive and shaft end of bevel gear)	Inner tube	Outer tube
170 mm...190 mm	Shorten to 200 mm	= 200 mm
191 mm...1,130 mm	Dimension A + 20 mm	= 200 mm
1,131 mm...1,598 mm	= 700 mm	= 1,150 mm
1,599 mm...2,009 mm	= 1,150 mm	= 1,150 mm

- Slide outer tube over inner tube. When doing so, make sure that the non-slotted side of the inner tube is facing upwards. Slide telescopic protective tube onto square tube. Then slide hose clips over telescopic protective tube.

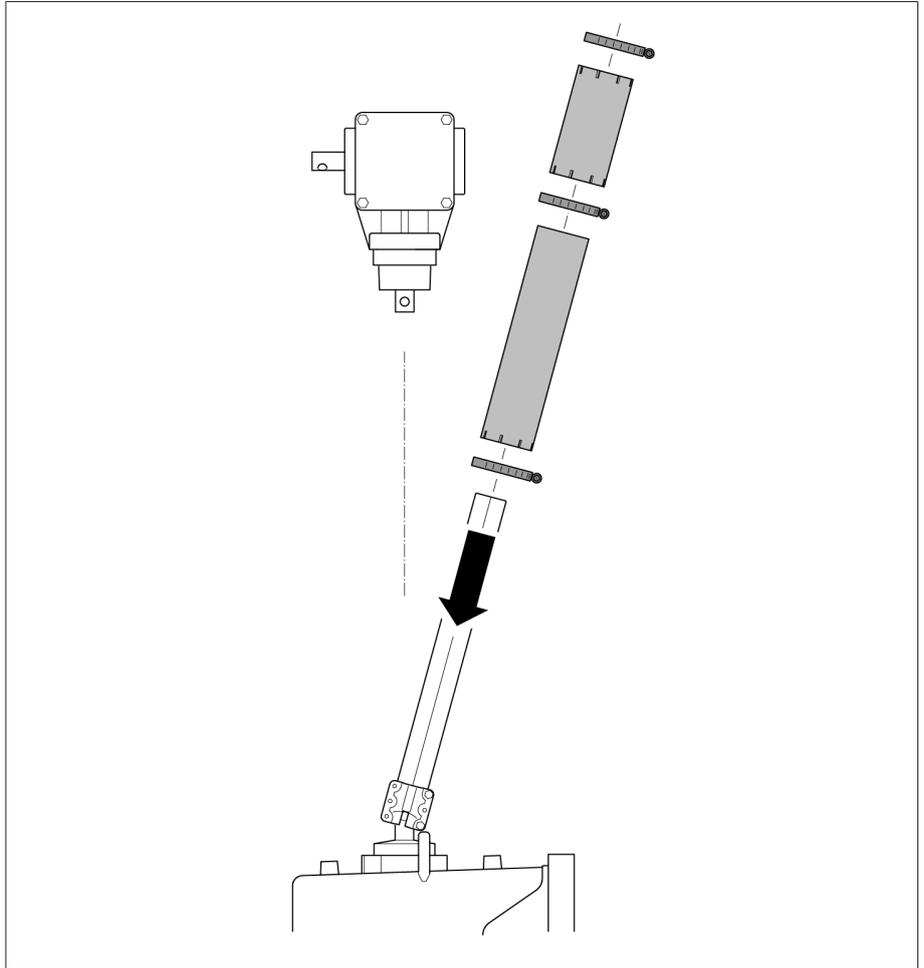


Figure 231: Sliding on telescopic protective tube

- Place adapter ring over bearing collar of bevel gear and slide upwards. Insert coupling bolt into shaft end of bevel gear. Pivot square tube back to axis.

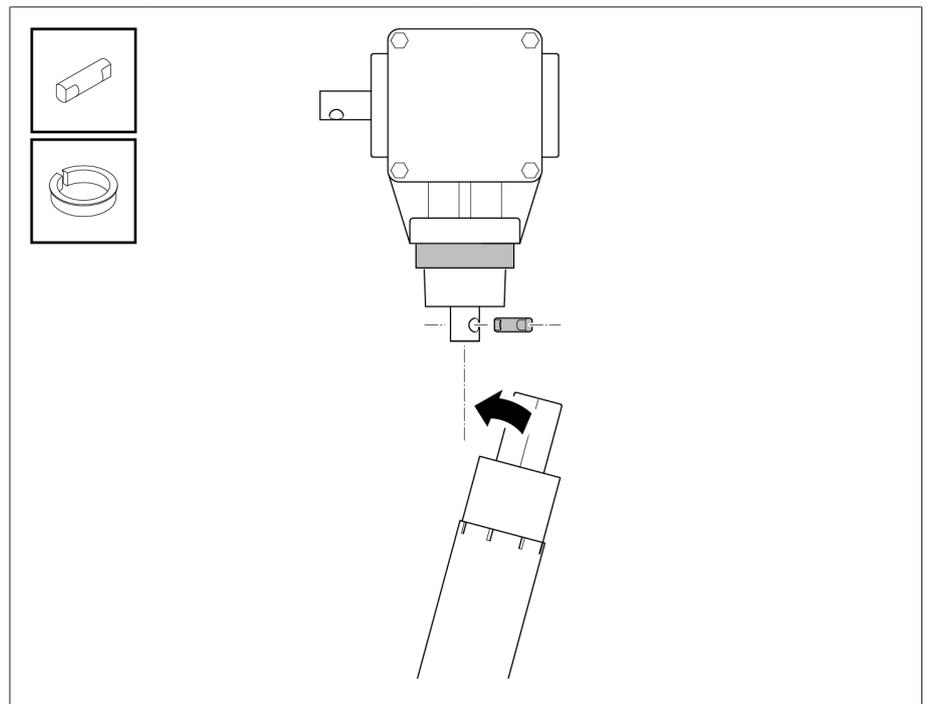


Figure 232: Fitting adapter ring and coupling bolt

- Grease coupling brackets, coupling bolt and shaft end (e.g. ISOFLEX TOPAS L32) and secure square tube with coupling brackets on the bevel gear. Set a unilateral axial clearance of 3 mm between the coupling bolt and upper coupling piece.

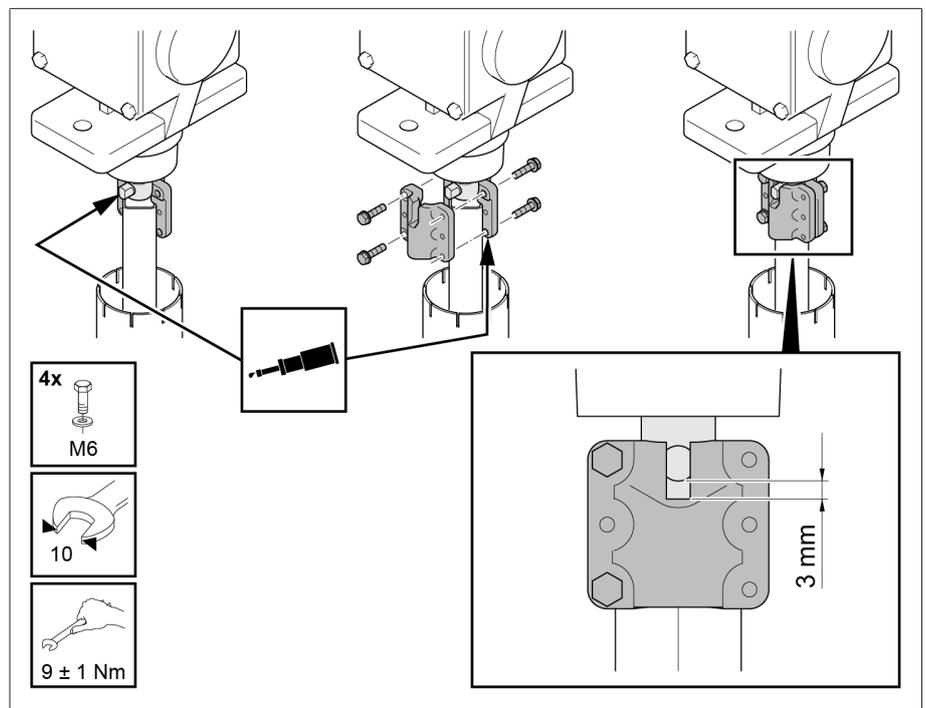


Figure 233: Mounting coupling brackets

- Attach bottom protective tube (inner tube) with a hose clip to bearing collar of drive **1**. Then slide upper protective tube (outer tube) over adapter ring on bevel gear **2**. Secure upper protective tube to bottom protective tube with hose clip both at top end and at the connection point **3**.

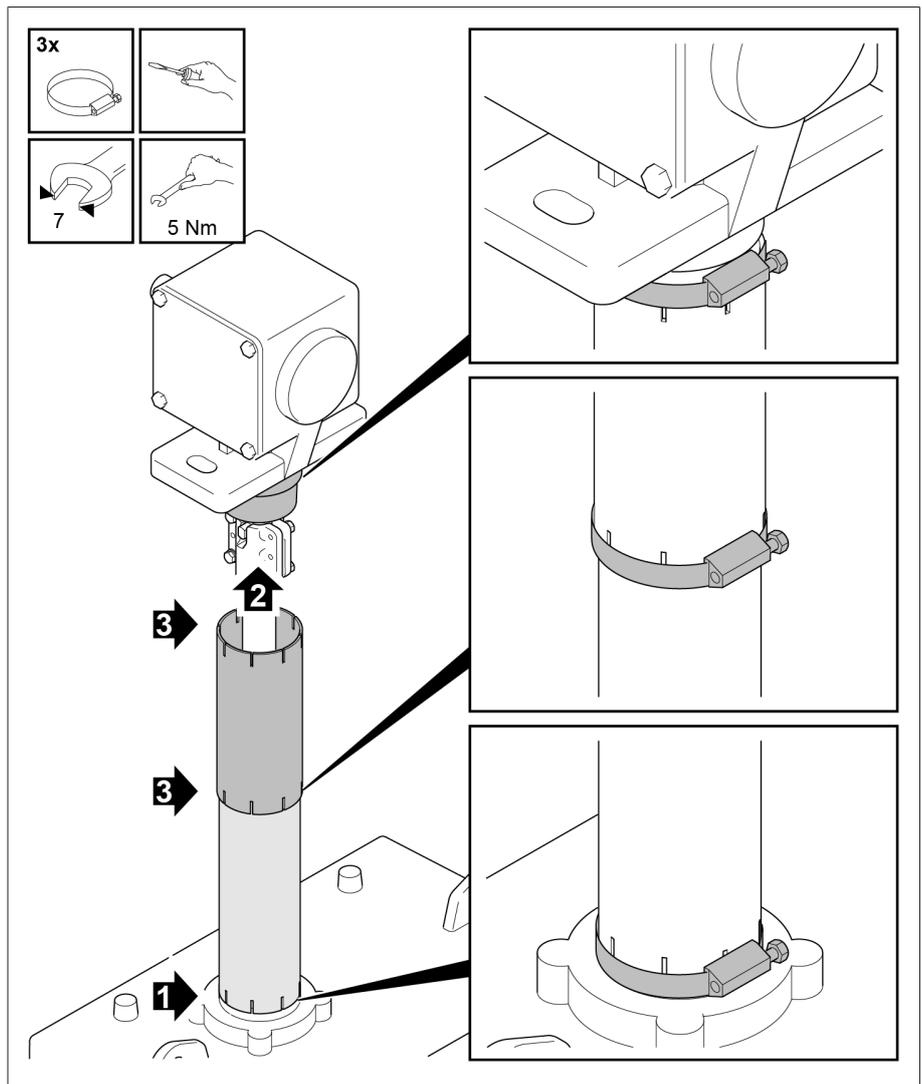


Figure 234: Mounting protective tube

### 5.4.6.2 Fitting a horizontal drive shaft without cardan joints

#### Permitted axial displacement

Minor axial displacements of the horizontal drive shaft are permitted as long as they do not exceed 35 mm per 1000 mm of square tube length (this corresponds to 2°).

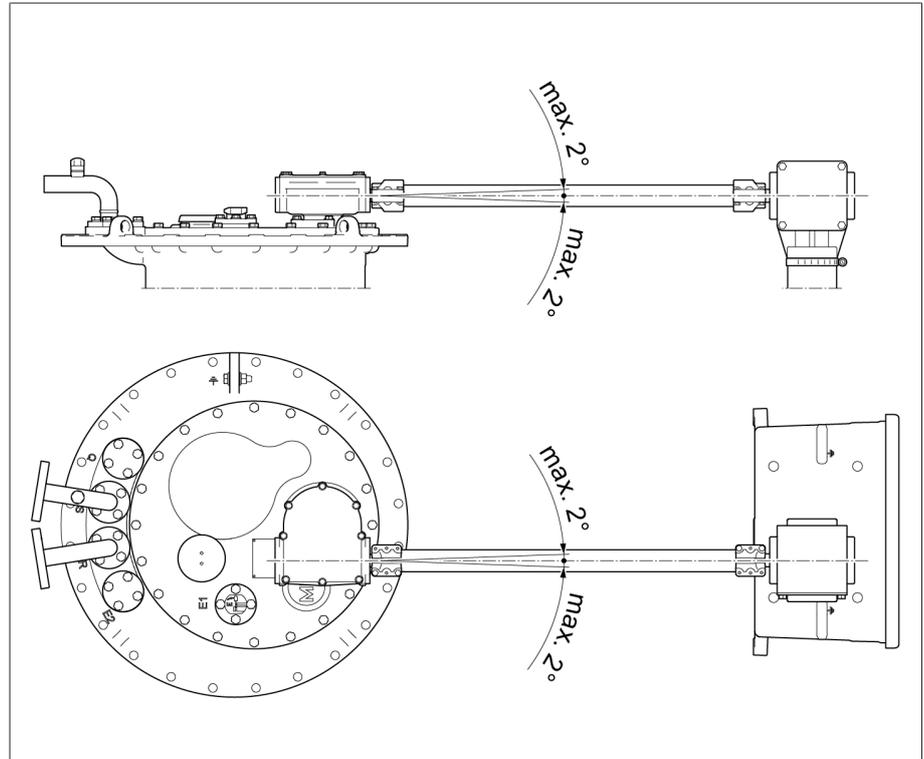


Figure 235: Permitted maximum axial displacement of horizontal drive shaft without cardan joint

#### Aligning upper gear unit on the on-load tap-changer head

In order to correctly install the horizontal drive shaft, under certain circumstances you may have to first align the upper gear unit so that the upper gear unit is flush with the bevel gear. With a multi-column on-load tap-changer model, it may also be necessary to align the upper gear units in the individual on-load tap-changer columns with each other in order to couple the on-load tap-changer columns together.

To do so, proceed as follows:

1. **NOTICE!** Damage to the on-load tap-changer due to alignment of the gear unit when the oil compartment is not completely full. Ensure that the oil compartment is filled completely with insulating fluid.
2. Loosen screws and turn pressure ring segments to one side.

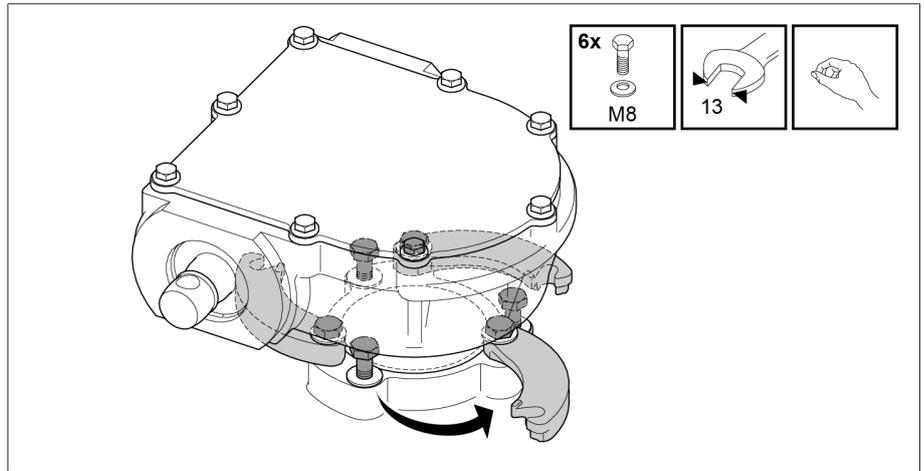


Figure 236: Pressure ring segments

3. **NOTICE!** Damage to the on-load tap-changer due to incorrect alignment of the upper gear unit. Align the gear unit so that the horizontal drive shaft is flush with the drive shaft of the gear unit. While aligning the gear unit, turn the unit's drive shaft so that its output shaft retains its original position.

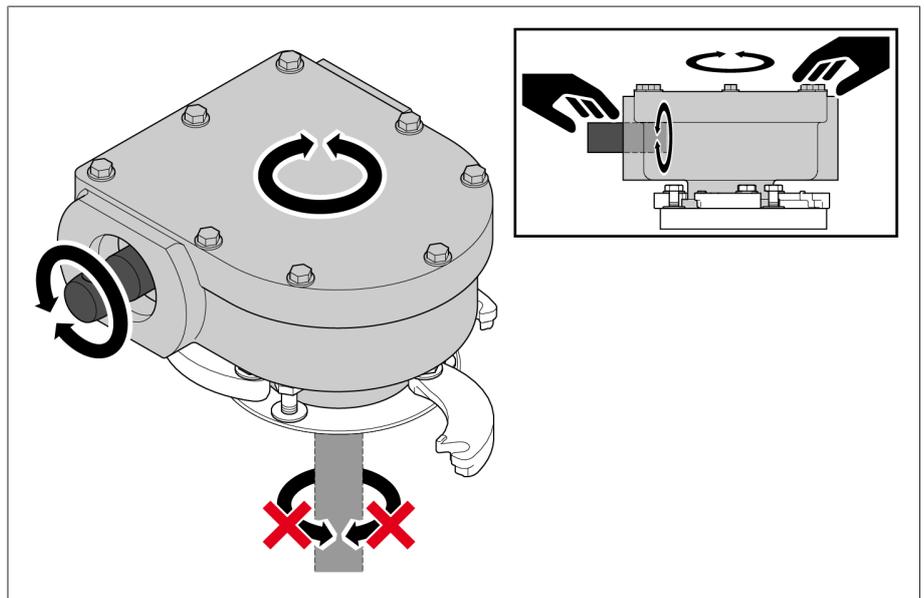


Figure 237: Aligning the gear unit

- Swivel pressure ring segments back towards the gear unit and tighten the screws. Ensure that the locking washer is between the screw head and the pressure ring segment and that the pressure ring segments are firmly in contact with the gear unit housing.

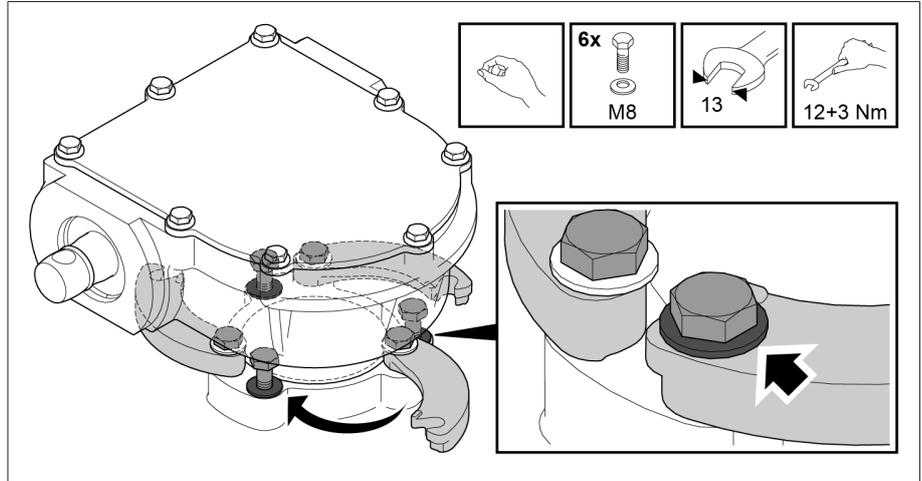


Figure 238: Securing the pressure ring segments

### Aligning upper gear unit on the de-energized tap-changer head

In order to correctly install the horizontal drive shaft, under certain circumstances you may have to first align the upper gear unit such that the horizontal drive shaft is flush with the shaft end of the upper gear unit.

To do so, proceed as follows:

- Loosen screws and turn pressure ring segments to one side.

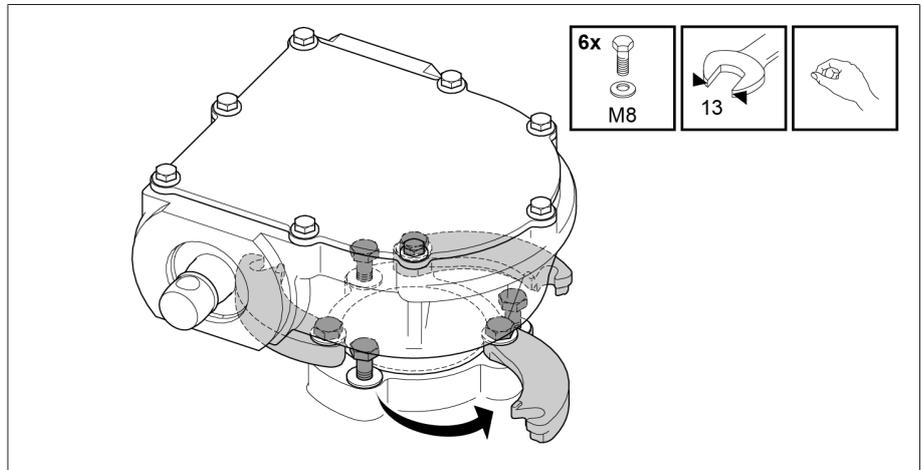


Figure 239: Pressure ring segments

2. **NOTICE!** Align gear unit such that the horizontal drive shaft is flush with the drive shaft of the gear unit. While aligning the gear unit, turn the unit's drive shaft such that its output shaft retains its original position. Failure to do so may result in damage to the de-energized tap-changer and transformer when starting up.

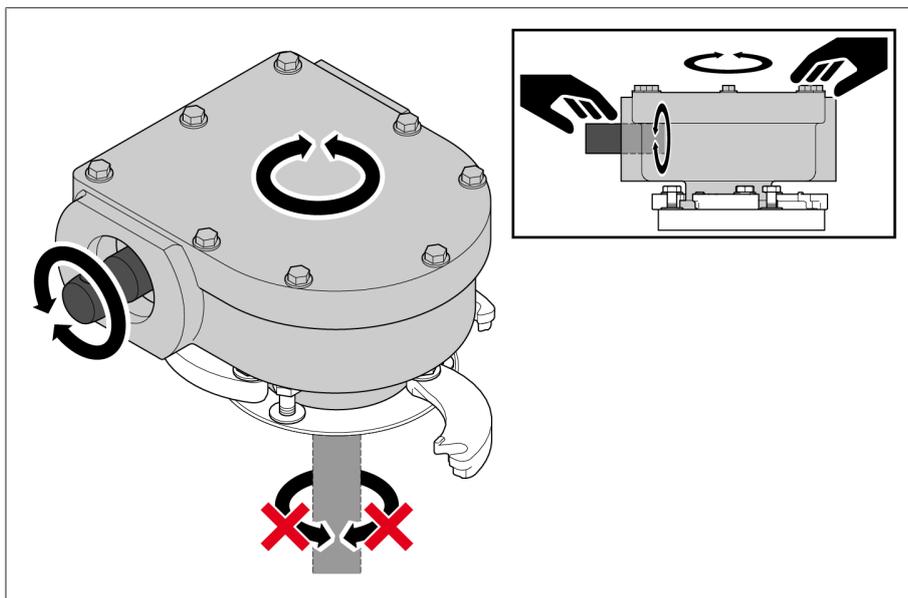


Figure 240: Aligning gear unit

3. Swivel pressure ring segments back towards gear unit and tighten screws. Ensure that the locking washer is between the screw head and pressure ring segment and that the pressure ring segments are firmly in contact with the gear unit housing.

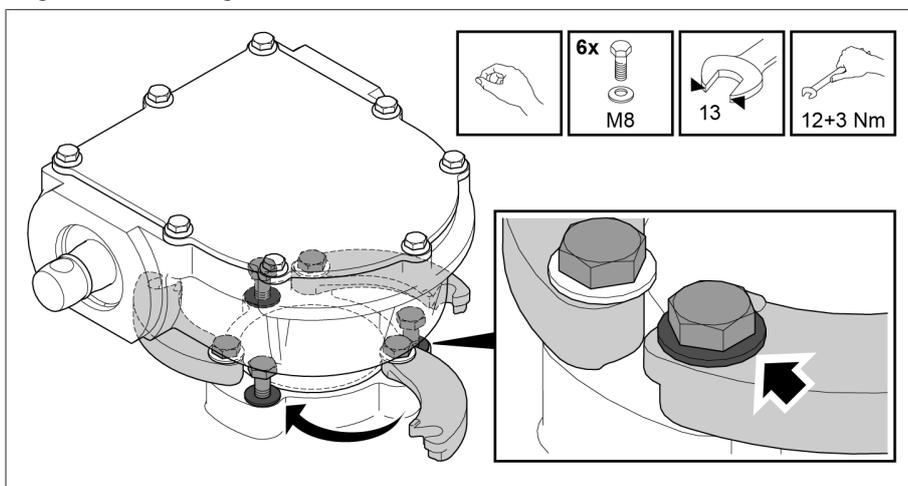


Figure 241: Securing pressure ring segments

### Aligning upper gear unit on the COMTAP® ARS head

In order to correctly install the horizontal drive shaft, under certain circumstances you may have to first align the upper gear unit such that the horizontal drive shaft is flush with the shaft end of the upper gear unit.

To do so, proceed as follows:

1. Loosen screws and turn pressure ring segments to one side.

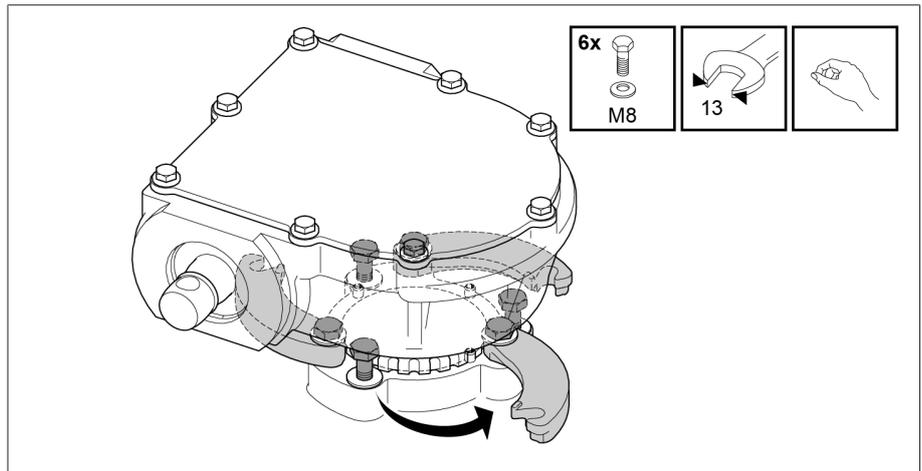


Figure 242: Pressure ring segments

2. Pull the gear unit upwards approx. 10-12 mm out of the locking range of the retention pins.

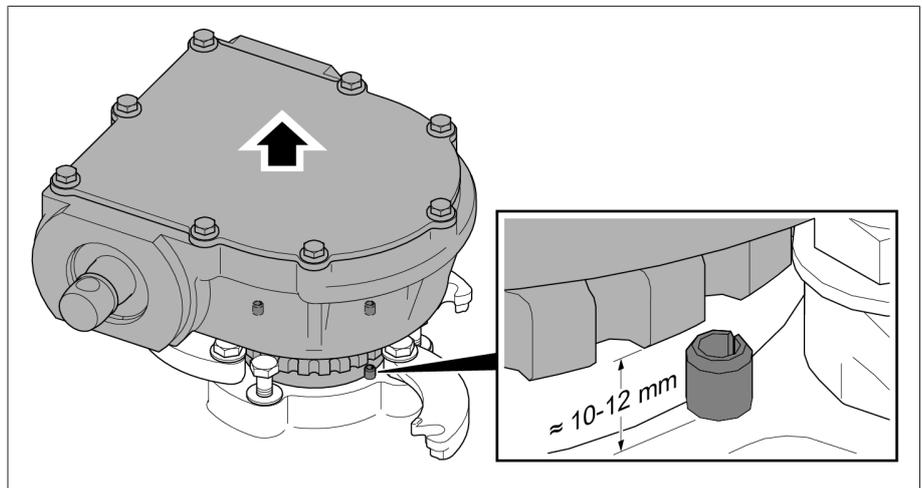


Figure 243: Retention pin

3. **NOTICE!** Align gear unit such that the horizontal drive shaft is flush with the drive shaft of the gear unit. While aligning the gear unit, turn the unit's drive shaft such that its output shaft retains its original position. Failure to do so

may result in damage to the de-energized tap-changer and transformer when starting up. Due to the retention pins and the grooves in the housing of the gear unit, fastening is possible only in 15° steps.

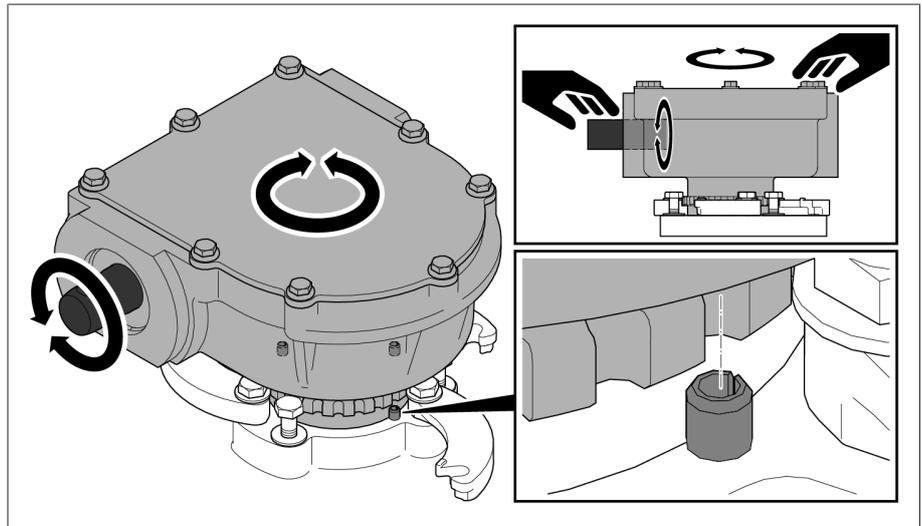


Figure 244: Aligning gear unit

4. Press the gear unit down until it again makes contact with the COM-TAP® ARS head. Ensure that the retention pin engages in one of the grooves in the housing of the gear unit.

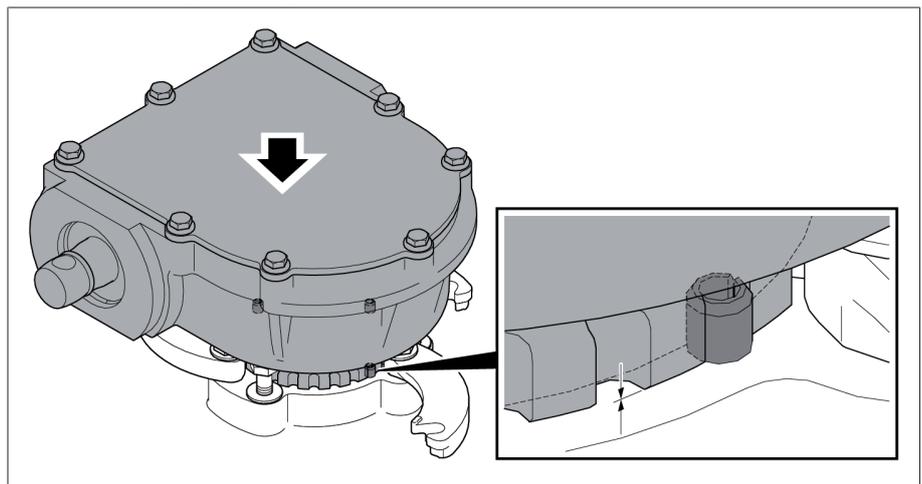


Figure 245: Pressing down gear unit

- Swivel pressure ring segments back towards gear unit and tighten screws. Ensure that the locking washer is between the screw head and pressure ring segment and that the pressure ring segments are firmly in contact with the gear unit housing.

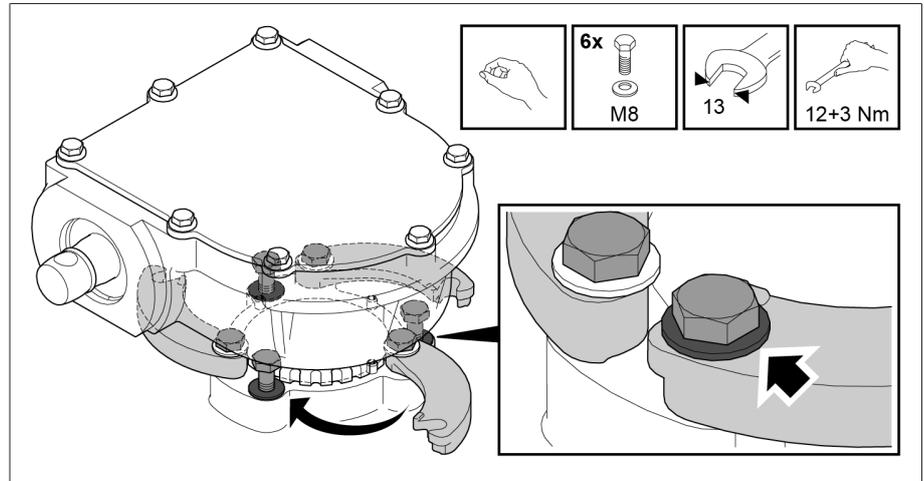


Figure 246: Securing pressure ring segments

### Fitting horizontal drive shaft

- You can turn the temperature sensor if this is necessary for fitting the drive shaft.

To fit the horizontal drive shaft, proceed as follows.

- Calculate dimension A between the shaft end of the upper gear unit and the shaft end of the bevel gear and shorten the square tube to length  $A - 9$  mm.

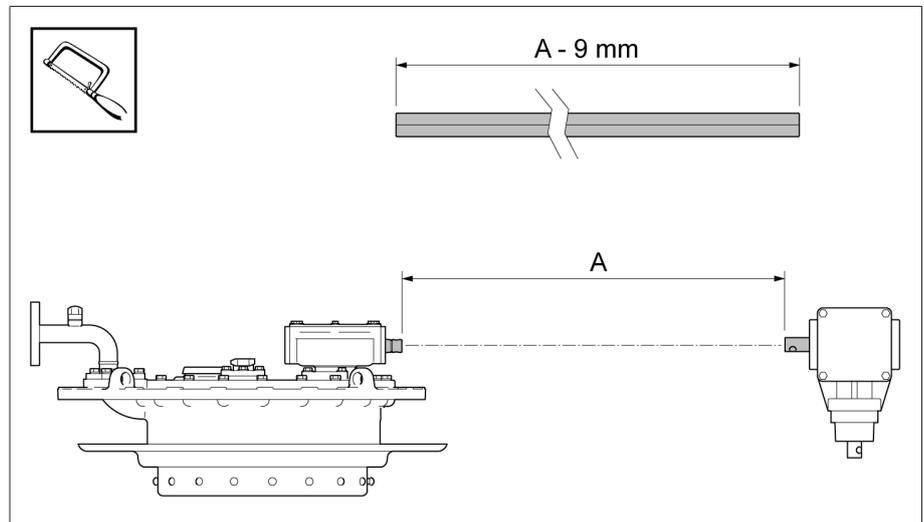


Figure 247: Shortening the square tube

2. Calculate inside width  $B$  between the housings of the upper gear unit and the bevel gear. Cut down the protective cover to  $B - 2$  mm and deburr the cut edges. Protect the protective cover against corrosion with a coat of paint.

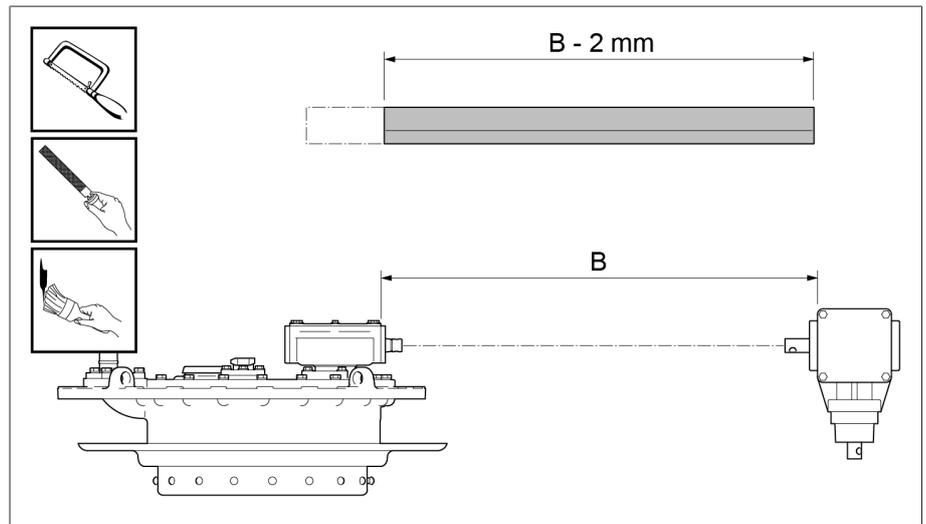


Figure 248: Shortening, deburring, and coating protective cover

3. Slide the loosely screwed-together coupling part onto the square tube until the stop is reached.

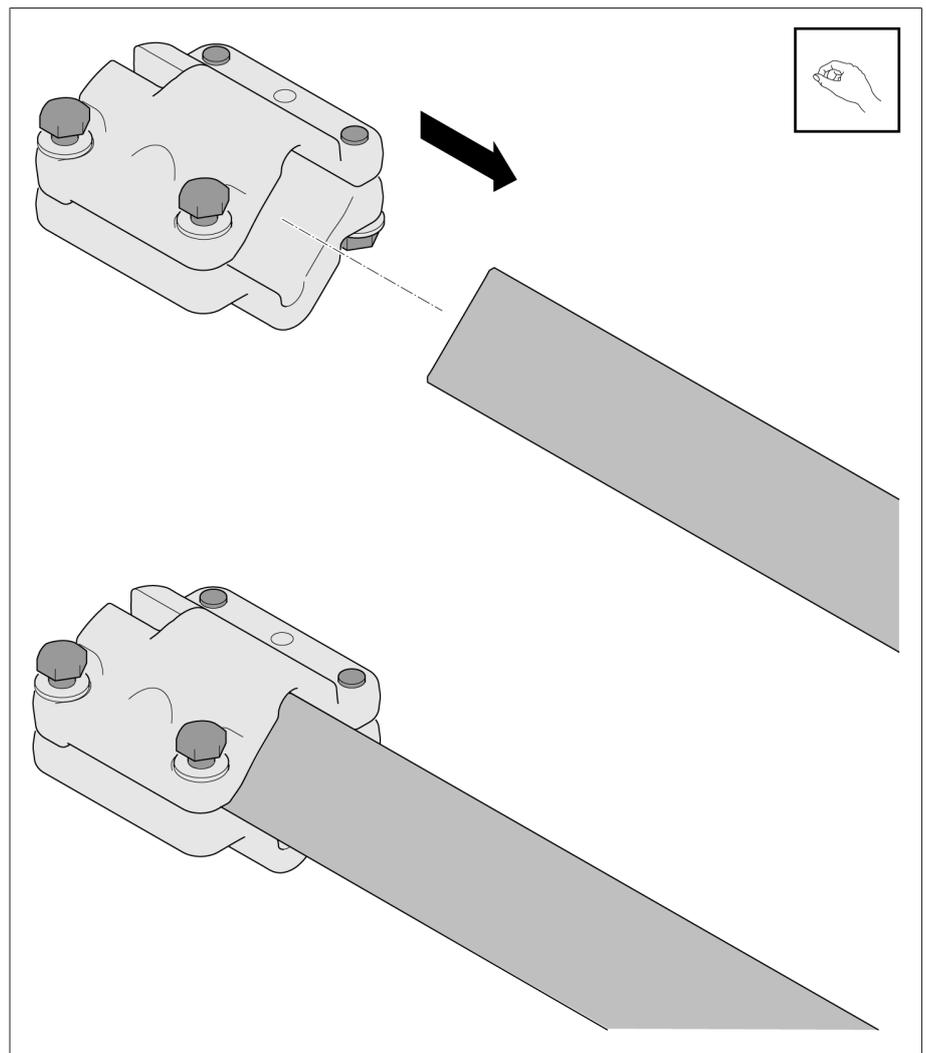


Figure 249: Sliding coupling part onto square tube

4. Grease the coupling bolt, coupling part and shaft end of the bevel gear (e.g. ISOFLEX TOPAS L32) and insert the coupling bolt into shaft end. Thread the hose clip onto the square tube and slide the square tube with the coupling part onto the shaft end.

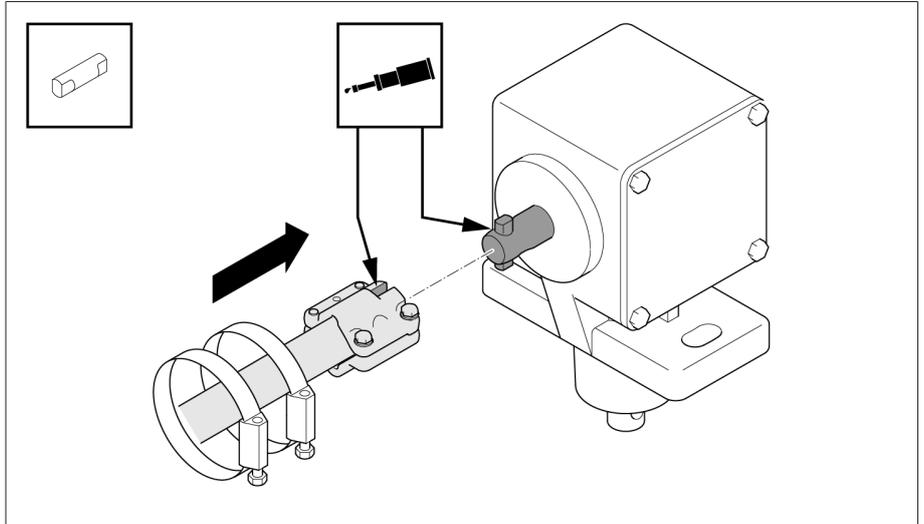


Figure 250: Sliding the square tube with the coupling part onto the shaft end

5. Secure square tube on bevel gear.

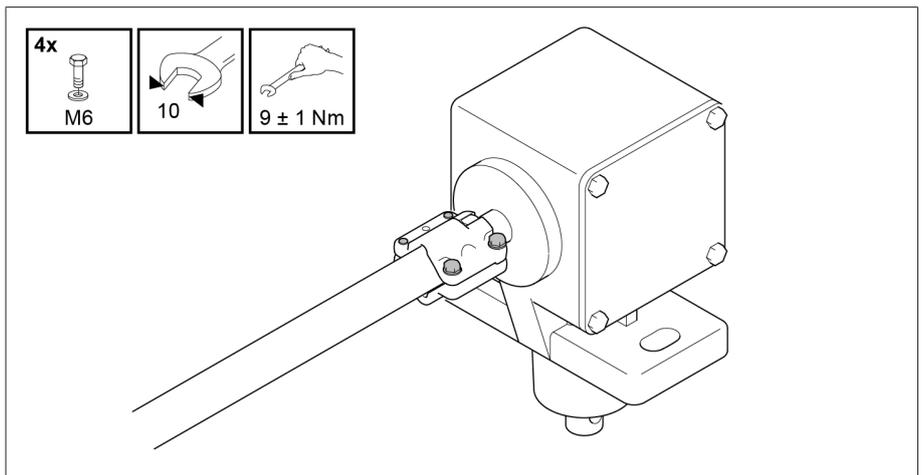


Figure 251: Securing the square tube on the bevel gear

6. Grease the coupling bolt, the coupling brackets and the shaft end of the upper gear unit (e.g. ISOFLEX TOPAS L32) and insert the coupling bolt into the shaft end. Secure the square tube with the coupling brackets on the upper gear unit.

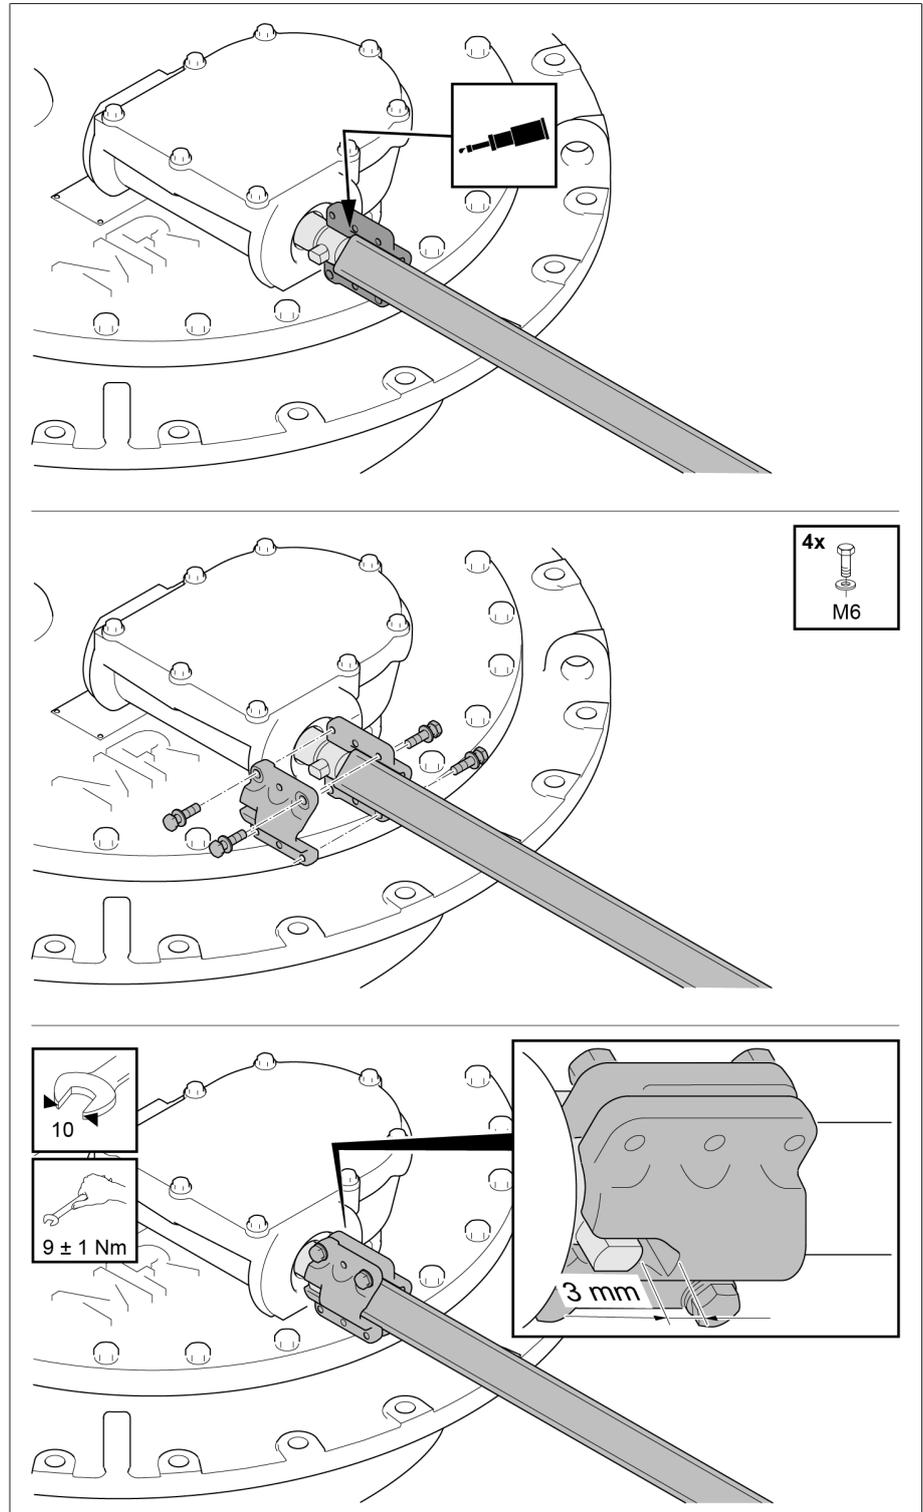


Figure 252: Secure the square tube on the upper gear unit.

- Attach the shortened protective cover to the housing lugs on the on-load tap-changer head and the bevel gear. Secure each end of the protective cover with a hose clip.

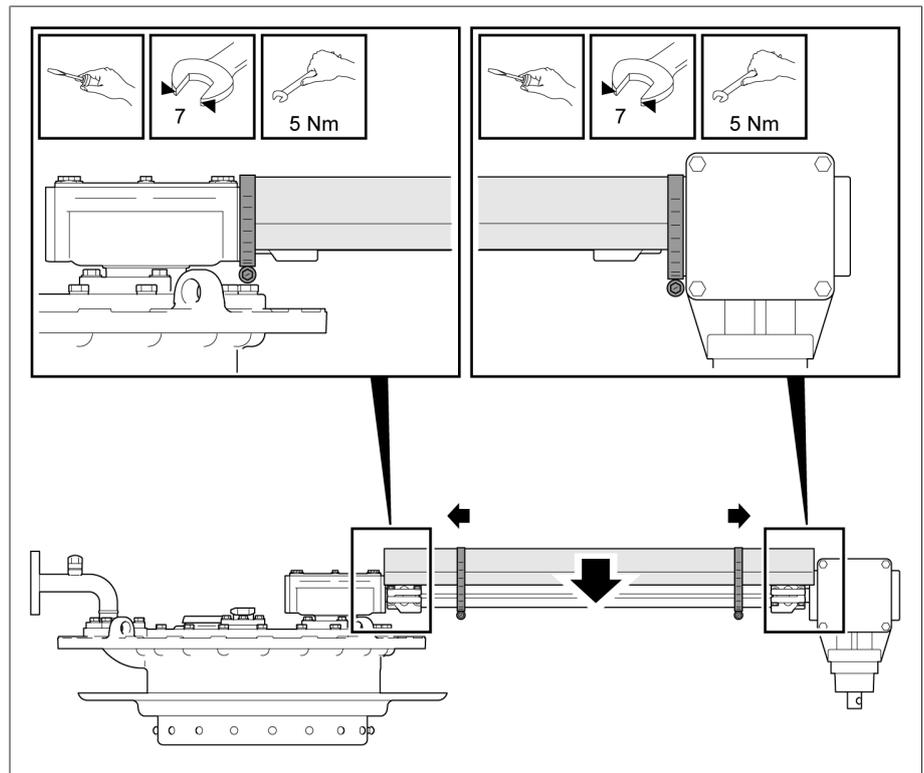


Figure 253: Fitting the protective cover

- If using a bearing block or angle gear, attach caps to the protective cover. Before attaching the caps, drill 3 holes on the shortened side of the protective cover and 2 holes on the un-shortened side (each with  $\text{Ø } 3.5 \text{ mm}$ ) using a hand drill with drill bit

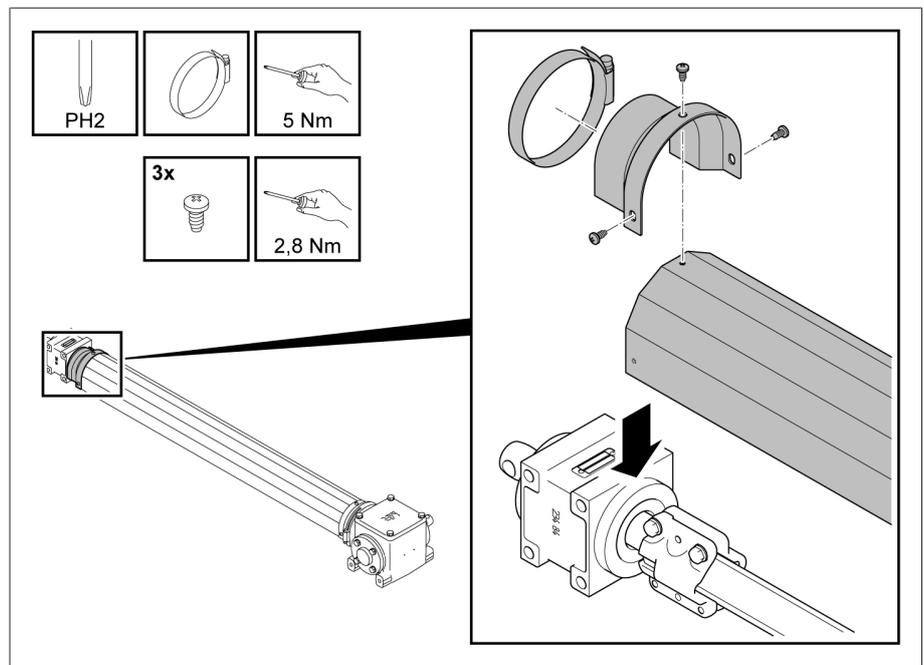


Figure 254: Bearing block caps

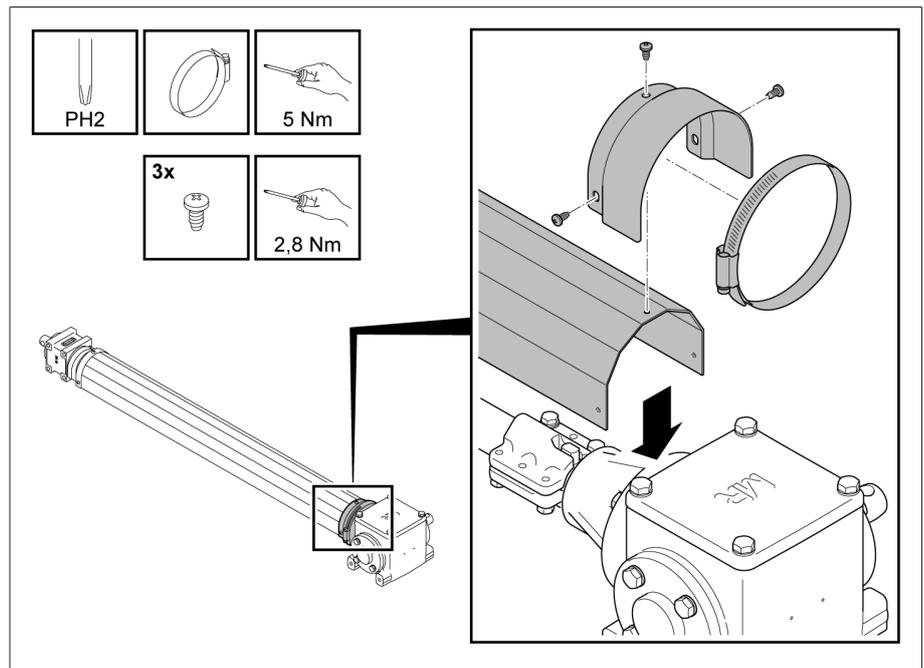


Figure 255: Angle gear caps

#### 5.4.6.2.1 On-load tap-changer sets and combinations

For two-column and three-column on-load tap-changer models, the individual on-load tap-changer columns can be driven by a common motor-drive unit or several motor-drive units.

Regardless of the number of on-load tap-changer columns and motor-drive units, all on-load tap-changer columns and motor-drive units must be in the same operating position and must switch simultaneously (does not apply for ABC switching sequence).

To make sure that the on-load tap-changer columns that are driven by a common motor-drive unit switch simultaneously, you must couple these on-load tap-changer columns with horizontal drive shafts via the transformer cover. The offset between these on-load tap-changer columns during switching may be a maximum of 1 tap-change indicator section.

To couple the on-load tap-changer columns, proceed as follows:

##### Aligning upper gear unit on the on-load tap-changer head

In order to correctly install the horizontal drive shaft, under certain circumstances you may have to first align the upper gear unit so that the upper gear unit is flush with the bevel gear. With a multi-column on-load tap-changer model, it may also be necessary to align the upper gear units in the individual on-load tap-changer columns with each other in order to couple the on-load tap-changer columns together.

To do so, proceed as follows:

1. **NOTICE!** Damage to the on-load tap-changer due to alignment of the gear unit when the oil compartment is not completely full. Ensure that the oil compartment is filled completely with insulating fluid.
2. Loosen screws and turn pressure ring segments to one side.

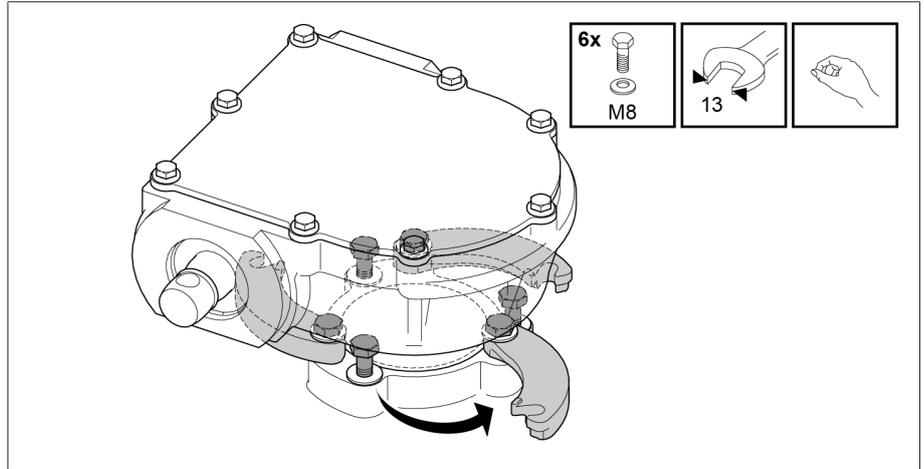


Figure 256: Pressure ring segments

3. **NOTICE!** Damage to the on-load tap-changer due to incorrect alignment of the upper gear unit. Align the gear unit so that the horizontal drive shaft is flush with the drive shaft of the gear unit. While aligning the gear unit, turn the unit's drive shaft so that its output shaft retains its original position.

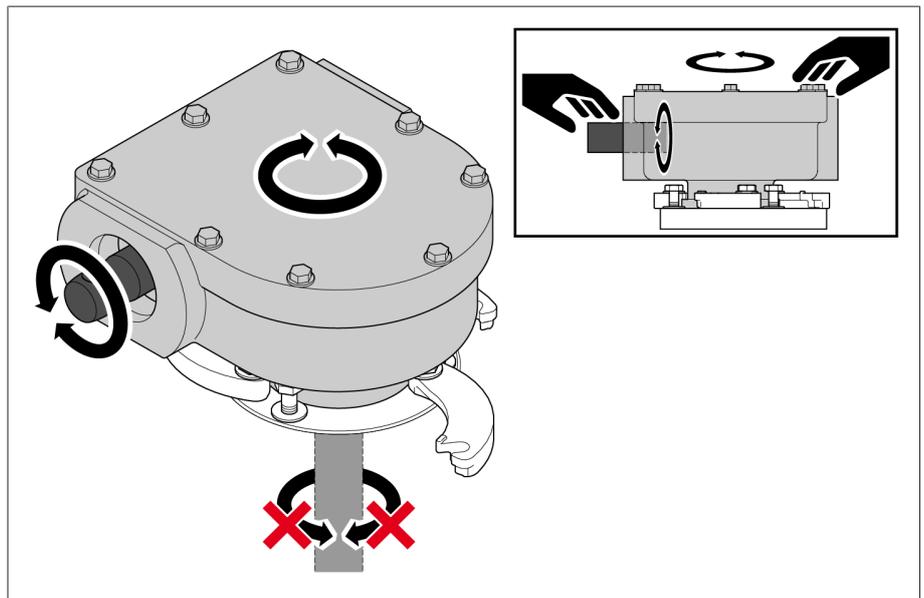


Figure 257: Aligning the gear unit

- Swivel pressure ring segments back towards the gear unit and tighten the screws. Ensure that the locking washer is between the screw head and the pressure ring segment and that the pressure ring segments are firmly in contact with the gear unit housing.

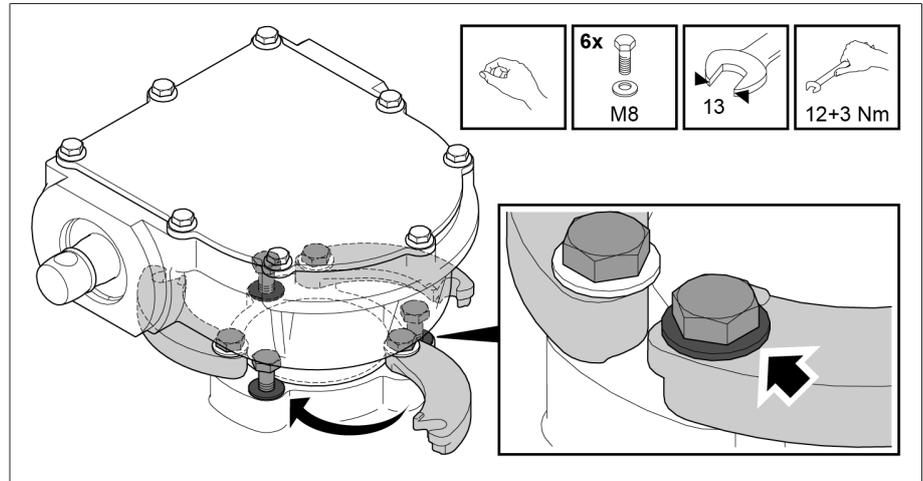


Figure 258: Securing the pressure ring segments

### Coupling the on-load tap-changer columns together

- Ensure that all arrows on the drive shaft flange under the stamped serial number point in the same direction. The direction of the arrow indicates the direction of rotation when turning the hand crank of the motor-drive unit clockwise.
- Switch the on-load tap-changer columns one after another to the next operating position. To do so, turn the shaft end on each gear unit counter-clockwise one after another until the on-load tap-changer column switches position.

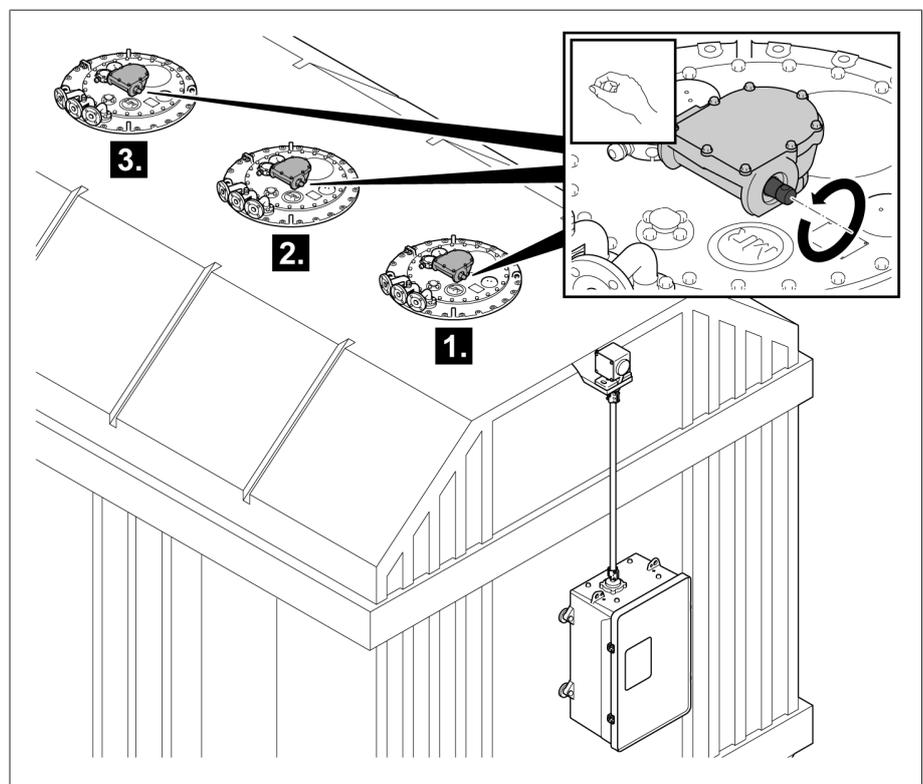


Figure 259: Manually switching the on-load tap-changer columns

- Check that all on-load tap-changer columns are in the same position.

4. Couple the on-load tap-changer columns together via horizontal drive shafts. When doing so, begin with the on-load tap-changer column that is closest to the motor-drive unit.

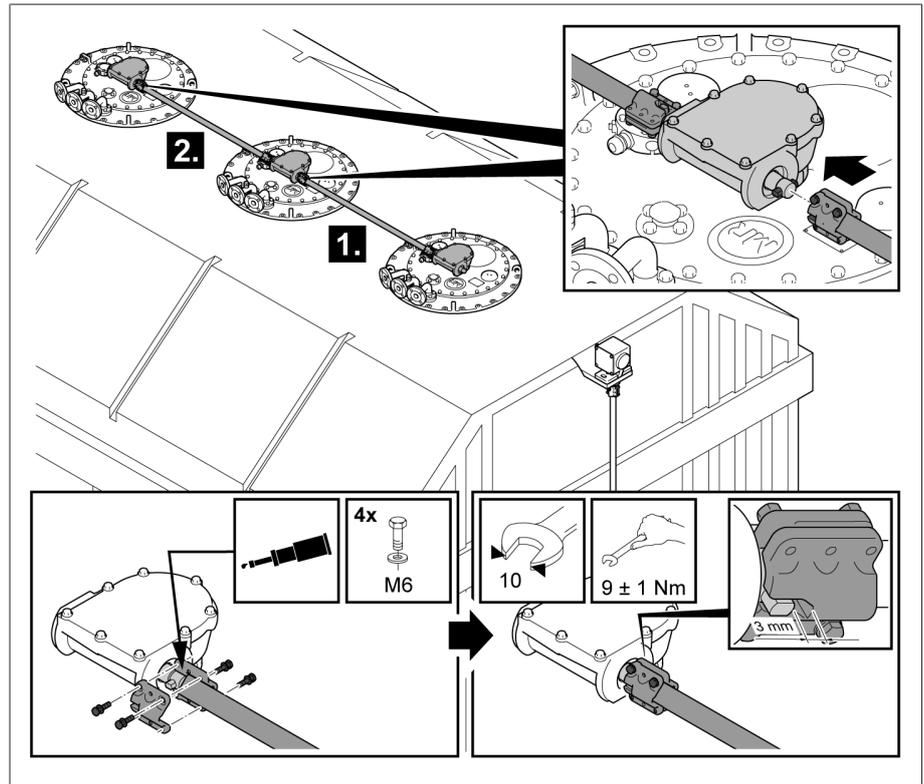


Figure 260: Coupling the on-load tap-changer columns

5. **NOTICE!** Damage to the on-load tap-changer columns due to incomplete tap-change operation. After installing all drive shafts, crank the drive shaft of the gear unit through a further 2.5 revolutions counter-clockwise to complete the tap-change operation fully.

- Switch the on-load tap-changer columns to the adjustment position by turning the drive shaft on the gear unit clockwise. Once the adjustment position has been reached and the on-load tap-changer columns have been switched, crank the drive shaft of the upper gear unit through another 2.5 revolutions clockwise to correctly complete the tap-change operation.

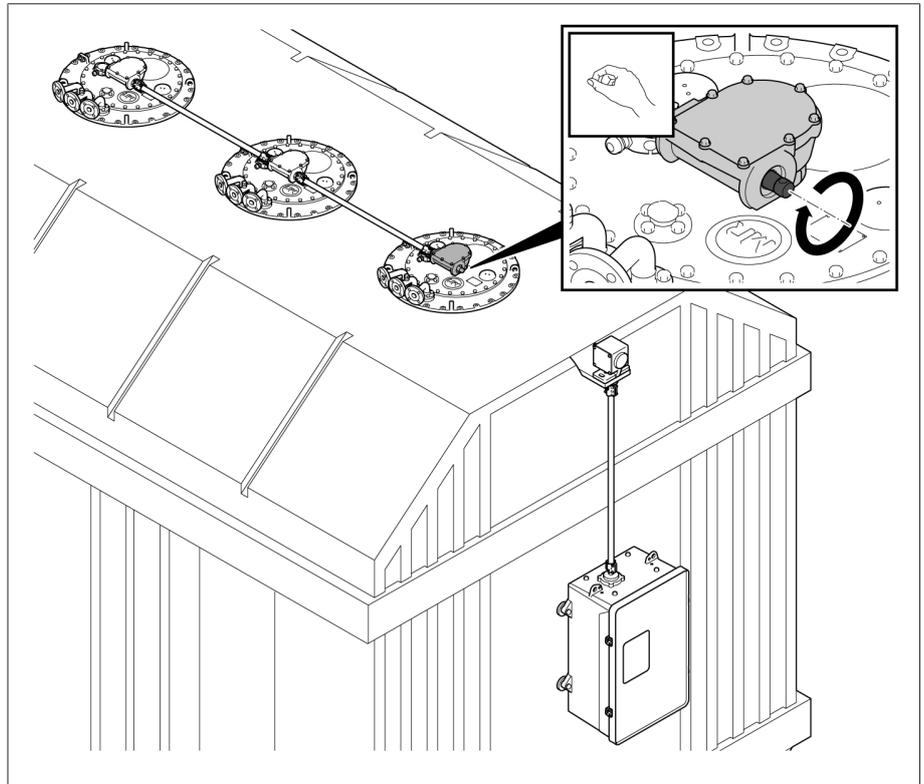


Figure 261: Switching the on-load tap-changer columns to the adjustment position

- Ensure that all on-load tap-changer columns switch simultaneously. Here, a minimal offset of max. 0.25 revolutions on the drive shaft of the gear unit is permitted.
- Check that all on-load tap-changer columns are in the same position.

9. Install the drive shaft between the bevel gear and the gear unit.

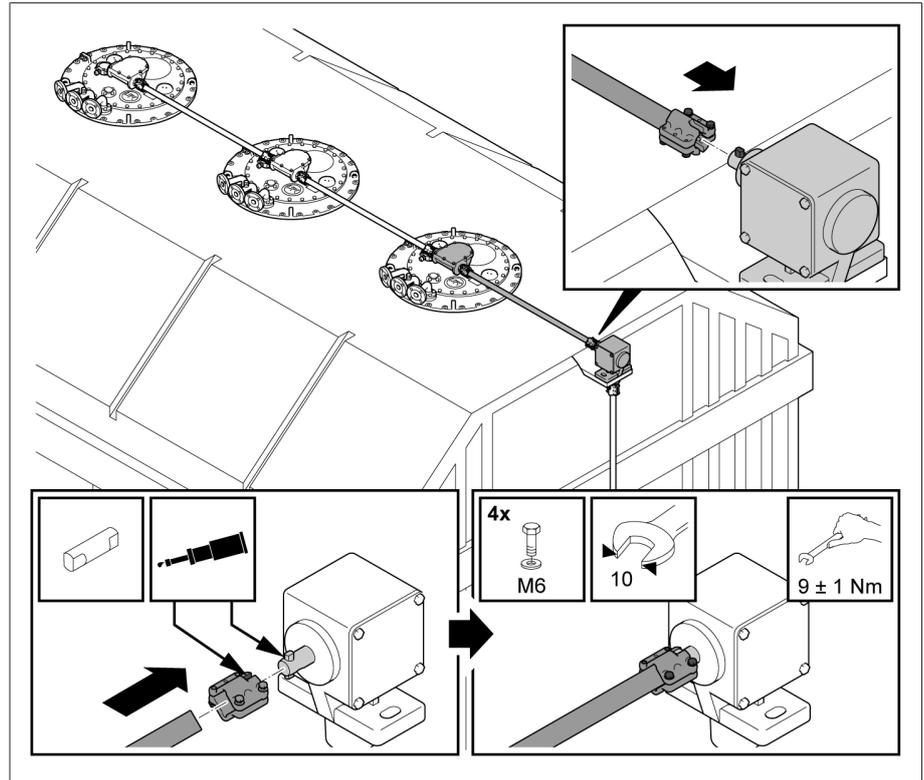


Figure 262: Installing the drive shaft between the bevel gear and the gear unit

#### 5.4.6.3 Fitting drive shaft with cardan joints

Installation of the drive shaft with cardan joints is mainly designed as a vertical drive shaft between motor-drive unit and bevel gear.

Technically, a horizontal design is also possible. However, if using a horizontal design, please note that the protective cover supplied must be adapted accordingly and a cardan joint with an inner hub diameter of 25 mm must be used if you want to use the cardan joint on the upper gear unit.

### Permitted axial displacements

An axial displacement of  $20^\circ$  is permitted for the vertical and horizontal drive shaft with cardan joints.

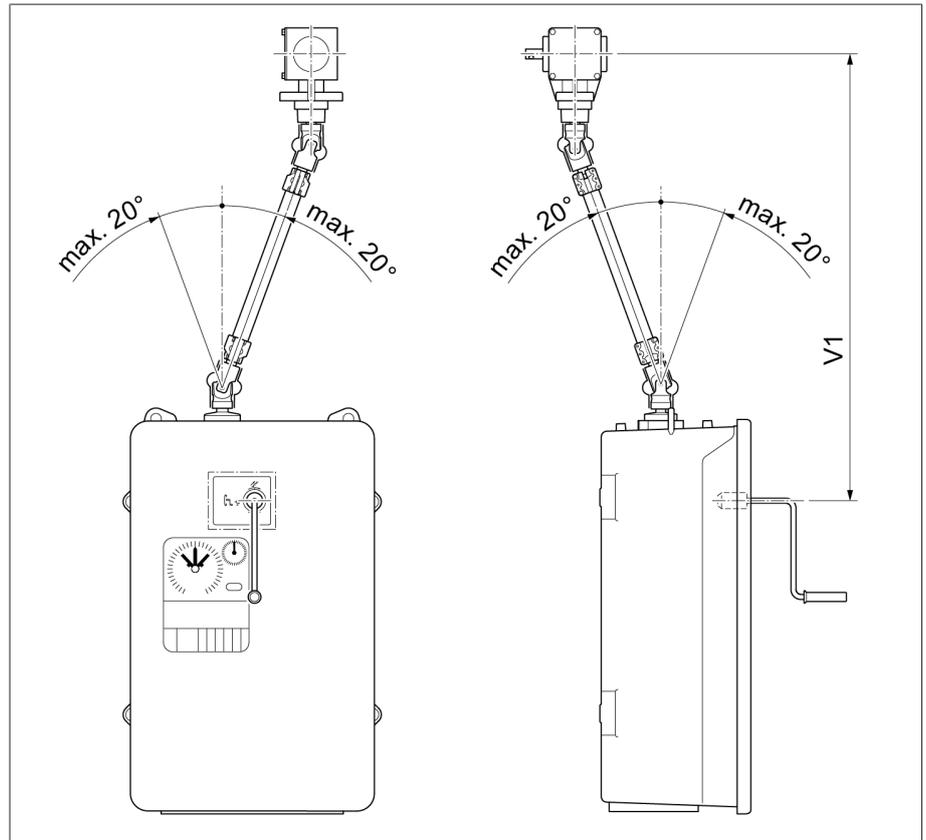


Figure 263: Permitted maximum axial displacement of vertical drive shaft with cardan joints

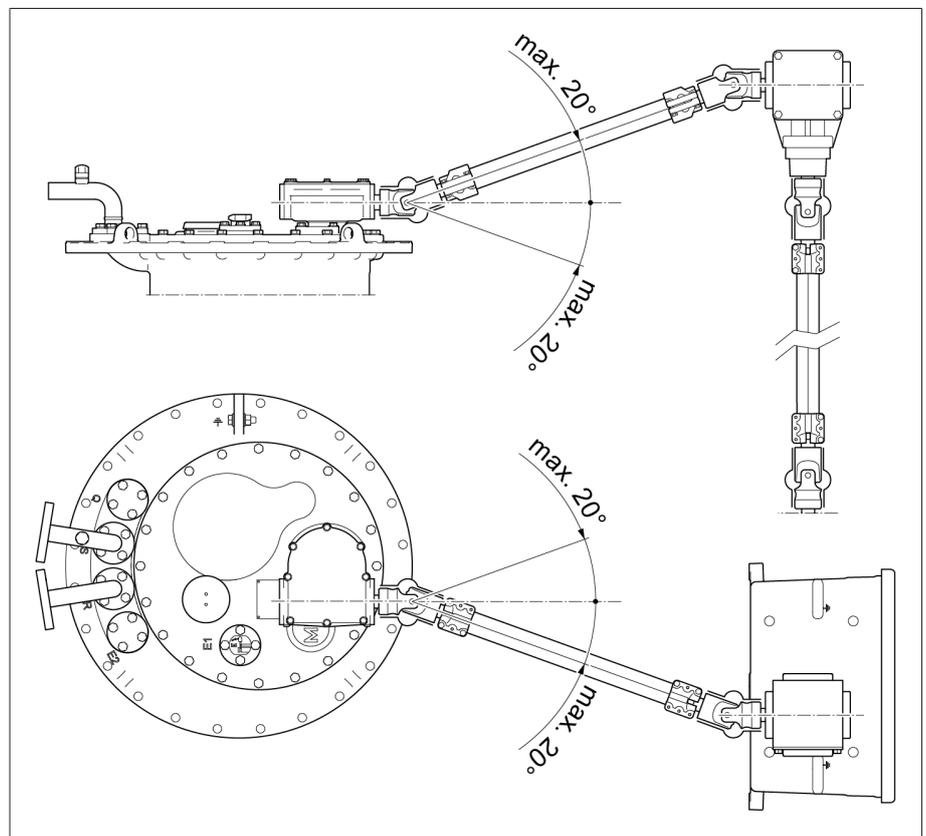


Figure 264: Permitted maximum axial displacement of horizontal drive shaft with cardan joints

## NOTICE

### Damage to property!

Improper mounting of the cardan joint may result in damage or malfunctions.

- > Ensure that the folding cardan joint does not damage the expansion bellows during mounting.
- > Ensure that the angle of deflection  $\alpha$  is no greater than  $20^\circ$ .
- > Ensure that the angle of deflection  $\alpha$  is the same on both cardan joints.

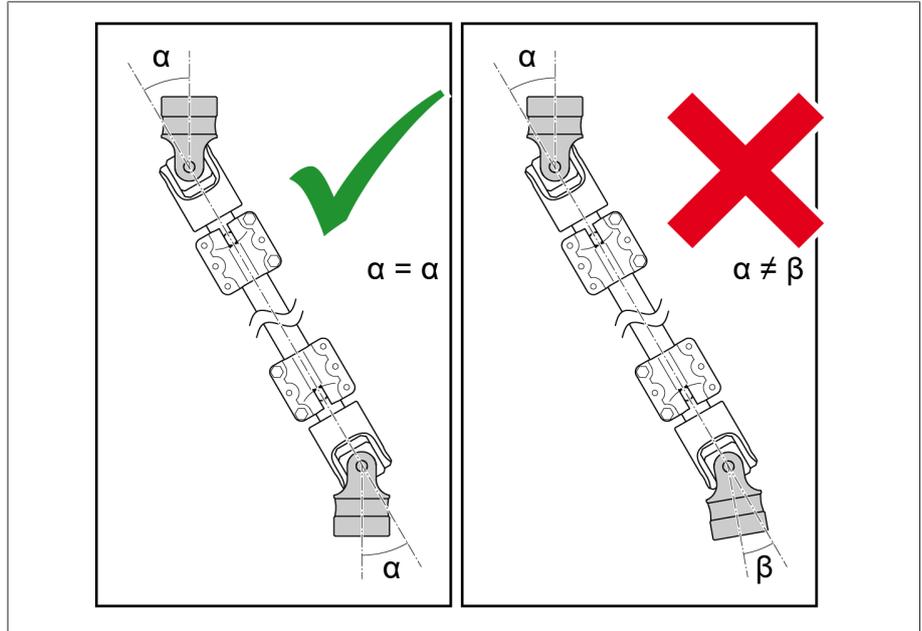


Figure 265: Angle of deflection  $\alpha$

To fit the drive shaft with cardan joints, proceed as follows:

1. Grease coupling bolts, coupling brackets, and shaft ends, e.g. ISOFLEX TOPAS L 32.

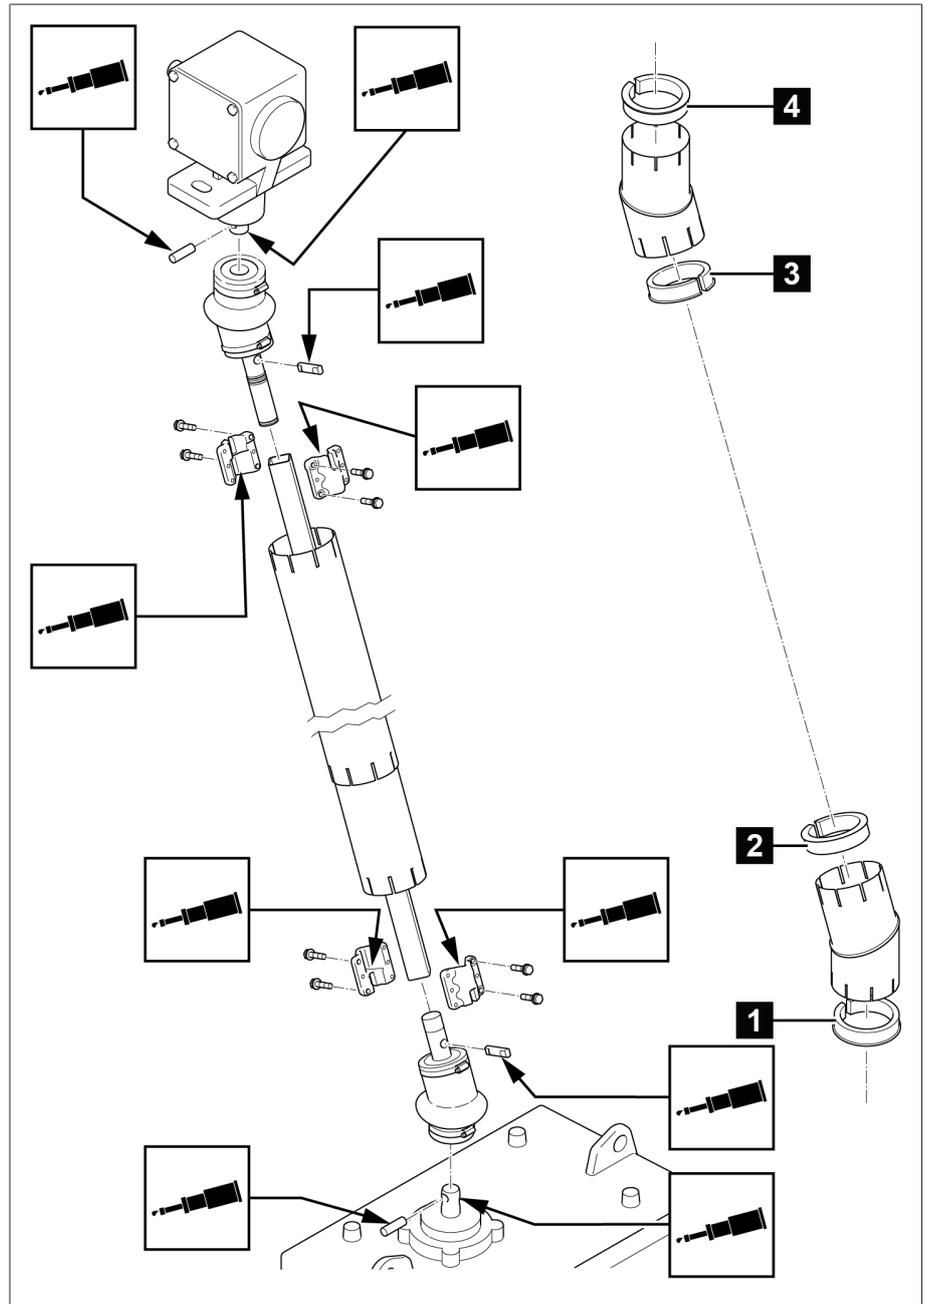


Figure 266: Greasing coupling bolts, coupling brackets, and shaft ends

Position	Name	Quantity
1 below on the ED	Adapter ring $\varnothing 82 \times 102$	1
2	Adapter ring $\varnothing 87 \times 102.5$	1
3	Adapter ring $\varnothing 94.5 \times 102.5$	1
4 above on the CD6400	Adapter ring $\varnothing 71 \times 102.5$	1

2. Insert adapter rings into the collar of the rotating protective tube **1**. Fit the two parts of pivotable protective tube together **2** and turn them towards one another **3** to set the corresponding angle.

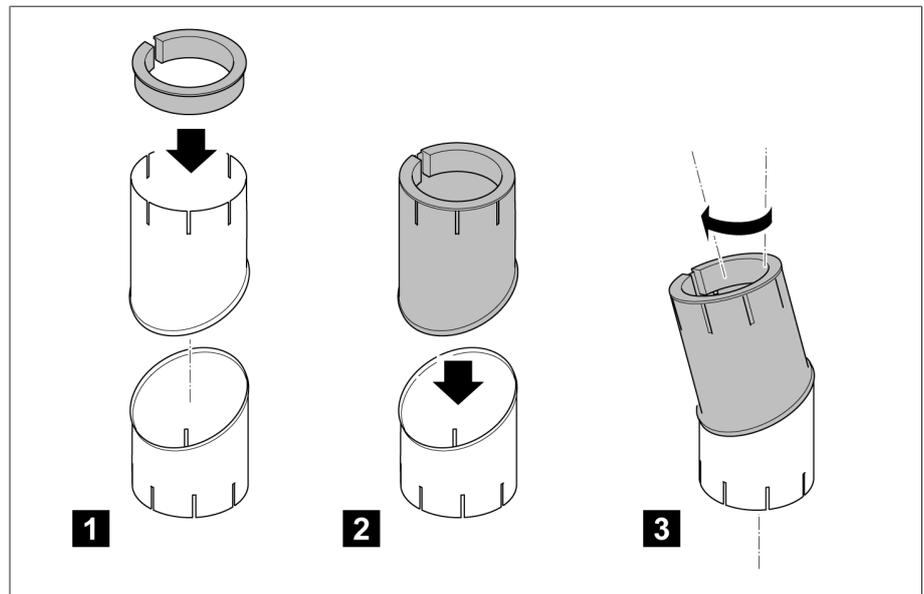


Figure 267: Inserting adapter in pivotable protective tubes

3. When supplied, the cardan joints are fitted with coupling bolts **1**. To mount on the shaft end, the following steps must be taken: Remove hose clip **2**. Slide up expansion bellows **3**. Remove coupling bolt **4**. Slide cardan joint over device's output shaft **5**. Push in coupling bolt **6**. Slide expansion bellows over this **7**. Secure expansion bellows with hose clip **8**.

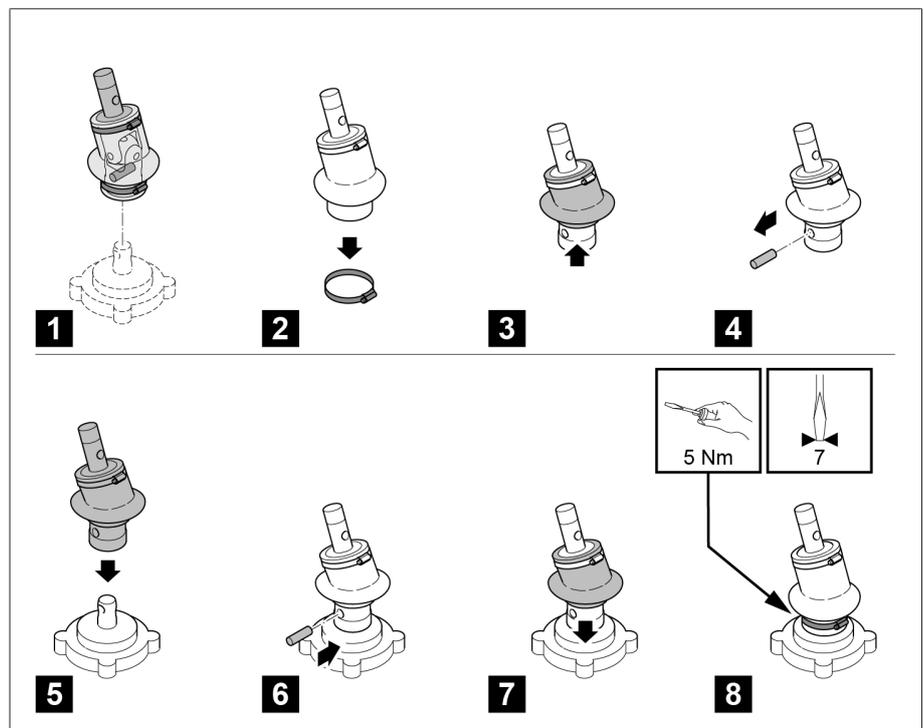


Figure 268: Mounting cardan joints

4. Connect shorter cardan joint supplied to shaft end of motor-drive unit with coupling bolt.

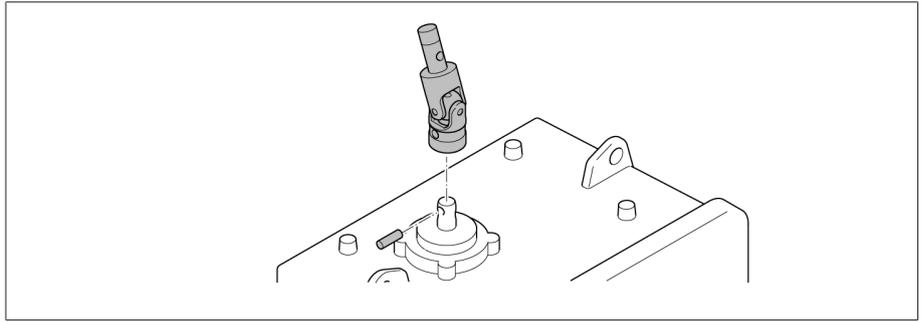


Figure 269: Attaching cardan joint on shaft end of motor-drive unit

5. **NOTICE!** Attach second, longer cardan joint to the bevel gear such that the position of both cardan joint lugs is the same on the bevel gear and motor-drive unit. If this is not done, damage or malfunctions may result.

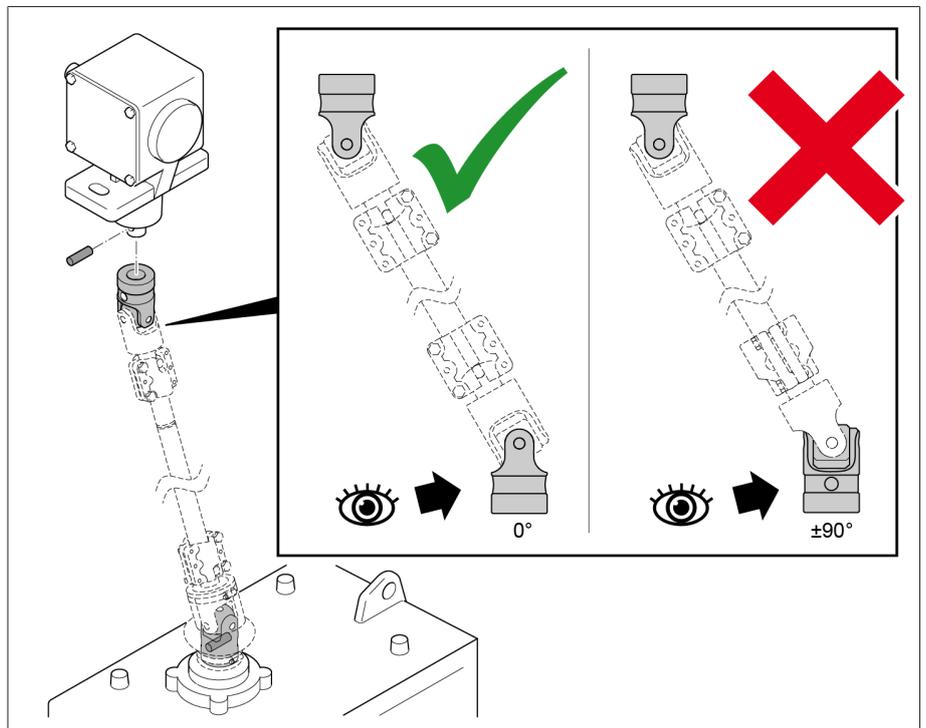


Figure 270: Fitting second cardan joint on bevel gear

6. Secure expansion bellows with hose clip.

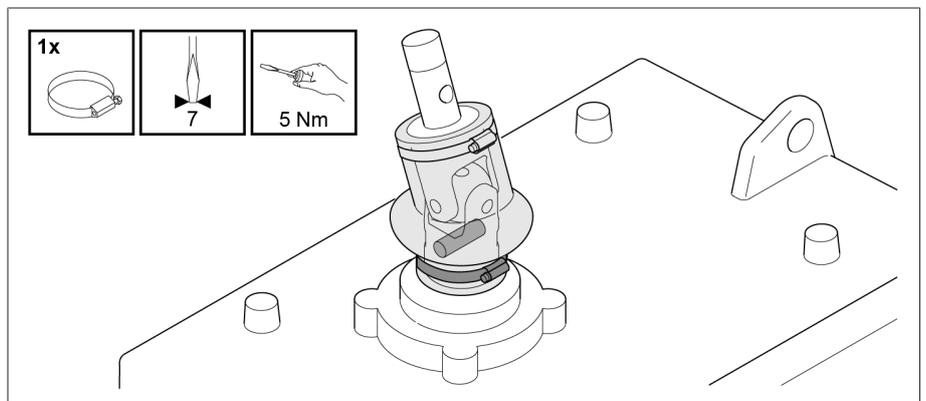


Figure 271: Securing expansion bellows with hose clip

7. Provisionally connect loose shaft ends of the joints to an angle bar and align so that they are in line.

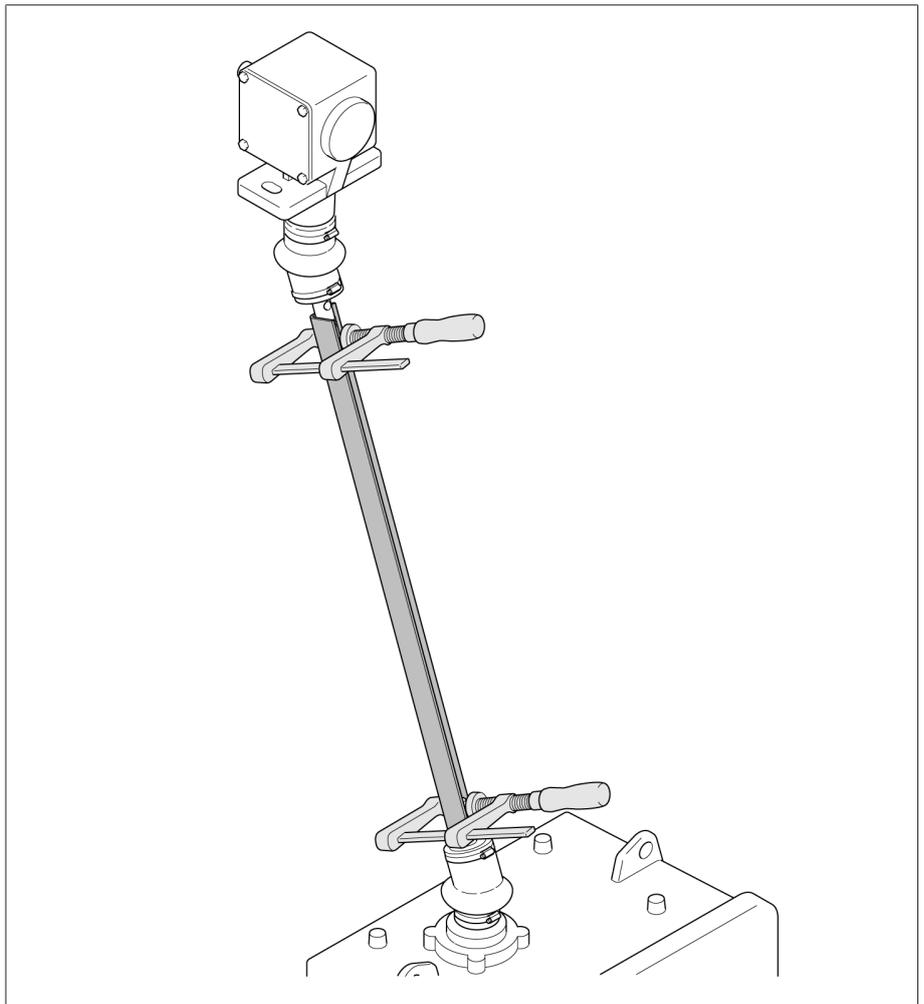


Figure 272: Connecting shaft ends with angle bar

8. Determine dimension A between the shaft ends. Cut square tube to  $LR = A + 100$  mm (LR = length of square tube). Deburr cut surfaces of square tube.

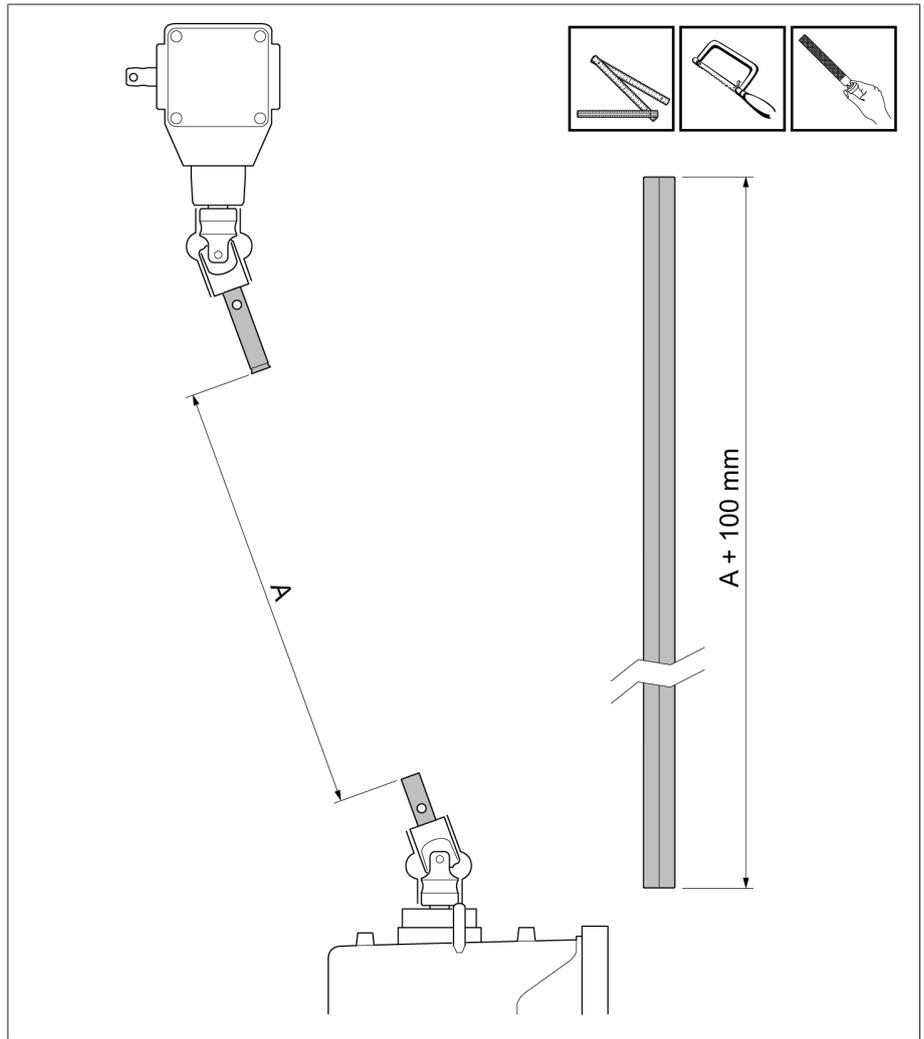


Figure 273: Shortening square tube

9. Before beginning installation, shorten both telescopic tubes to the corresponding dimension A (A = dimension between both cardan joint ends) and deburr.

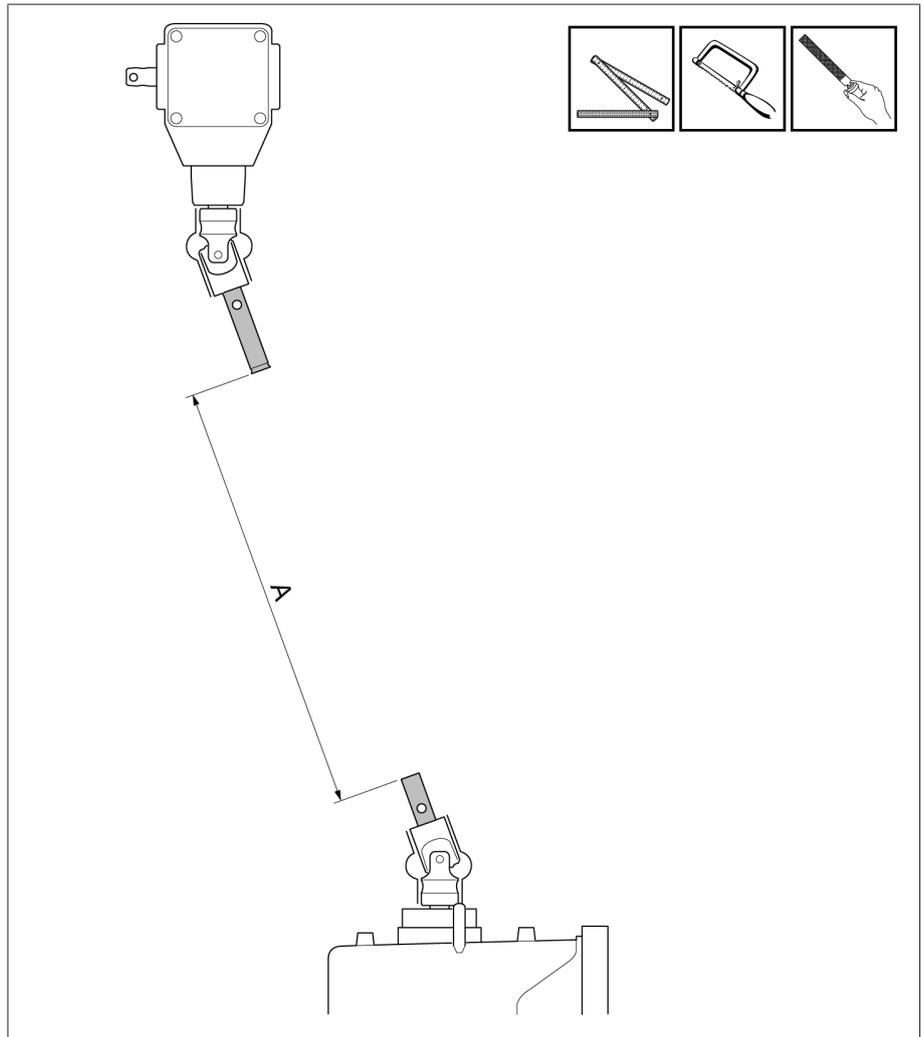


Figure 274: Shortening telescopic tubes

Dimension A (= distance between shaft ends of the drive and the bevel gear)	Inner tube	Outer tube
260 mm	Shorten to 200 mm	200 mm
261 mm...760 mm	Shorten to A-60 mm	200 mm
761 mm...1,090 mm	700 mm	Shorten to A-60 mm
1,091 mm...1,700 mm	700 mm	1,150 mm
1,701 mm...1,900 mm	1,150 mm	1,150 mm

10. Fit one adapter ring to bearing collar of motor-drive unit and fit other adapter ring to bearing collar of bevel gear.

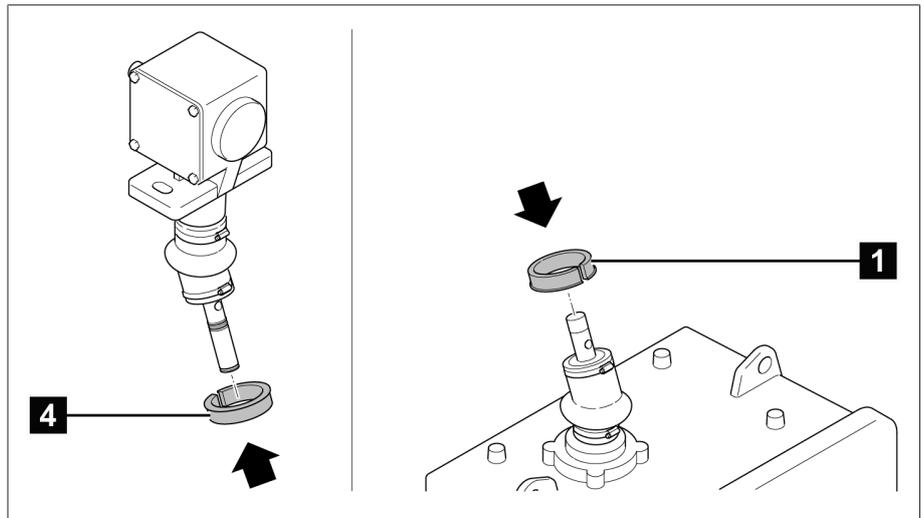


Figure 275: Fitting adapters

11. Slide previously shortened and deburred square tube over upper cardan joint end until stop is reached.

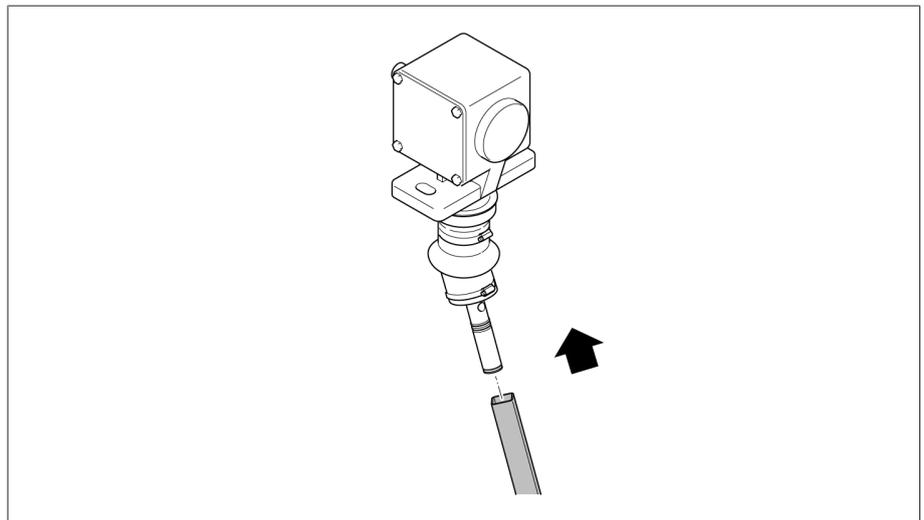


Figure 276: Sliding square tube over upper cardan joint end

12. Thread upper pivotable protective tube with long outlet up onto square tube from below.

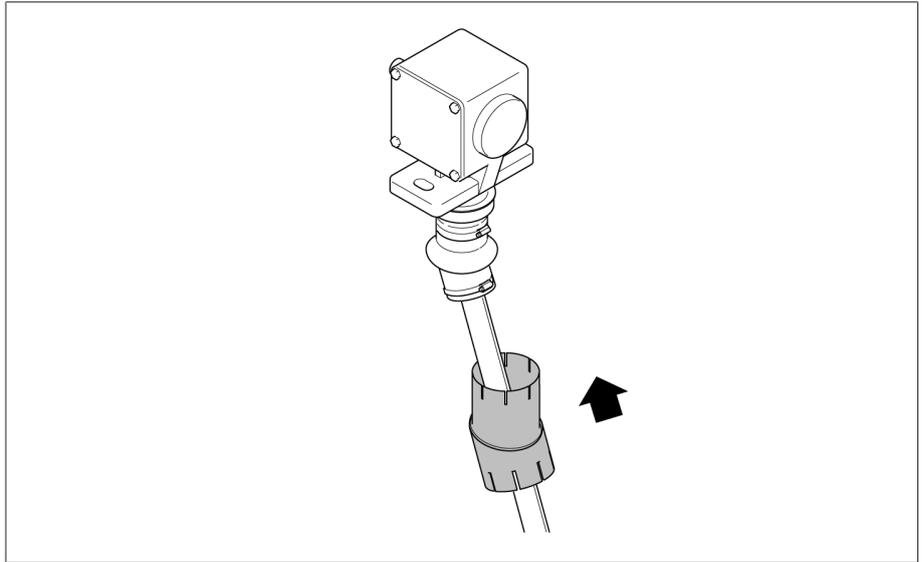


Figure 277: Sliding pivotable protective tube over square tube

13. Slide inner tube into outer tube such that the slotted sides of the outer and inner tube are both facing down. Thread the hose clips.

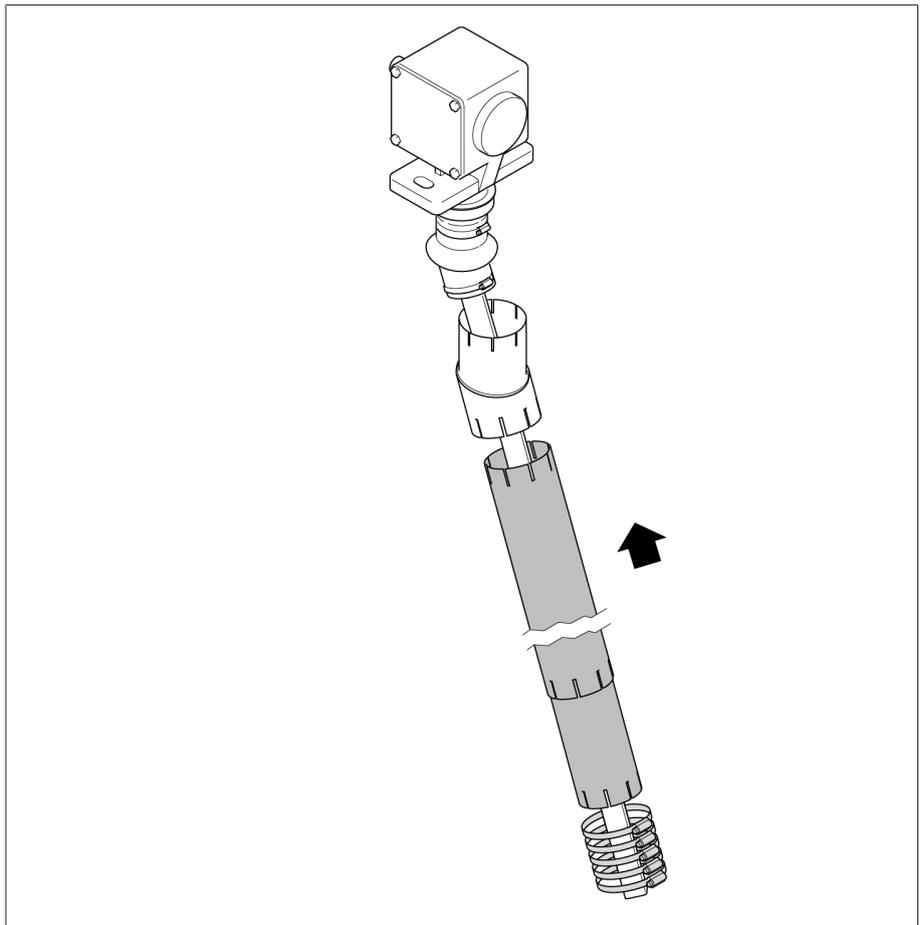


Figure 278: Sliding on telescopic tubes

14. Slide everything up and secure with a screw clamp.

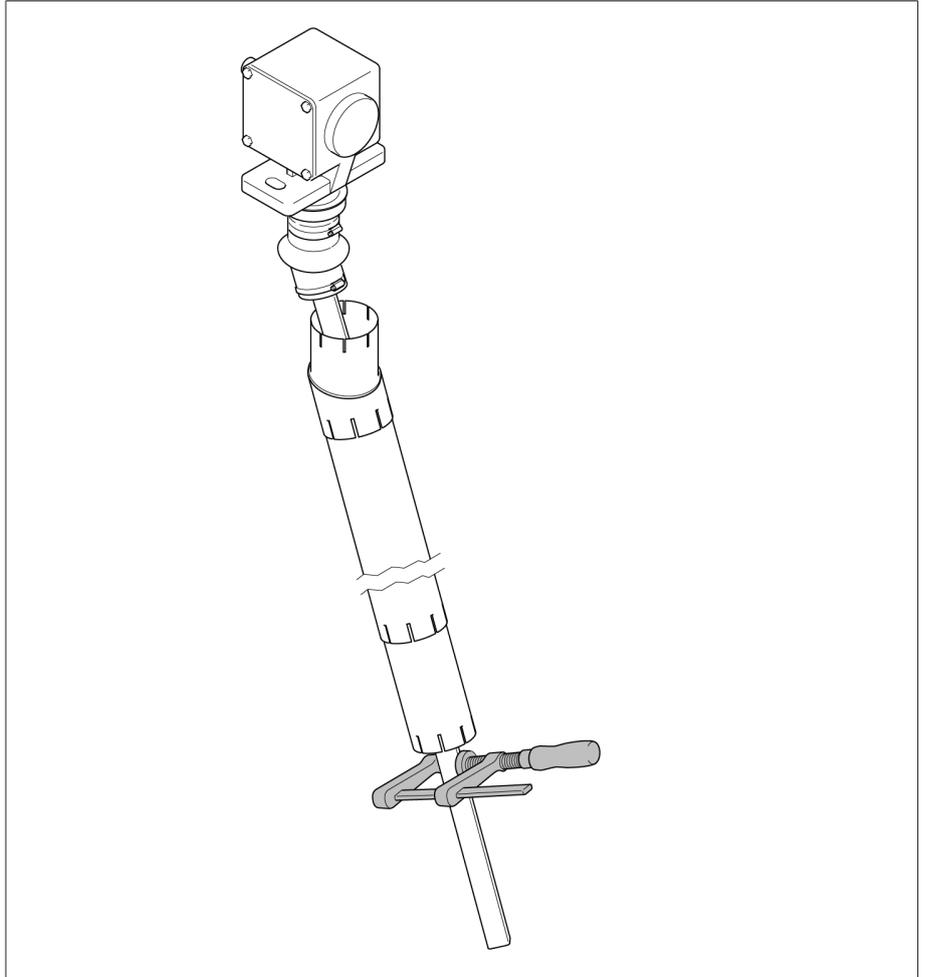


Figure 279: Secure everything with a screw clamp

- Slide bottom pivotable protective tube (also with long outlet up) on to the square tube and secure with screw clamp.

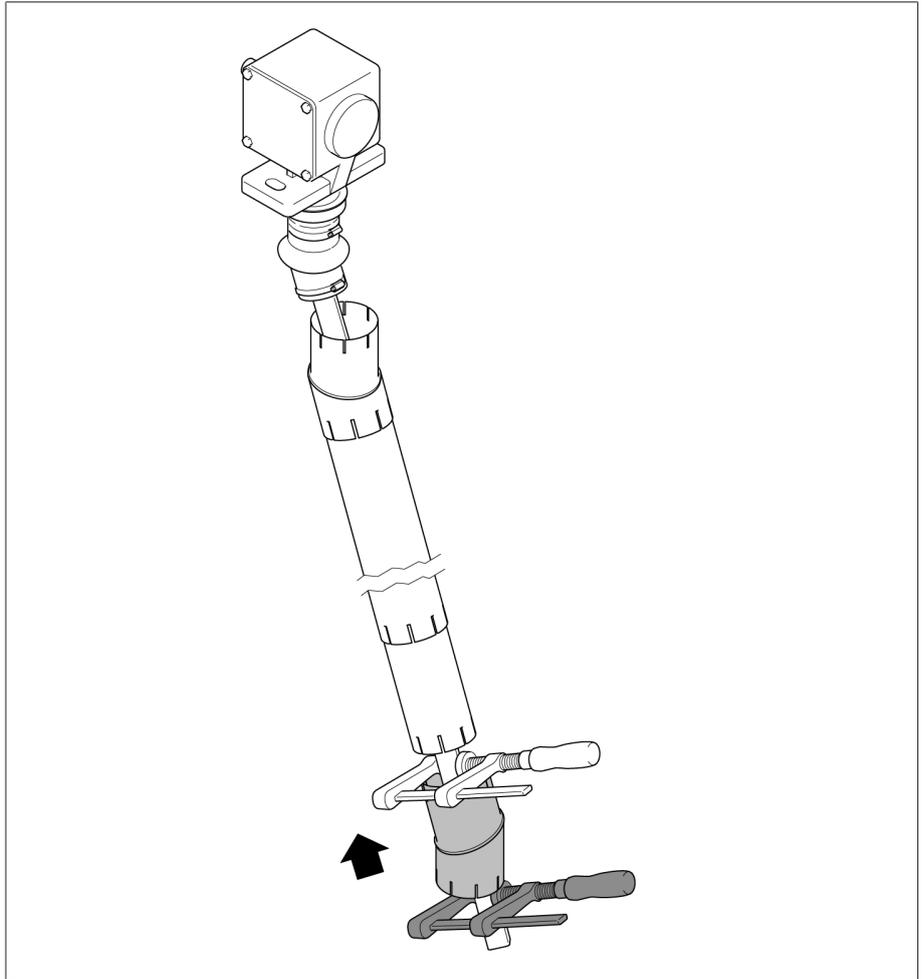


Figure 280: Sliding bottom pivotable protective tube over square tube

16. Swing in square tube and slide all the way down.

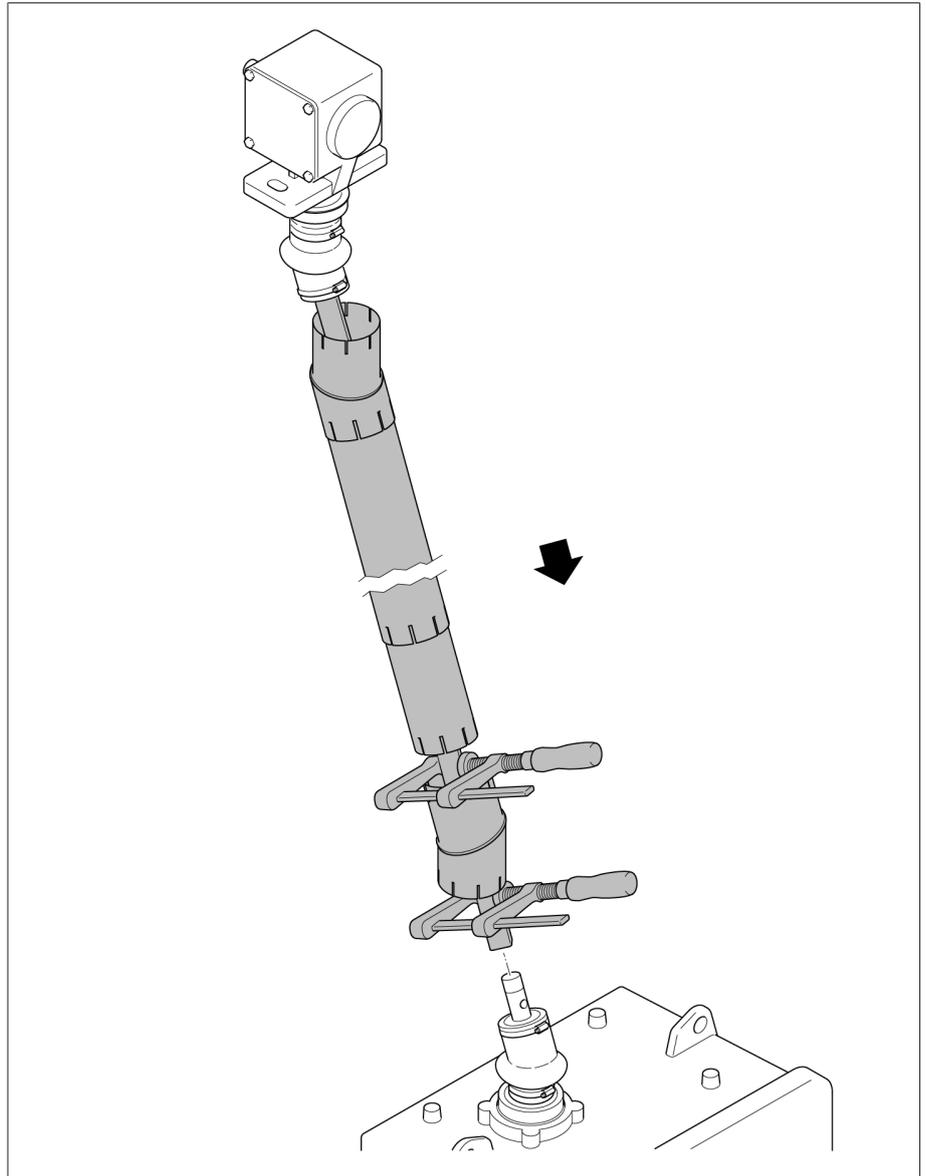


Figure 281: Pivoting square tube back to axis

17. Push the lower coupling bolt in and grease. Tighten lower coupling brackets. Shaft end and coupling part must be securely connected such that no axial clearance remains between the coupling bolt and coupling bracket.

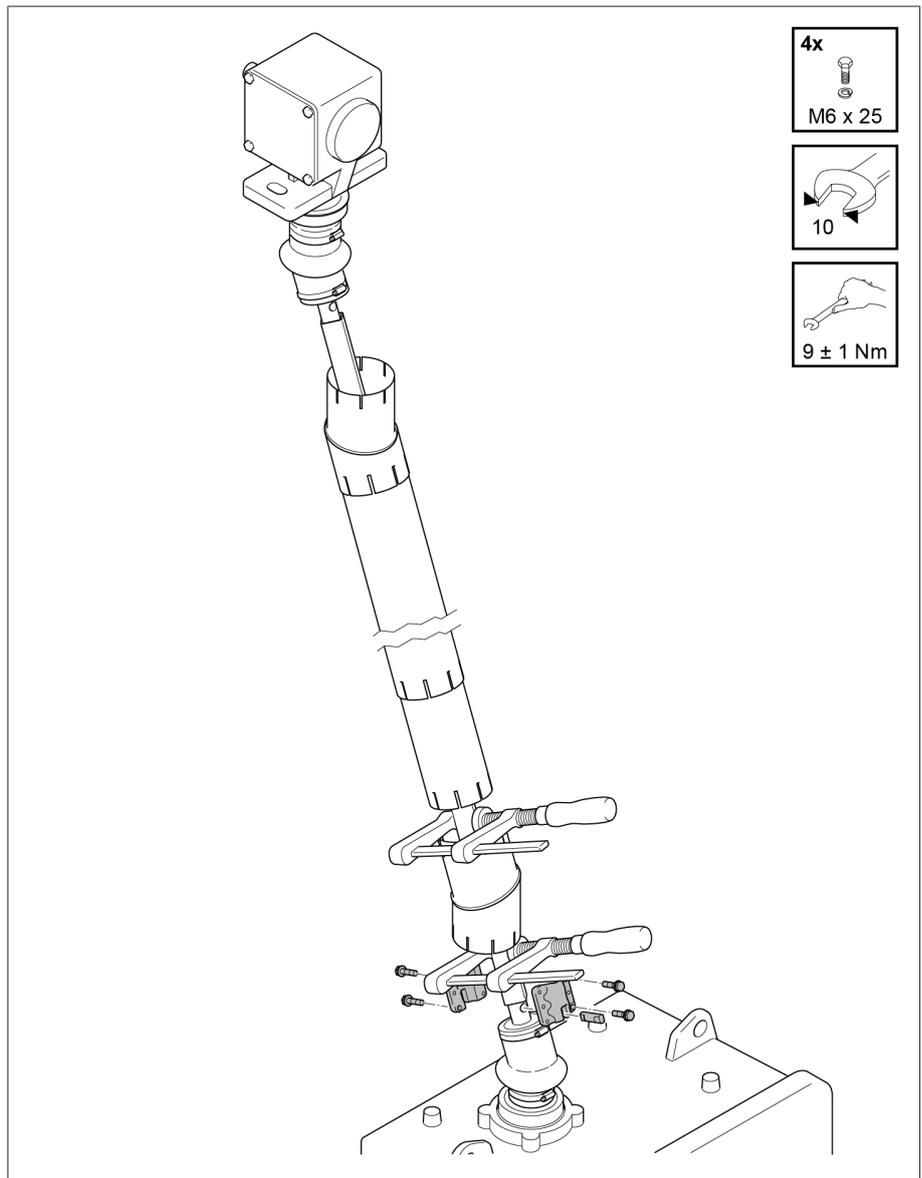


Figure 282: Tightening lower coupling brackets

18. Fit upper coupling brackets with 3 mm axial clearance.

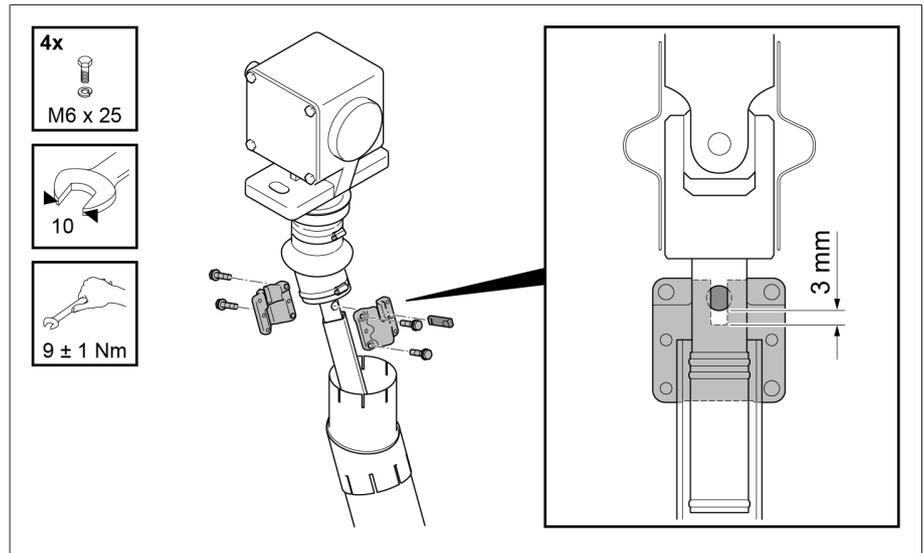


Figure 283: Fitting upper coupling brackets

19 Working from top to bottom, mount the individual parts of the shaft protection. Set angle position between both parts of pivotable protective tube and fix with available hose clip. Secure both upper and lower protective tubes with a hose clip at both ends. Secure the two telescopic protective tubes to one another using a hose clip.

- The plastic adapters must be at the respective end of the pivotable protective tube. Only slide telescopic protective tube into upper and lower pivotable protective tubes by the width of the adapter before tightening the hose clips.

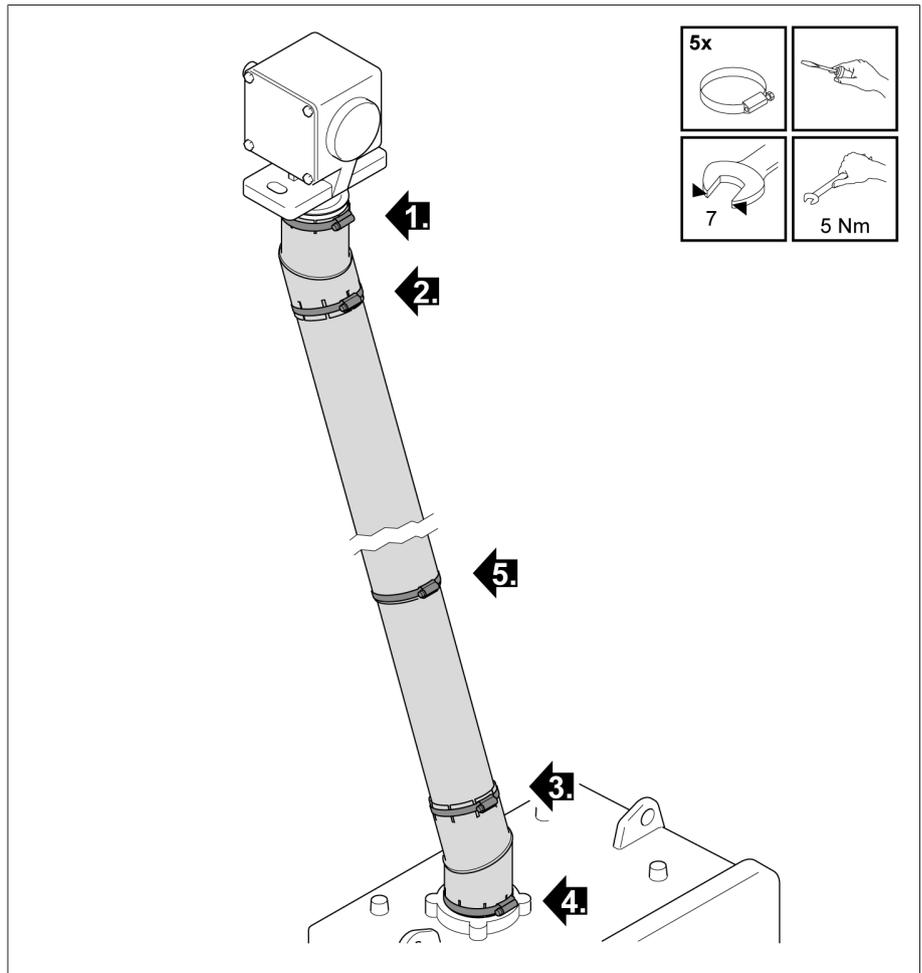


Figure 284: Securing telescopic protective tube and pivotable protective tubes with hose clips

#### 5.4.6.4 Fitting drive shaft with insulator

A model with insulator in the vertical drive shaft is available for insulating installation of the drive shaft.

### Permitted axial displacement

Minor axial displacement of the vertical drive shaft with insulator is permitted as long as it does not exceed 35 mm per 1000 mm square tube length (that corresponds to 2°).

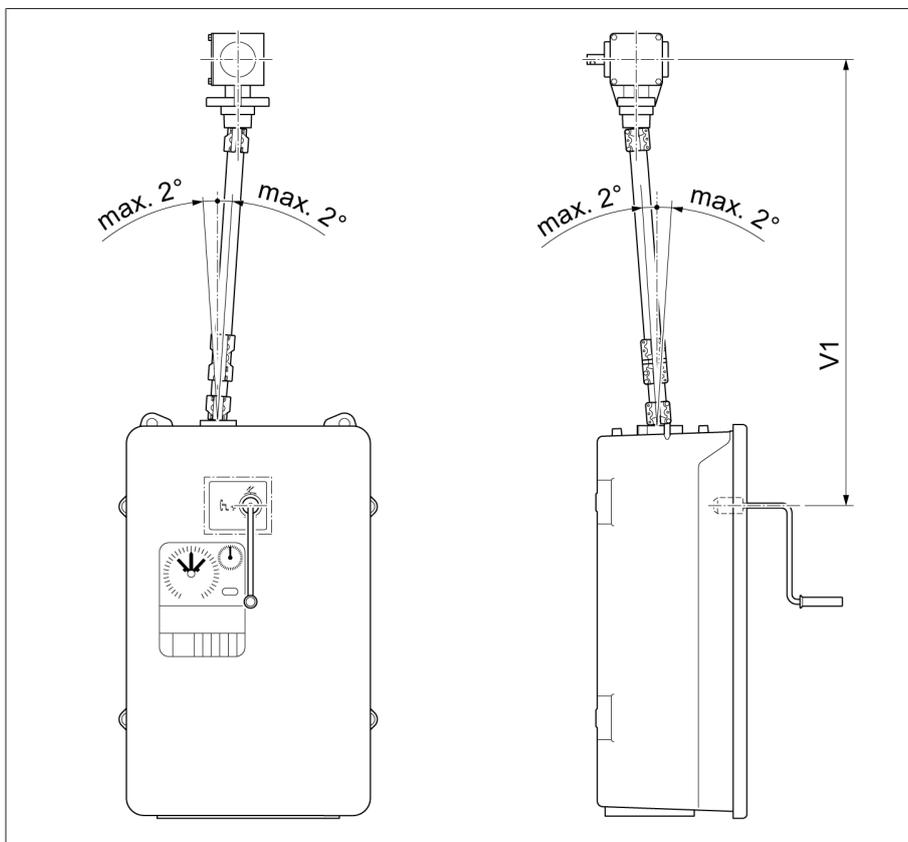


Figure 285: Permitted maximum axial displacement of vertical drive shaft with insulator

#### 5.4.6.4.1 Fitting vertical drive shaft with insulator

To fit the vertical drive shaft, proceed as follows.

1. **⚠ CAUTION!** Switch off motor protective switch Q1 in the motor-drive unit (position O). If this is not done, the motor-drive unit may be started inadvertently and cause injuries.
2. Screw the bevel gear for mounting on the transformer. Screws are not included in the scope of supply.

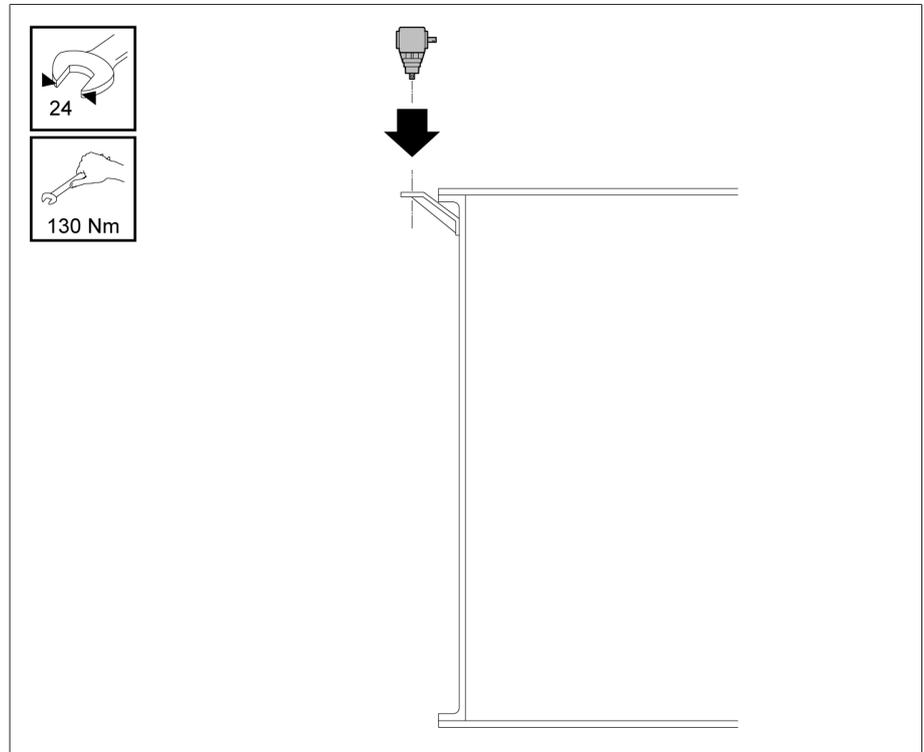


Figure 286: Bevel gear

3. Determine dimension A between shaft end of drive and shaft end of bevel gear. Shorten square tube to length of A-179 mm, taking the insulator into account.

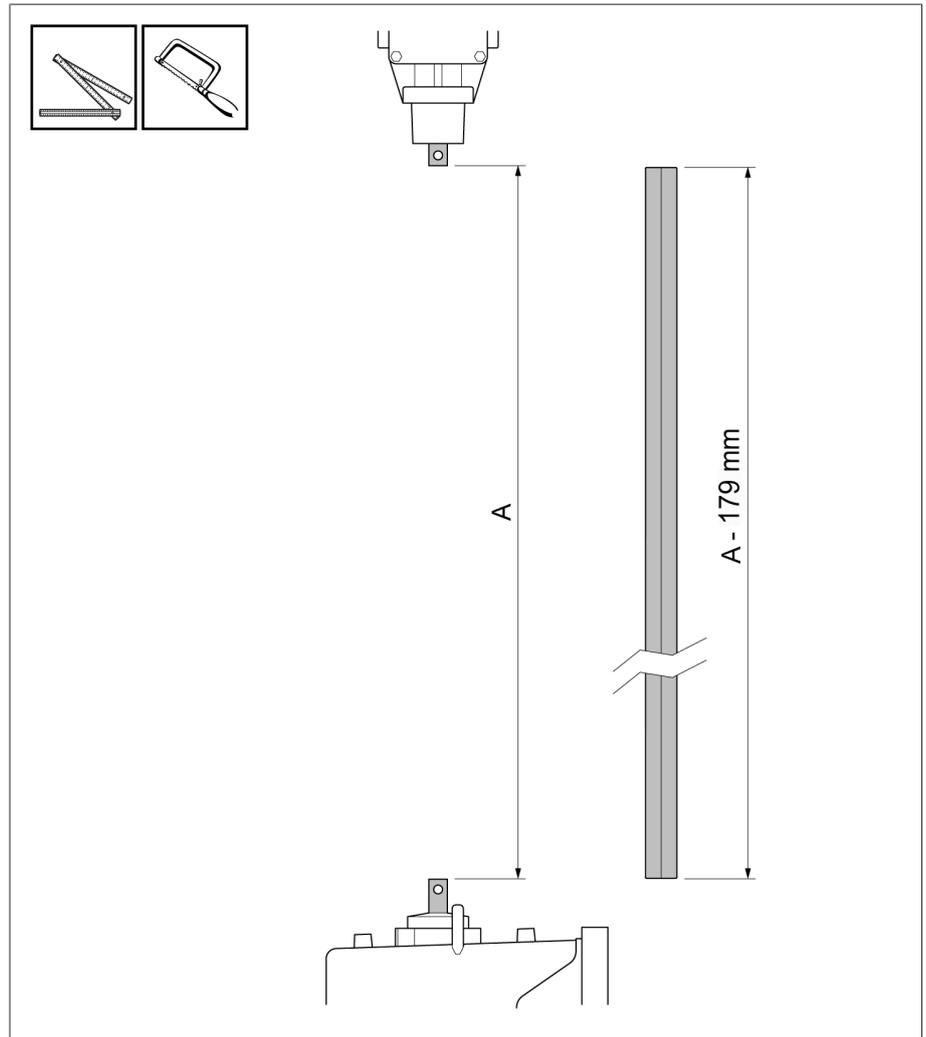


Figure 287: Shortening square tube

4. Deburr cut surfaces of square tube.

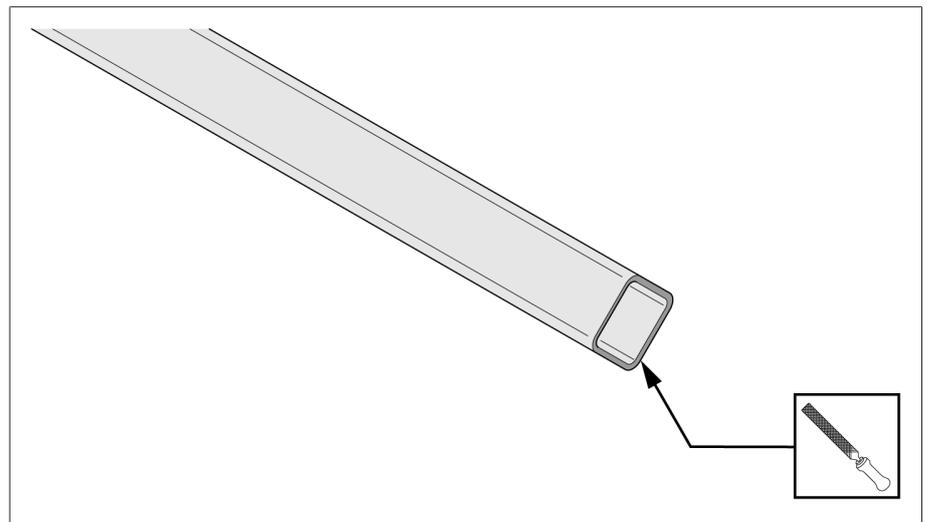


Figure 288: Deburring cut surfaces

5. Screw down double coupling part with insulator supplied and square tube. Mount insulator on the side facing the drive.

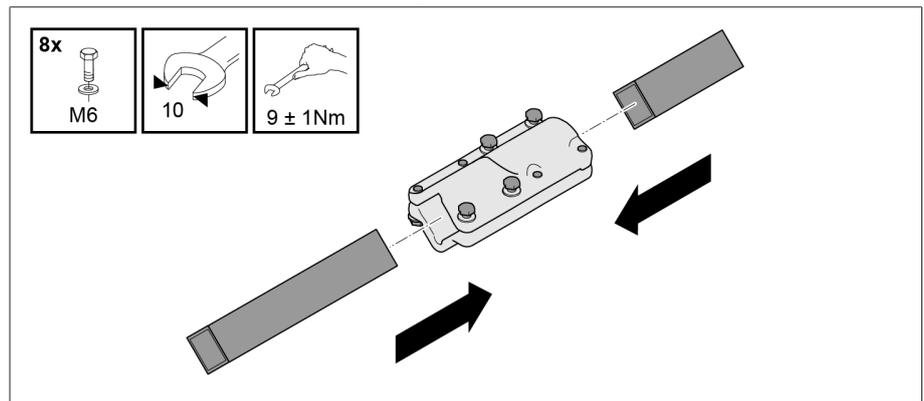


Figure 289: Screwing down square tube and insulator with double coupling part

6. Slide loosely screwed-together coupling part onto insulator until stop is reached.

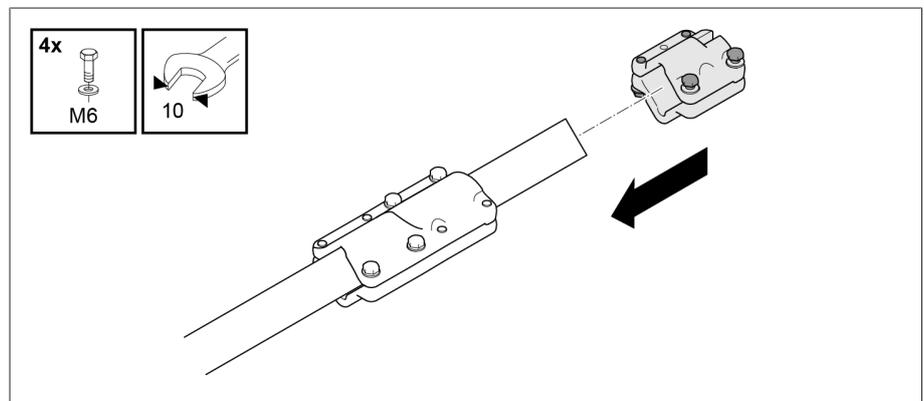


Figure 290: Sliding coupling part onto insulator

7. Place the supplied insulator ring on the bearing collar of the motor-drive unit.

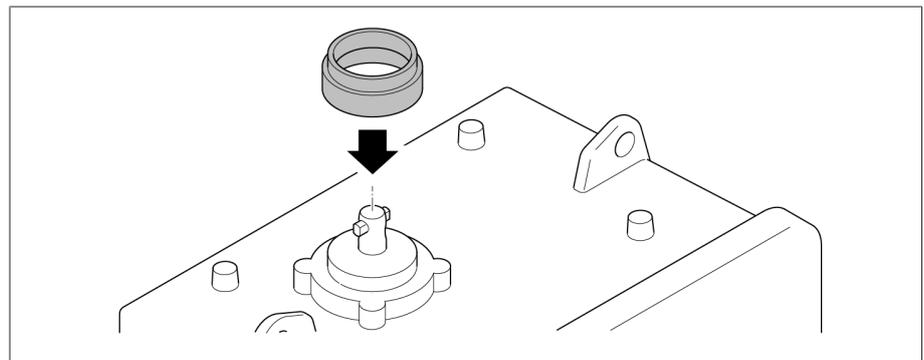


Figure 291: Insulating ring

8. Insert coupling bolt into shaft end of drive. Grease coupling part, coupling bolt and shaft end (e.g. ISOFLEX TOPAS L32). Slide square tube with coupling part onto shaft end.

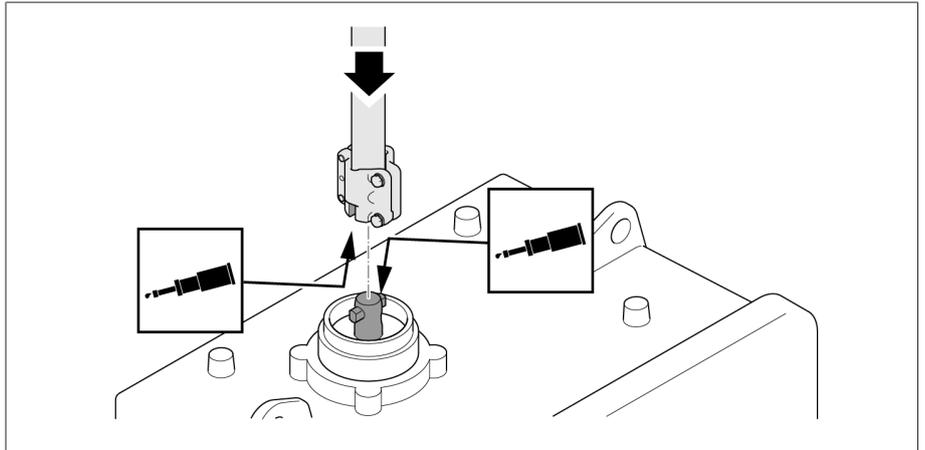


Figure 292: Sliding square tube with coupling part onto shaft end

9. Attach square tube to drive.

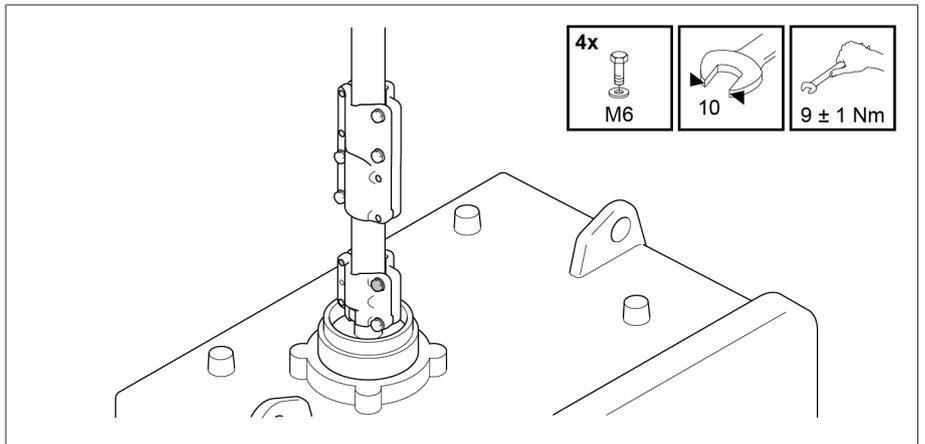


Figure 293: Attaching square tube to drive

10. Pivot square tube away from axis.

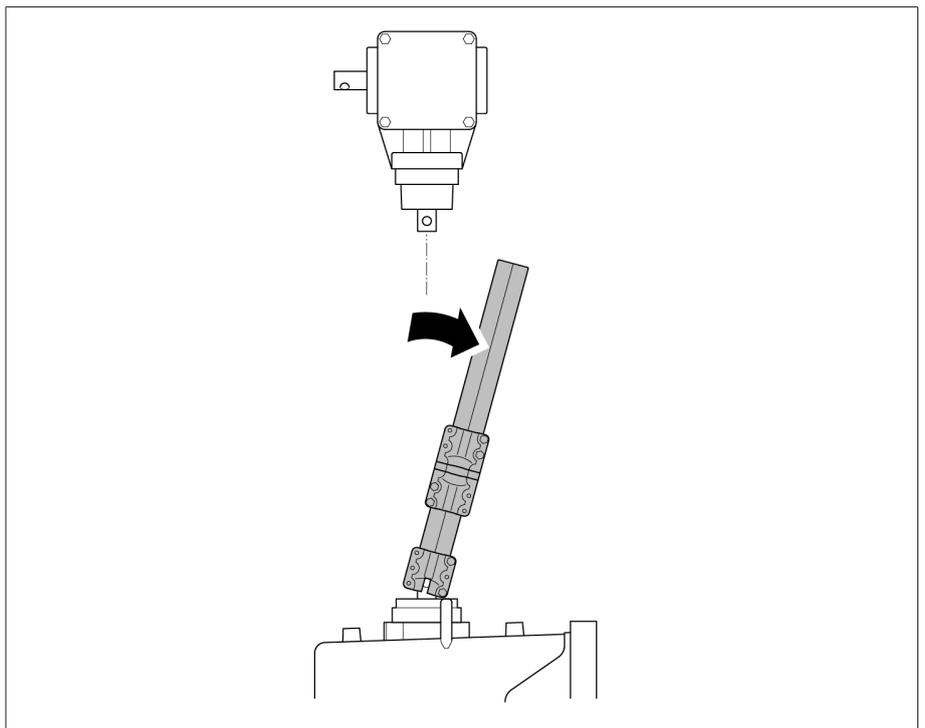


Figure 294: Pivoting square tube away from axis

11. When installing inner tube of telescopic protective tube, shorten on the side without slots if necessary. The minimum dimension for overlapping the two protective tubes is 100 mm.

- Inner tube must not be deformed and must be deburred in order to slide easily in the outer tube.

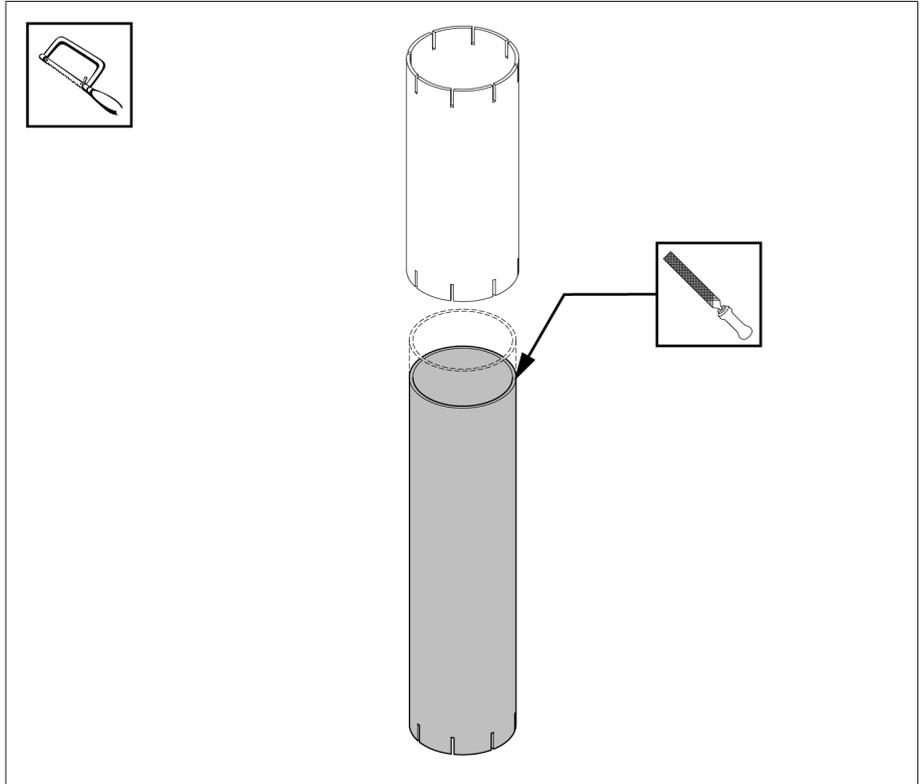


Figure 295: Deburring inner tube

Dimension A (= distance between shaft end of drive and shaft end of bevel gear)	Inner tube	Outer tube
170 mm...190 mm	Shorten to 200 mm	= 200 mm
191 mm...1,130 mm	Dimension A + 20 mm	= 200 mm
1,131 mm...1,598 mm	= 700 mm	= 1,150 mm
1,599 mm...2,009 mm	= 1,150 mm	= 1,150 mm

- Slide outer tube over inner tube. When doing so, make sure that the non-slotted side of the inner tube is facing upwards. Slide telescopic protective tube onto square tube. Then slide hose clips over telescopic protective tube.

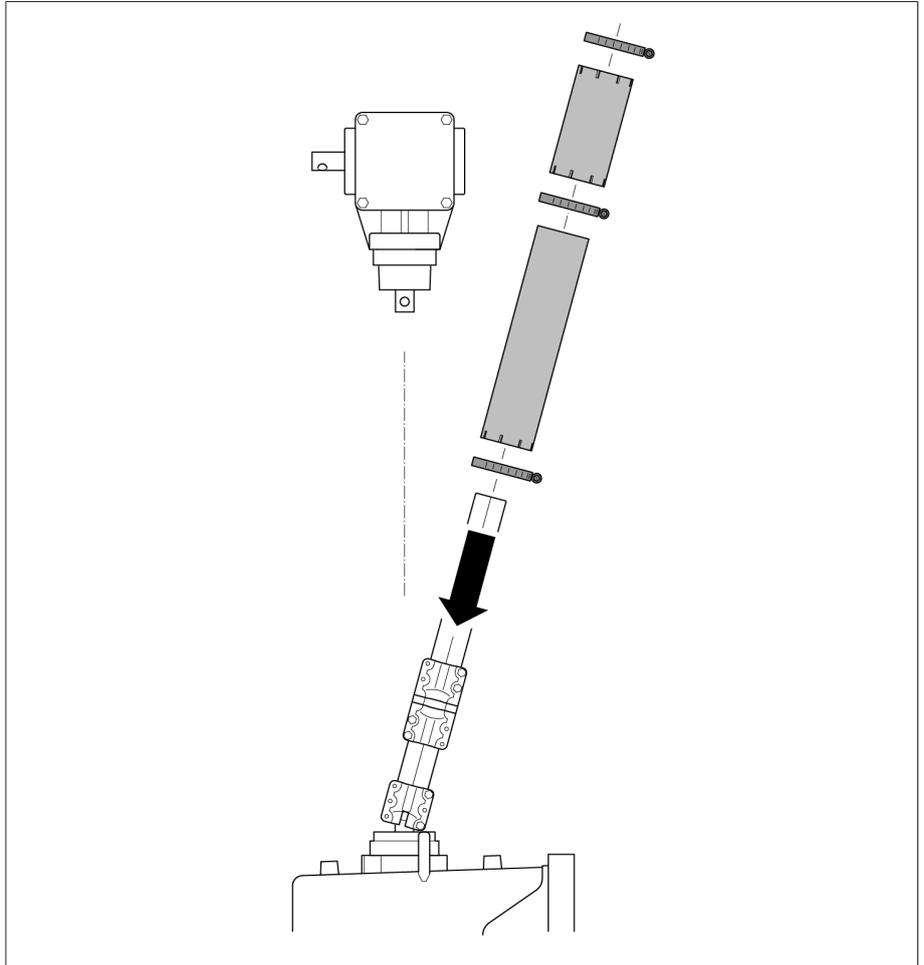


Figure 296: Sliding on telescopic protective tube

13. Place adapter ring over bearing collar of bevel gear and slide upwards. Insert coupling bolt into shaft end of bevel gear. Pivot square tube back to axis.

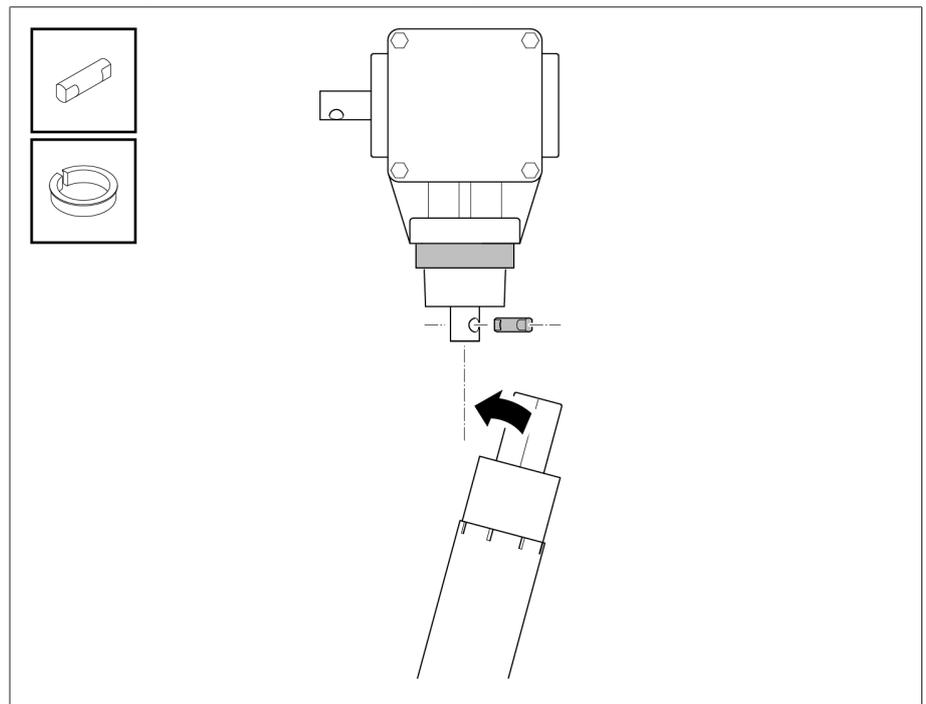


Figure 297: Fitting adapter ring and coupling bolt

14. Grease coupling brackets, coupling bolt and shaft end (e.g. ISOFLEX TOPAS L32) and secure square tube with coupling brackets on the bevel gear. Set a unilateral axial clearance of 3 mm between the coupling bolt and upper coupling piece.

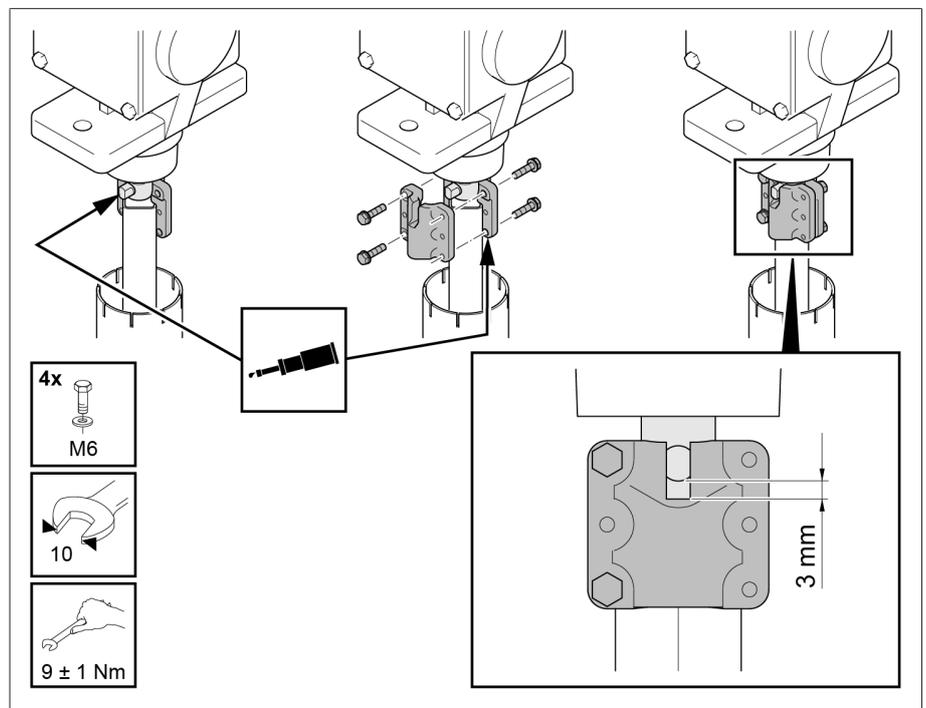


Figure 298: Mounting coupling brackets

- 15 Attach bottom protective tube (inner tube) with a hose clip to bearing collar of drive **1**. Then slide upper protective tube (outer tube) over adapter on bevel gear **2**. Secure upper protective tube to bottom protective tube with hose clip both at top end and at the connection point **3**.

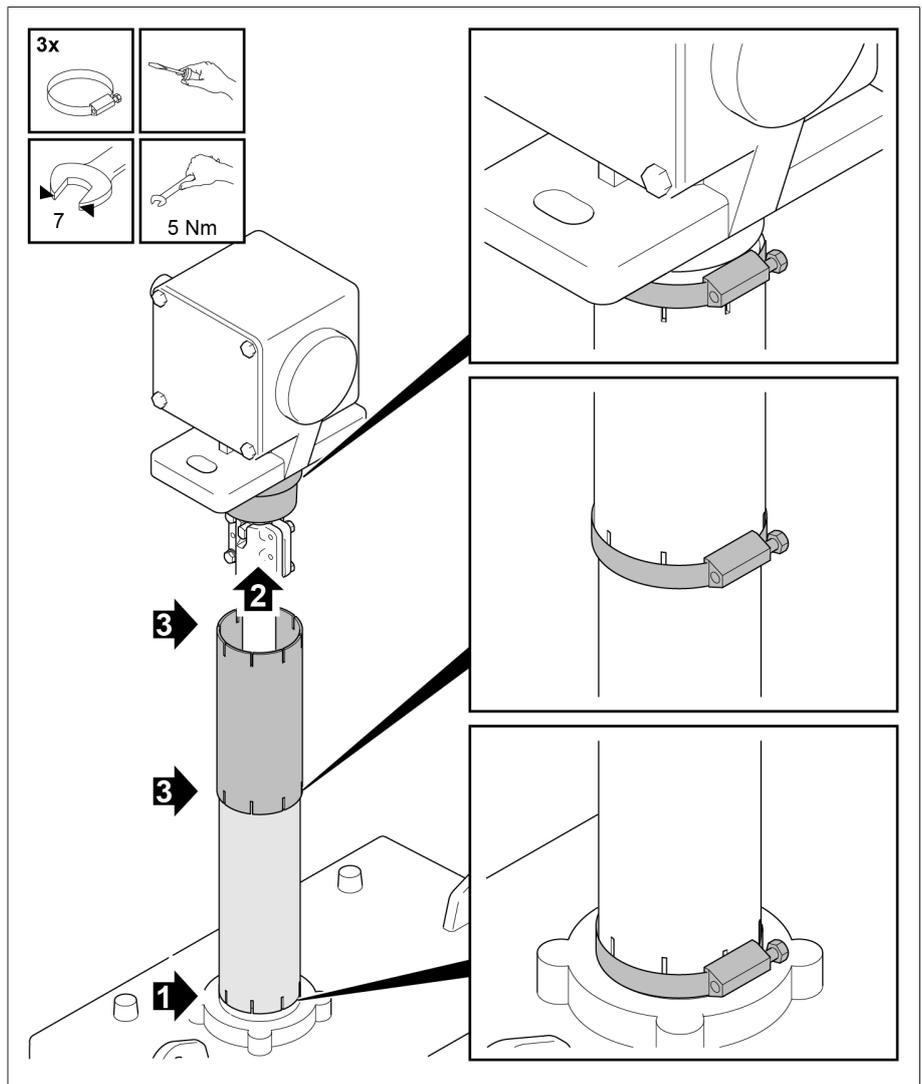


Figure 299: Mounting protective tube

#### 5.4.6.5 Fitting drive shaft with insulator and cardan joint

A model with insulator and cardan joint in the vertical drive shaft is also available for insulating installation of the drive shaft.

### Permitted axial displacement

An axial displacement of  $20^\circ$  is permitted for a drive shaft with insulator and cardan joint.

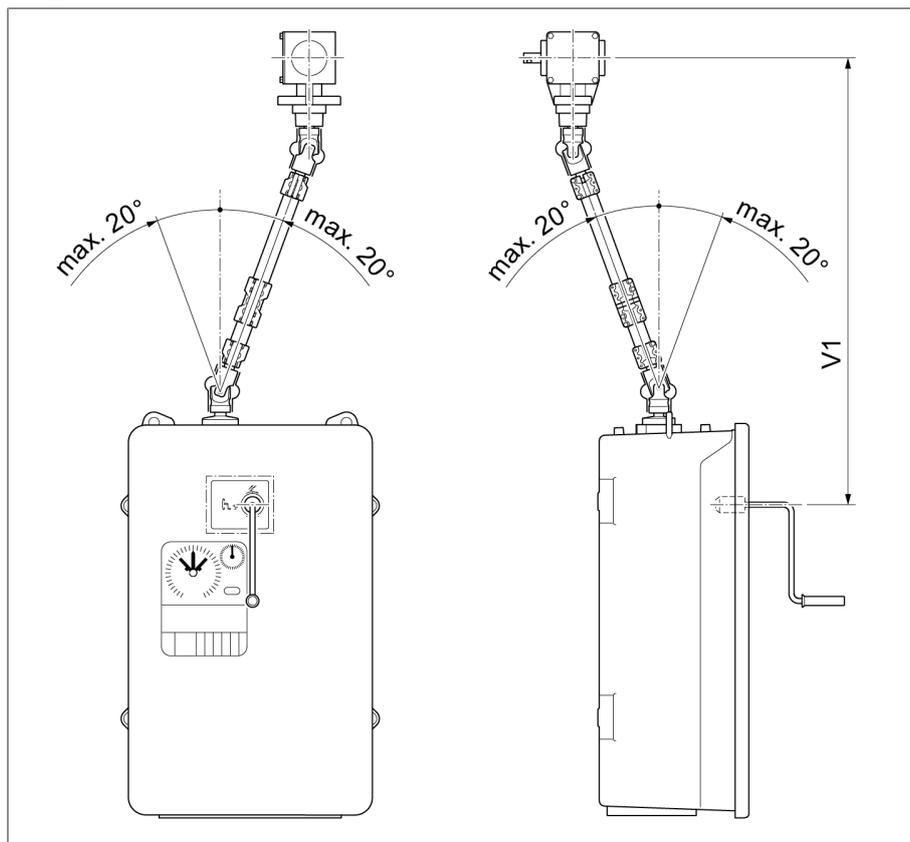


Figure 300: Permitted maximum axial displacement of vertical drive shaft with insulator and cardan joint

#### 5.4.7 Centering on-load tap-changer and motor-drive unit

- › Center on-load tap-changer and motor-drive unit as described in relevant MR operating instructions for motor-drive unit.

#### 5.4.8 Making the electrical connections for the motor-drive unit

- › Make electrical connections for the motor-drive unit as described in relevant MR operating instructions for the motor-drive unit.

# 6 Commissioning

## ▲ WARNING



### Danger of explosion!

Explosive gases in the oil compartment of the on-load tap-changer, transformer, pipework system, oil conservator and at the dehydrating breather opening can deflagrate or explode and result in severe injury or death!

- > Ensure that there are no ignition sources such as naked flame, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the transformer's immediate surroundings during commissioning and that none occur.
- > Do not operate any electrical devices (e.g. risk of sparks from impact wrench).
- > Only use conductive and grounded hoses, pipes, and pump equipment that are approved for flammable liquids.

## ▲ WARNING



### Danger of explosion!

Overloading the on-load tap-changer can lead to explosion. Spraying hot insulating fluid and flying parts can lead to death and serious injuries. Property damage is highly probable.

- > Ensure that the on-load tap-changer is not overloaded.
- > Ensure use of the on-load tap-changer in accordance with section "Appropriate use".
- > Prevent operations outside of the permitted operating conditions by taking suitable measures.

## 6.1 Commissioning the on-load tap-changer at the transformer manufacturer's site

Perform the following work and functional checks before commissioning the transformer.

### 6.1.1 Bleeding on-load tap-changer head and suction pipe

#### 6.1.1.1 Bleeding on-load tap-changer head

1. Open all forward valves and return valves in the pipe system.
2. Remove screw cap on air-vent valve E1 on the on-load tap-changer head cover.

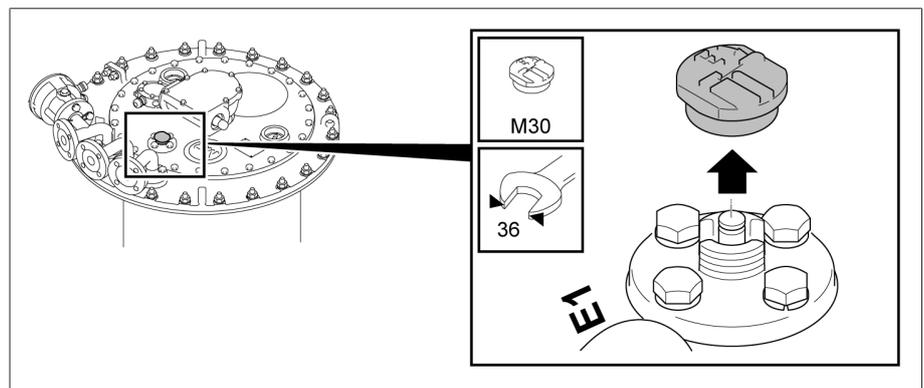


Figure 301: Screw cap

- Use screwdriver to lift valve tappet on air-vent valve E1 and bleed on-load tap-changer head.

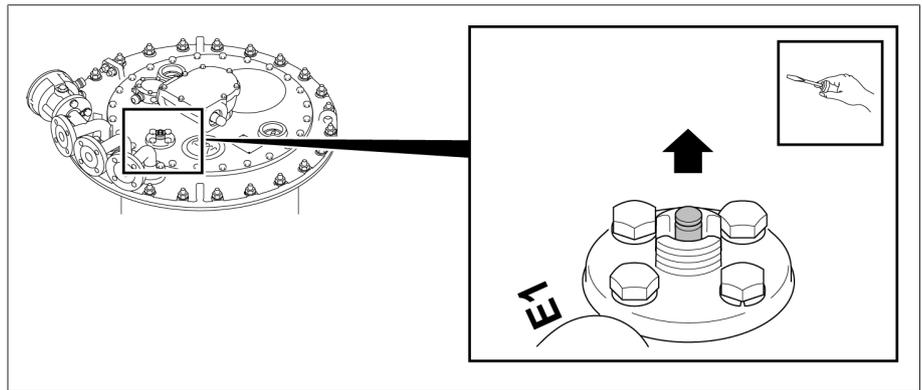


Figure 302: Valve tappet

- Seal air-vent valve E1 with screw cap (tightening torque 10 Nm).

### 6.1.1.2 Bleeding suction pipe on pipe connection S

- Remove screw cap from pipe connection S.

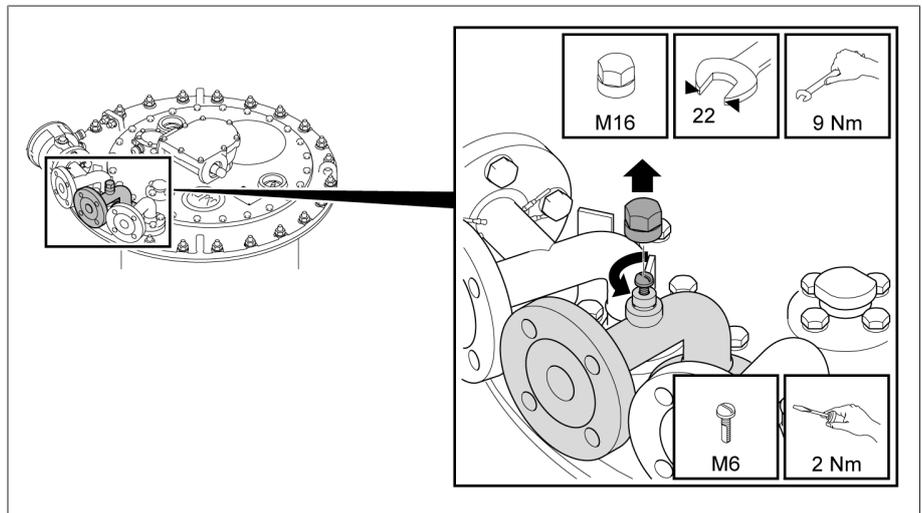


Figure 303: Screw cap

- NOTICE!** An incompletely bled suction pipe significantly impairs the insulation capability of the on-load tap changer to ground. Open vent screw and bleed suction pipe completely.
- Close vent screw.
- Seal vent screw with screw cap.

## 6.1.2 Grounding the on-load tap-changer

1. Connect grounding screw on the on-load tap-changer head to transformer cover. It is essential that CUPAL washers are placed directly on the connecting lug on both sides. The aluminum side of the CUPAL washers must be facing the connecting lug.

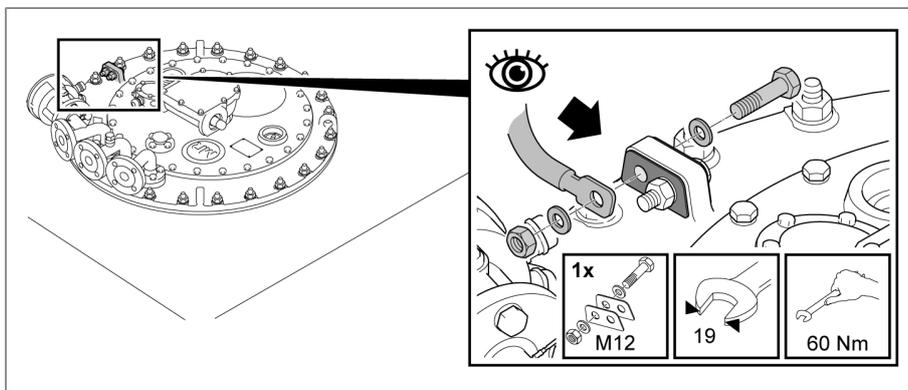


Figure 304: Grounding screw head

2. Connect grounding screw of motor-drive protective housing to transformer tank. It is essential that a CUPAL washer is placed between the cable shoe and connecting lug. The aluminum side of the CUPAL washer must be facing the connecting lug.

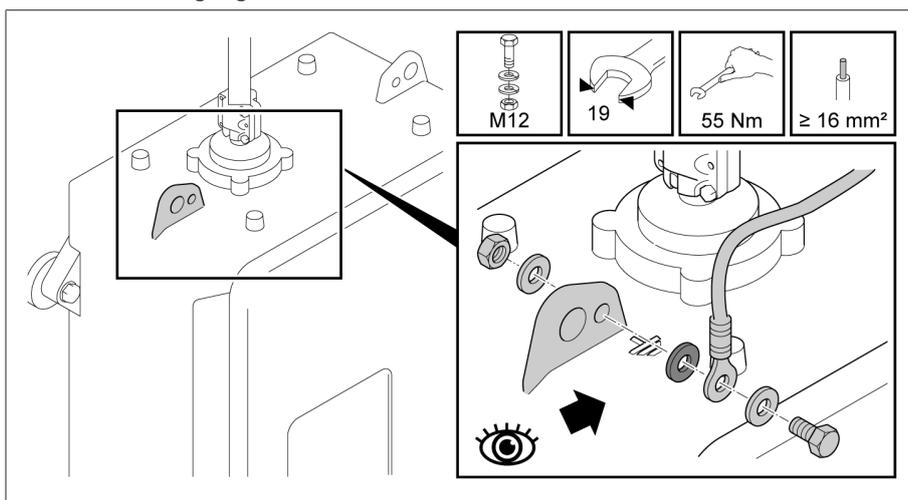


Figure 305: Grounding screw on motor-drive unit

3. When using a temperature sensor, connect housing of temperature sensor with grounding screw on the on-load tap-changer head or another grounding point on the transformer. It is essential that a CUPAL washer is placed between the cable shoe and temperature sensor housing. The aluminum side of the CUPAL washer must be facing the temperature sensor housing.

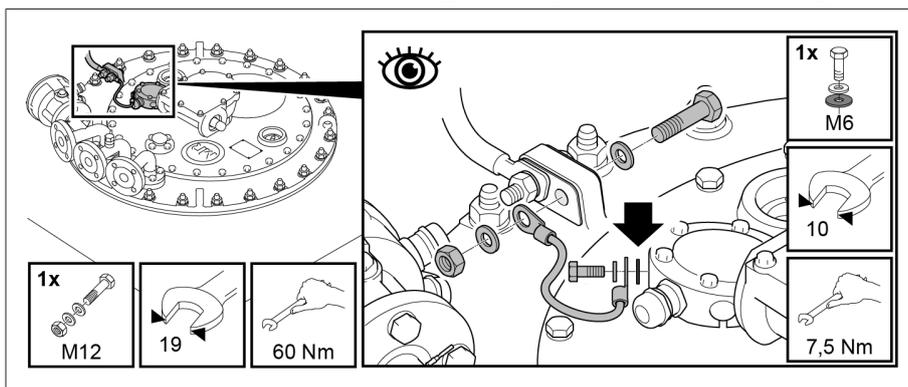


Figure 306: Grounding temperature sensor

### 6.1.3 Checking motor-drive unit

#### NOTICE

#### Damage to the on-load tap-changer / de-energized tap-changer!

Damage to the on-load tap-changer / de-energized tap-changer due to actuation of the on-load tap-changer / de-energized tap-changer without insulating fluid.

- Ensure that the selector / de-energized tap changer is fully immersed in insulating fluid and that the oil compartment of the on-load tap-changer is completely filled with insulating fluid.

Prior to commissioning the transformer, check whether the motor-drive unit and on-load tap-changer are correctly coupled and that the motor-drive unit functions correctly.

#### Tests on the motor-drive unit

1. Perform function checks as described in relevant MR operating instructions for motor-drive unit.
2. **NOTICE!** An incorrectly coupled motor-drive unit will lead to damage to the on-load tap-changer. Undertake trial tap-change operations across the entire range of settings. Ensure that in each operating position, the tap position indicators of motor-drive unit and on-load tap-changer (inspection window in the on-load tap-changer head) match.

#### Dielectric tests on transformer wiring

- Note information relating to dielectric tests on transformer wiring in relevant MR operating instructions for motor-drive unit.

### 6.1.4 High-voltage tests on the transformer

#### NOTICE

#### Damage to the on-load tap-changer!

Damage to the on-load tap-changer due to impermissibly high test voltages and operating voltages.

- Ensure that the permissible test voltages and operating voltages [► Section 9.6, Page 220] are complied with for on-load tap-changers for Y connection with open neutral point.

Note the following points before performing high-voltage tests on the transformer:

- Ensure that the oil compartment of the on-load tap-changer is completely filled with insulating fluid.
- Ensure that all protective devices for the on-load tap-changer are functioning correctly and are ready for use.
- Ensure that the ground connections on the motor-drive protective housing and protective housing fastening are free of paint.
- Only perform high voltage test if motor-drive unit door is closed.
- Disconnect external connections to electronic components in the motor-drive unit to prevent damage from overvoltage.
- When connecting the motor-drive unit's supply voltage, only use the cable bushings in the protective housing base intended for lead insertion.
- Guide all ground connecting leads to one central connection point (establishment of suitable reference earth).
- Disconnect all electronic components before the high voltage test. Before a dielectric test of the wiring, remove all devices with a withstand voltage of < 1000 V.

- Remove leads used for testing before the high voltage test as these function as antennas.
- Wherever possible, route the measurement leads and data leads separately to the energy cables.

Contact the manufacturer if you have any questions about possible sources of danger.

## 6.2 Transporting transformer to the operating site

### NOTICE

#### Damage to motor-drive unit!

Damage to the motor-drive unit due to condensate in protective housing of motor-drive unit.

- > Always keep protective housing of the motor-drive unit tightly closed.
- > In the event of downtime lasting more than 8 weeks prior to initial commissioning, connect and operate the heater in the motor-drive unit. If this is not possible, place a sufficient amount of desiccant in the protective housing.

### 6.2.1 Transport with drive removed

1. Ensure that the drive and the on-load tap-changer are in the adjustment position.
2. Remove the drive.
3. Do not actuate the drive while the on-load tap-changer is uncoupled and do not turn the output shaft.
4. Do not actuate an on-load tap-changer which is uncoupled and do not turn its drive shaft.
5. Transport the drive to the installation site in the MR delivery packaging.
6. Fit the drive [► Section 5.4.5, Page 137] and the drive shaft [► Section 5.4.6, Page 137] to the transformer at the installation site.

### 6.2.2 Transport with full transformer tank and without oil conservator

Attach a connecting lead between the on-load tap-changer's oil compartment and the transformer tank if the transformer has been transported with a full tank and without an oil conservator.

- > Establish a connecting lead on the on-load tap-changer head between connections E2 and Q or E2 and R.

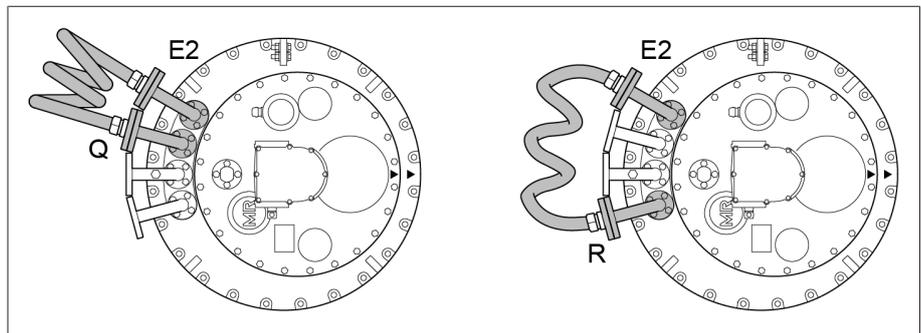


Figure 307: Connecting lead



In the event of a short-term immobilization time (maximum of 4 weeks) without an oil conservator, it is also sufficient to remove approximately 5 liters of insulating fluid from the on-load tap-changer oil compartment.

## 6.2.3 Transport with empty transformer tank

### NOTICE

#### Damage to the on-load tap-changer!

The on-load tap-changer may be subject to oscillating movements during transformer transportation if the transformer is transported without insulating fluid and the on-load tap-changer oil compartment is transported with insulating fluid. These oscillating movements can lead to damage to the on-load tap-changer.

- Completely empty the oil compartment if the transformer is to be transported without insulating fluid.
- Preserve the oil compartment in the same way as the transformer (for example by filling with N<sub>2</sub>).

#### 6.2.3.1 Emptying oil compartment via pipe connection S

1. De-energize all auxiliary circuits (e.g. tap-change supervisory device, pressure relief device, pressure monitoring device).
2. With the stop-cock (slide valve) between oil conservator and oil compartment open, open air-vent valve E1 on the on-load tap-changer head.
3. Discharge the gas from under the on-load tap-changer cover. Ensure sufficient fresh air (e.g. in transformer cells and work tents) when doing so.
4. Once the gas has been discharged and the insulating fluid is flowing out of the air-vent valve, close the air-vent valve and close the stop-cock between the oil conservator and oil compartment.
5. Open air-vent valve again and drain off approximately 5–10 liters of insulating fluid via the pipe connection S until the area under the on-load tap-changer head cover is free of insulating fluid.
6. Loosen 24 screws M10 / wrench size 17 with locking elements on the on-load tap-changer head cover.
7. Remove on-load tap-changer head cover.
8. Extract insulating fluid via pipe connection S.
9. Open stop-cock between oil conservator and oil compartment.
  - » Insulating fluid flows out of the oil conservator into the oil compartment.
10. Extract insulating fluid via pipe connection S.
11. Place on-load tap-changer head cover on the on-load tap-changer head.
12. Screw down on-load tap-changer head cover using 24 screws M10 / wrench size 17 and locking elements (tightening torque 34 Nm).

## 6.3 Commissioning transformer at operating site

### 6.3.1 Filling the oil compartment of the on-load tap-changer with insulating fluid

#### NOTICE

#### Damage to the on-load tap-changer!

Unsuitable insulating fluids cause damage to the on-load tap-changer.

> Only use insulating fluids [► Section 9.1.2, Page 210] approved by the manufacturer.

1. **NOTICE!** Check whether the on-load tap-changer head cover has a flange for attaching a pressure relief device. If it does, operation without a pressure relief device is not permitted and may result in damage to the on-load tap-changer.
  - » Fit a pressure relief device which is approved for this on-load tap-changer on the on-load tap-changer head.
2. Establish a connecting lead between pipe connection E2 and one of the pipe connections R, S or Q to ensure equal pressure in the oil compartment and transformer during evacuation.

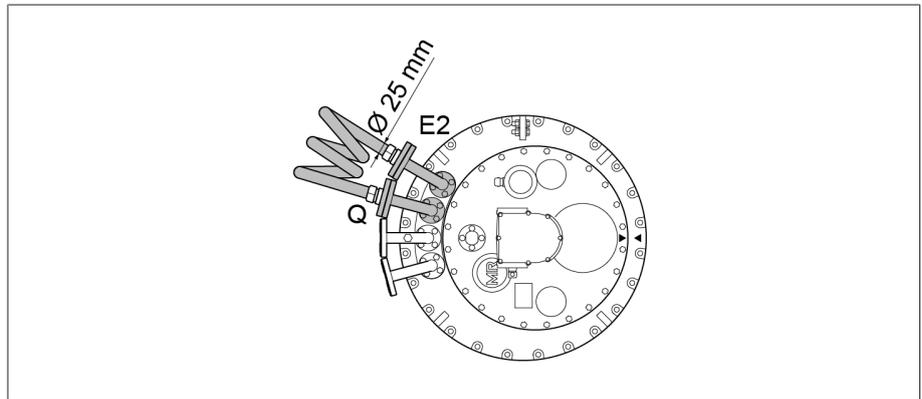


Figure 308: Connecting lead between E2 and Q

- Fill on-load tap-changer with new insulating fluid using one of the two free pipe connections of the on-load tap-changer head.

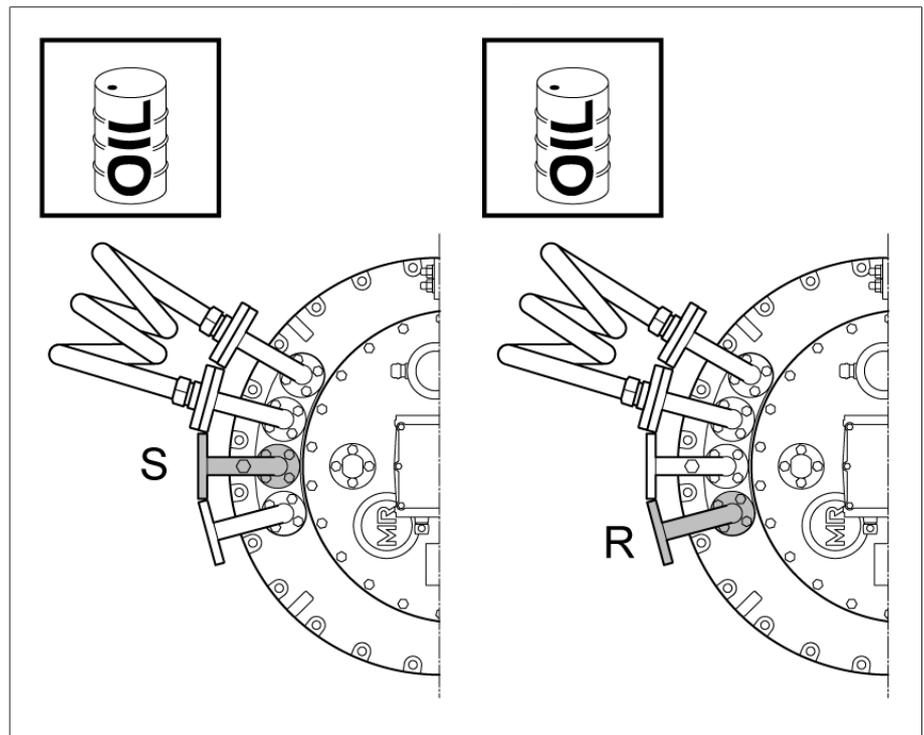


Figure 309: Pipe connections S and R

- Take an insulating fluid sample from the oil compartment.
- Record the temperature of the sample immediately after the sample is taken.
- Determine dielectric strength and water content at a sample temperature of  $20^{\circ}\text{C} \pm 5^{\circ}\text{C}$ . The dielectric strength and water content must comply with the limit values specified in the technical data [► Section 9.5, Page 219].

## 6.3.2 Bleeding on-load tap-changer head and suction pipe

### 6.3.2.1 Bleeding on-load tap-changer head

- Open all forward valves and return valves in the pipe system.
- Remove screw cap on air-vent valve E1 on the on-load tap-changer head cover.

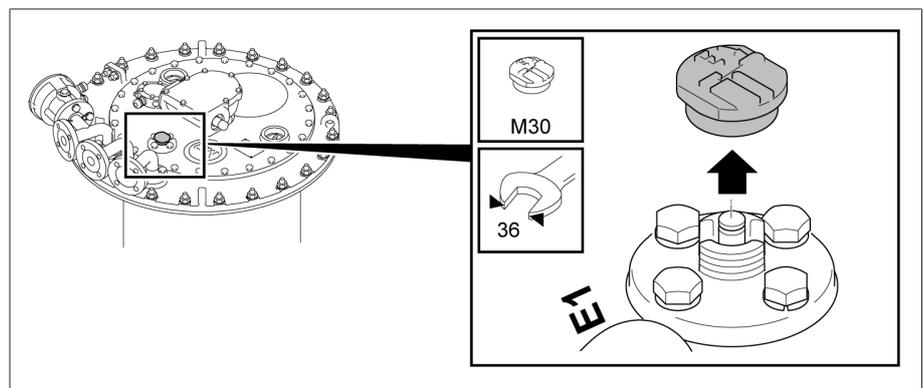


Figure 310: Screw cap

- Use screwdriver to lift valve tappet on air-vent valve E1 and bleed on-load tap-changer head.

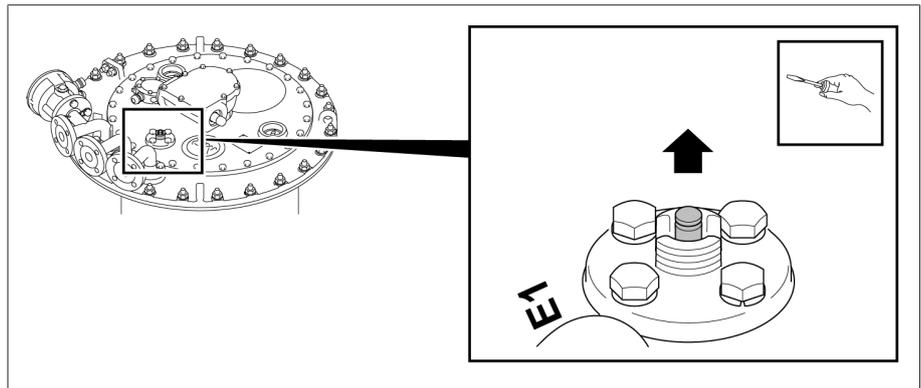


Figure 311: Valve tappet

- Seal air-vent valve E1 with screw cap (tightening torque 10 Nm).

### 6.3.2.2 Bleeding suction pipe on pipe connection S

- Remove screw cap from pipe connection S.

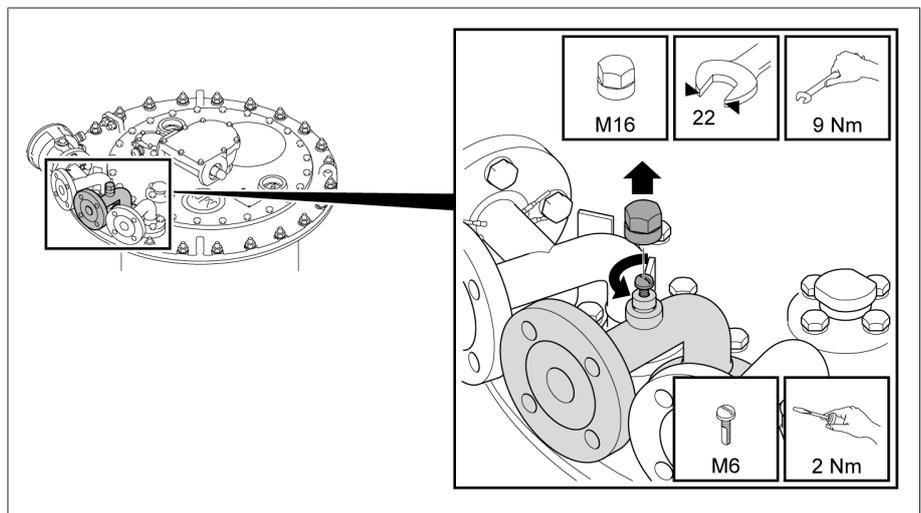


Figure 312: Screw cap

- NOTICE!** An incompletely bled suction pipe significantly impairs the insulation capability of the on-load tap changer to ground. Open vent screw and bleed suction pipe completely.
- Close vent screw.
- Seal vent screw with screw cap.

### 6.3.3 Checking motor-drive unit

#### NOTICE

#### Damage to the on-load tap-changer / de-energized tap-changer!

Damage to the on-load tap-changer / de-energized tap-changer due to actuation of the on-load tap-changer / de-energized tap-changer without insulating fluid.

- Ensure that the selector / de-energized tap changer is fully immersed in insulating fluid and that the oil compartment of the on-load tap-changer is completely filled with insulating fluid.

## NOTICE

### Damage to the on-load tap-changer and motor-drive unit!

Damage to on-load tap-changer and motor-drive unit due to incorrect use of position transmitter equipment.

- Only circuits stated in the chapter Technical data for position transmitter equipment may be connected to the position transmitter module connections.
- The switchover point of the position transmitter equipment in the motor-drive unit is not the same as the switchover point of the diverter switch operation. This depends on the type of diverter switch. This fact should be noted when project planning the locking circuits between the motor-drive unit and external equipment (e.g. transformer circuit breaker).
- Therefore, the "Tap changer in operation" position transit contact shown in the connection diagram should be used for external monitoring, locking and control purposes instead of the position transmitter equipment.

Prior to commissioning the transformer, check whether the motor-drive unit and on-load tap-changer are correctly coupled and that the motor-drive unit functions correctly.

### Tests on the motor-drive unit

1. Perform function checks as described in relevant MR operating instructions for motor-drive unit.
2. **NOTICE!** An incorrectly coupled motor-drive unit will lead to damage to the on-load tap-changer. Undertake trial tap-change operations across the entire range of settings. Ensure that in each operating position, the tap position indicators of motor-drive unit and on-load tap-changer (inspection window in the on-load tap-changer head) match.

### Dielectric tests on transformer wiring

- Note information relating to dielectric tests on transformer wiring in relevant MR operating instructions for motor-drive unit.

## 6.3.4 Checking protective relay

### 6.3.4.1 Checking protective relay (RS 2001, 2001/V, 2001/H, 2001/E, 2001/5, 2001/R, 2001/T, 2003)

- ✓ Check that the protective relay is functioning correctly before commissioning the transformer:
  1. Ground the transformer on the high-voltage side and low-voltage side. Ensure that the grounding for work connection on the transformer is not removed during testing.
  2. Ensure that the transformer remains de-energized during testing.
  3. Deactivate the automatic fire extinguishing device.
  4. Loosen the three screws on the terminal box cover and lift off the terminal box cover.
  5. Remove the slotted head screw for potential tie-in and remove the terminal box cover with wire.
  6. Press OFF test button.
  7. Leave the transformer's danger zone.
  8. Ensure that the transformer's circuit breaker cannot be closed.
    - » Passive protection test
  9. Press OPERATION test button.
  10. Leave the transformer's danger zone.

11. Close the transformer's circuit breaker with isolating switches open and the transformer grounded on all sides.
12. Press OFF test button.
- .
13. Ensure that the transformer's circuit breaker is open.
- .
- ⇒ Active protection test.
14. Press OPERATION test button to reset the protective relay.
15. Position the wire for the terminal box cover and affix using the slotted head screw.
16. Attach the terminal box cover and secure with screws.
- .

#### 6.3.4.2 Checking protective relay (RS 2004)

- ✓ Check that the protective relay is functioning correctly before commissioning the transformer:
  1. Ensure that the flap valve is in the OPERATION position.
  2. Leave the transformer's danger zone.
  3. Close the transformer's circuit breaker with isolating switches open and the transformer grounded on all sides.
  4. Press OFF test button.
  5. Ensure that the transformer's circuit breaker is open.
    - » Active protection test

#### 6.3.5 Checking pressure monitoring device

1. Ground the transformer on the high-voltage side and low-voltage side. Ensure that the grounding for work connection on the transformer is not removed during testing.
2. Ensure that the transformer remains de-energized during testing.
3. Deactivate the automatic fire extinguishing device.
4. Remove the cover cap.
5. Activate the sensor on the snap-action switch.
  - » Sensor is in the OFF position.
6. Leave the transformer's danger zone.
7. Ensure that the transformer's circuit breaker cannot be closed.
  - » Passive protection test
8. Activate the sensor on the snap-action switch.
  - » Sensor is in the OPERATION position.
9. Leave the transformer's danger zone.
10. Close the transformer's circuit breaker with isolating switches open and the transformer grounded on all sides.
11. Activate the sensor on the snap-action switch.
  - ⇒ Sensor is in the OFF position.
12. Ensure that the transformer's circuit breaker is open.
- .
- ⇒ Active protection test.
13. Activate the sensor on the snap-action switch to reset the pressure monitoring device.
  - ⇒ Sensor is in the OPERATION position.
14. Secure the cover cap.
- .

### 6.3.6 Commissioning the transformer

- ✓ The signaling contact for falling below the minimum insulating fluid fill level in the on-load tap-changer's oil conservator is looped into the tripping circuit of the circuit breaker.
  - ✓ The protective relay and additional protective devices are looped into the circuit breaker's tripping circuit.
  - ✓ The motor-drive unit and all protective devices are functioning correctly and are ready for use.
  - ✓ The oil compartment of the on-load tap-changer is completely filled with insulation fluid.
  - ✓ All stop-cocks between on-load tap-changer and oil conservator of the on-load tap-changer are open.
1. Switch on transformer.
  2. **NOTICE!** Inrush current impulses can be significantly greater than the transformer rated current and may lead to current paths with asymmetrical or non-sinusoidal curve shapes and, as a result, overload the on-load tap-changer during the diverter switch operation. Only perform tap-change operations - whether under no load or under load conditions - once the inrush current impulse has subsided.

# 7 Fault elimination

## ▲ WARNING



### Danger of explosion!

Explosive gases under the on-load tap-changer head cover can deflagrate or explode and result in severe injury or death.

- Ensure that there are no ignition sources such as open flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- De-energize all auxiliary circuits (for example tap-change supervisory device, pressure relief device, pressure monitoring device) before removing the on-load tap-changer head cover.
- Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

## NOTICE

### Damage to the on-load tap-changer and transformer!

If the protective relay or other protective devices trip, this can indicate damage to the on-load tap-changer and transformer. The transformer must not be energized without being inspected first.

- Check on-load tap-changer and transformer when protective relay or other protective devices have been tripped.
- Do not use the equipment again until you are sure there is no damage to the on-load tap-changer or transformer.

## NOTICE

### Damage to motor-drive unit!

Damage to the motor-drive unit due to condensate in protective housing of motor-drive unit.

- Always keep protective housing of the motor-drive unit tightly closed.
- In the event of operation interruptions of more than 2 weeks, connect and operate the heater in the motor-drive unit. If this is not possible, e.g. during transportation, place a sufficient amount of desiccant in the protective housing.

The table below is intended to assist with detecting and, where possible, remedying faults.

For more information, please consult the operating instructions for the protective relay or the relevant protective device.

In the event of faults on the on-load tap-changer and motor-drive unit which cannot be easily corrected on site, or if the protective relay or additional protective devices have been tripped, please inform your authorized MR representative, the transformer manufacturer or contact MR directly.

Maschinenfabrik Reinhausen GmbH  
Technical Service  
Postfach 12 03 60  
93025 Regensburg  
Germany  
Phone: +49 94140 90-0

Fax: +49 9 41 40 90-7001  
 E-mail: service@reinhausen.com  
 Internet: www.reinhausen.com

Fault description	Action
Tripping of protective relay	See "Tripping the protective relay and re-commissioning the transformer" Also contact MR.
Tripping of pressure relief device (e.g. MPreC®)	On-load tap-changer and transformer must be checked. Depending on the cause of tripping, take measurements / carry out checks on the transformer. Contact MR to check the on-load tap-changer.
Tripping of pressure monitoring device (e.g. DW 2000)	See "Tripping the pressure monitoring device and putting the transformer back into operation" Also contact MR.
Activation of tap-change supervisory device	The motor-drive unit can no longer be electrically actuated once the tap-change supervisory device has been activated. Manual operation of the motor-drive unit via the hand crank when the transformer is switched on is prohibited. On-load tap-changer and transformer must be checked. Depending on the cause of tripping, take measurements / carry out checks on the transformer. Contact MR to check the on-load tap-changer.
Activation of rupture disk in on-load tap-changer head cover	On-load tap-changer and transformer must be checked. Depending on the cause of tripping, take measurements / carry out checks on the transformer. Contact MR to check the on-load tap-changer.
Tripping of motor protective switch in motor-drive unit	See chapter "Fault elimination" in the operating instructions of the motor-drive unit
Tripping of signaling contact that indicates that the fill level of the insulating fluid has fallen below the minimum in the on-load tap-changer oil conservator	Check pipe system (pipes etc.) and on-load tap-changer head for leaks. Check the fill level and the quality of the insulating fluid in the oil compartment in accordance with the operating instructions for the on-load tap-changer. If the fill level has fallen below the limit values, also contact MR.
On-load tap-changer not changing tap position (sluggishness, Raise keys / Lower keys not working, no audible diverter switch action)	Contact MR.
No change in voltage on the transformer despite change in position on motor-drive unit	Contact MR.
Tap position indicator on motor-drive unit and on-load tap-changer different	Contact MR.
Noises on drive shaft or motor-drive unit when changing tap position	Ensure proper mounting of the drive shaft in accordance with its operating instructions. Check that hose clips and protective covers are seated correctly. Contact MR in the event of noise from the motor-drive unit.
Red message on monitoring unit	If possible read out database and send to MR along with error code.
Warning or tripping of Buchholz relay on transformer	Notify transformer manufacturer.
Deviation from desired value when measuring winding resistance of transformer	Contact transformer manufacturer and, if necessary, MR, and provide measured values.

Fault description	Action
Deviation from desired value during dissolved gas analysis (transformer oil)	Contact transformer manufacturer and, if necessary, MR, and provide measured values.
Deviation from desired value during transformer ratio test	Contact transformer manufacturer and, if necessary, MR, and provide measured values.
Deviation from limit value for insulating fluids	Carry out insulating fluid change, check oil conservator breather of on-load tap-changer.

Table 7: Fault elimination

## 7.1 Tripping the protective relay and re-commissioning the transformer

### ⚠ WARNING



#### Danger of explosion!

Explosive gases in the protective relay can deflagrate or explode and result in severe injury or death.

- > Wait 15 minutes after switching off the transformer before beginning further work on the protective relay so that the gases can dissipate.
- > Ensure that there are no ignition sources such as naked flames, hot surfaces or sparks (e.g. caused by the build-up of static charge) in the immediate surroundings and that none occur.
- > De-energize all auxiliary circuits before beginning work.
- > Do not operate any electrical devices during the work (e.g. risk of sparks from impact wrench).

### ⚠ WARNING



#### Danger of death or severe injury!

Danger of severe injury or death if on-load tap-changer and transformer are insufficiently tested.

- > Be sure to contact Maschinenfabrik Reinhausen to check on-load tap-changer and transformer if the protective relay has tripped.
- > Only use the equipment again when you are sure there is no damage to the on-load tap-changer or transformer.

When the circuit breakers have been tripped by the protective relay, proceed as follows:

1. Establish time of tripping.
2. Determine operating position of on-load tap-changer.
3. As a precaution, block the motor-drive unit by tripping the motor protective switch to prevent the on-load tap-changer from being actuated by remote control.
4. Check the on-load tap-changer head cover. If insulating fluid is leaking, close the oil conservator stop valve immediately.
5. Check whether the flap valve of the protective relay is in the OFF or OPERATION position.

### 7.1.1 Flap valve in OPERATION position

If the flap valve is in the OPERATION position, there may be a fault in the tripping circuit. Check the tripping circuit in this case. If you are not able to clarify why the protective relay tripped, be sure to contact Maschinenfabrik Reinhausen to check the on-load tap-changer.

## 7.1.2 Flap valve in OFF position

- Note that protective relay RS 2004 features an automatic reset mechanism which means that the flap valve does not remain in the OFF position after tripping. If the protective relay RS 2004 has not tripped due to an error in the tripping circuit, also proceed as described below for RS 2004.

If the flap valve is in the OFF position, proceed as follows:

1. Ensure that the transformer is not started up under any circumstances.
2. Contact and inform Maschinenfabrik Reinhausen of the following:
  - » Serial number of protective relay and on-load tap-changer
  - » What was the load of the transformer at the instant of tripping?
  - » Was the on-load tap-changer moved immediately before or during tripping?
  - » Did any other protective devices of the transformer respond at the instant of tripping?
  - » Were switching operations in the network being carried out at the instant of tripping?
  - » Were overvoltages registered at the instant of tripping?
3. Take further action in agreement with Maschinenfabrik Reinhausen.

## 7.1.3 Re-commissioning the transformer

Once the reason for the protective relay tripping has been established and remedied, you can re-commission the transformer:

1. Check the protective relay [► Section 6.3.4.1, Page 200].
2. Commission the transformer.

## 7.2 Tripping the pressure monitoring device and putting the transformer back into operation

### ▲ WARNING



#### **Danger of death or severe injury!**

Danger of severe injury or death if on-load tap-changer and transformer are insufficiently tested.

- > Be sure to contact Maschinenfabrik Reinhausen to check on-load tap-changer and transformer after the pressure monitoring device has been tripped.
- > Only use the equipment again when you are sure there is no damage to the on-load tap-changer or transformer.

If the circuit breaker is tripped by the pressure monitoring device, proceed as follows:

1. Establish time of tripping.
2. Determine operating position of on-load tap-changer.
3. As a precaution, block the motor-drive unit by tripping the motor protective switch to prevent the on-load tap-changer from being actuated by remote control.
4. Check the on-load tap-changer head cover. If insulating fluid is leaking, close the oil conservator stop valve immediately.
5. Check whether the pressure monitoring device sensor is in the OFF position or OPERATION position.

### 7.2.1 Sensor in the OPERATION position

If the sensor is in the OPERATION position, there may be an error in the tripping circuit. Check the tripping circuit in this case. If you are not able to clarify why the pressure monitoring device tripped, be sure to contact Maschinenfabrik Reinhausen to check the on-load tap-changer.

### 7.2.2 Sensor in the OFF position

Proceed as follows if the sensor is in the OFF position.

1. Ensure that the transformer is not started up under any circumstances.
2. Contact and inform Maschinenfabrik Reinhausen of the following:
  - » What was the load of the transformer at the instant of tripping?
  - » Was there a tap-change operation on the on-load tap-changer immediately before or during the tripping?
  - » Did any other protective devices of the transformer respond at the instant of tripping?
  - » Were switching operations in the network being carried out at the instant of tripping?
  - » Were overvoltages registered at the instant of tripping?
  - » How high is the static pressure on the pressure relief device (height difference between the oil level in the on-load tap-changer oil conservator and the pressure relief device)?
3. Take further action in agreement with Maschinenfabrik Reinhausen.

### 7.2.3 Re-commissioning the transformer

You can re-commission the transformer once the cause for tripping the pressure monitoring device has been determined and resolved:

1. Ensure that the sensor on the snap-action switch is in the OPERATION position.
2. Commission the transformer.

# 8 Disposal

For disposal, observe the national requirements applicable in the country of use.

If you have any questions about disassembly and disposal, please contact Maschinenfabrik Reinhausen GmbH's Technical Service department.

# 9 Technical data

The key technical data for the on-load tap-changer is summarized in this chapter.

Further information on the selection of on-load tap-changers in general can be found in the chapters "Tap-changer designation", "Electrical properties" and "Selecting the on-load tap-changer" in the technical data TD61.

## 9.1 Technical data for on-load tap-changer

### 9.1.1 On-load tap-changer properties

Electrical data for VACUTAP® VR®,  $I_{rm}$  1,600 A, R-selector

On-load tap-changer	VRL III 1600
Maximum rated through-current $I_{rm}$ [A]	1,600
Rated short-time current [kA]	16
Rated duration of short-circuits [s]	3
Rated peak withstand current [kA]	40
Maximum rated step voltage $U_{irm}$ [V]	4,600
Step capacity $P_{stm}$ [kVA] <sup>1)</sup>	6,000
Rated frequency [Hz]	50...60
<sup>1)</sup> see step capacity diagram [► Section 9.1.5, Page 212]	

Table 8: Electrical data for VACUTAP® VRL

### Mechanical data for VACUTAP® VR

Number of operating positions	Without change-over selector: maximum 18 With change-over selector: maximum 35
Number of equipped sectors	3
Selector sizes	E
Dimensions	See dimensional drawings [► Section 10.1, Page 221]
Weight	
Displacement and oil volume	

Table 9: Mechanical data for VACUTAP® VR

### 9.1.2 Permissible ambient conditions

Air temperature during operation	-25°C...+50°C
Temperature of the insulating fluid in operation	-25°C...+105°C (up to +115°C when the transformer is in emergency operation)
Transport temperature, storage temperature	-40°C...+50°C
Drying temperatures	See installation and commissioning instructions, "Mounting" chapter

Compressive strength	The on-load tap-changer oil compartment is pressure-resistant to 0.3 bar of continuous differential pressure (test pressure 0.6 bar). The head and cover of the on-load tap-changer and de-energized tap-changer are vacuum-resistant.
Insulating fluid	<ul style="list-style-type: none"> <li>– Unused insulating oils derived from petroleum products<sup>1)</sup> in accordance with IEC 60296 and ASTM D3487 (equivalent standards on request)</li> <li>– Unused insulating oils derived from other virgin hydrocarbons in accordance with IEC 60296, or blends of these oils with petroleum products<sup>1)</sup> in accordance with IEC 60296, ASTM D3487 or equivalent standards on request</li> <li>– Alternative insulating fluids, such as natural and synthetic esters or silicone oils, on request.</li> </ul> <p><sup>1)</sup> Gas-to-liquid oils (GTL oils) are understood in this context to be petroleum products</p>

Table 10: Permissible ambient conditions

### 9.1.3 Height of the oil conservator

The permissible heights for the oil conservators of the on-load tap-changer and transformer must be observed. These ensure:

- seal integrity of on-load tap-changer oil compartment in relation to surroundings and transformer
- correct function (e.g. switching process) of on-load tap-changer and other pressure-dependent devices

The standard on-load tap-changer model is designed for a maximum oil conservator height  $H_{max}$  of **up to 5 m**. To calculate this height, the distance between the maximum oil level in the oil conservator and the top edge of the on-load tap-changer head cover must be determined.

If the height  $H_{max}$  of the oil level in the on-load tap-changer's oil conservator is more than 5 m above the on-load tap-changer head cover, this must be stated in the order so that an appropriate product variant can be selected.

For VACUTAP® on-load tap-changers at installation heights  $H_{NHN}$  of more than 2,000 m above sea level, the maximum permissible height  $H_{max}$  of the oil conservator is increased by the minimum distance  $H_{min}$  between the oil level and on-load tap-changer head cover in accordance with section Installation height above sea level.

#### Difference in height $\Delta h$ between oil levels in on-load tap-changer and transformer

If the oil conservators for the on-load tap-changer and transformer are in separate locations, the difference in height  $\Delta h$  between the oil levels may be a **maximum of 3 m**.

If the on-load tap-changer and transformer share an oil conservator (with or without divider), this difference is not normally reached. With a shared oil conservator, the difference in height can then be ignored.

### 9.1.4 Installation height above sea level

VACUTAP® oil-insulated on-load tap-changers with an open oil conservator are released without limitations up to an installation height  $H_{NHN}$  of 2,000 m above sea level. Above 2,000 m, a minimum height must be observed for the oil conservator.

The installation height of the oil conservator is determined by the distance  $H_{min}$  between the upper edge of the on-load tap-changer head cover and the oil level in the oil conservator.

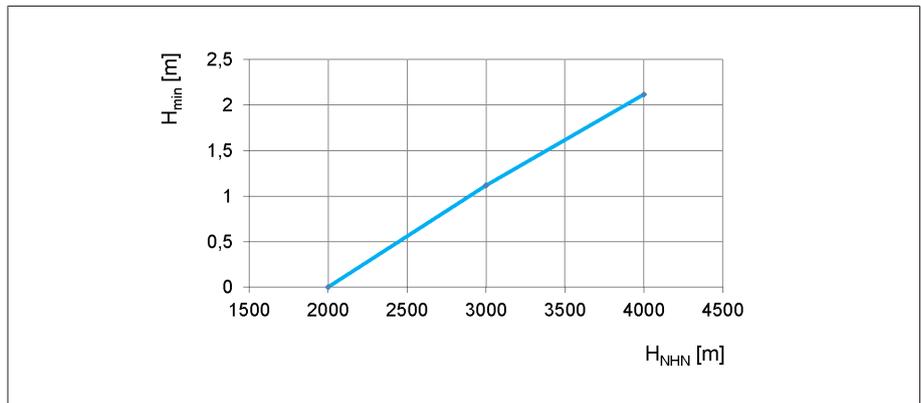


Figure 313: Minimum distance  $H_{min}$  between oil level and on-load tap-changer head cover

$H_{min}$	Distance between oil level in the oil conservator and upper edge of the on-load tap-changer head cover.
$H_{NHN}$	Installation height above sea level

For VACUTAP® on-load tap-changers at installation heights  $H_{NHN}$  of more than 2,000 m above sea level, the maximum permissible height of the oil conservator (in accordance with section Height of oil conservator ) is increased by this minimum distance  $H_{min}$  between the oil level and on-load tap-changer head cover.

### 9.1.5 Step capacity diagrams

### 9.1.5.1 Step capacity diagram for network application

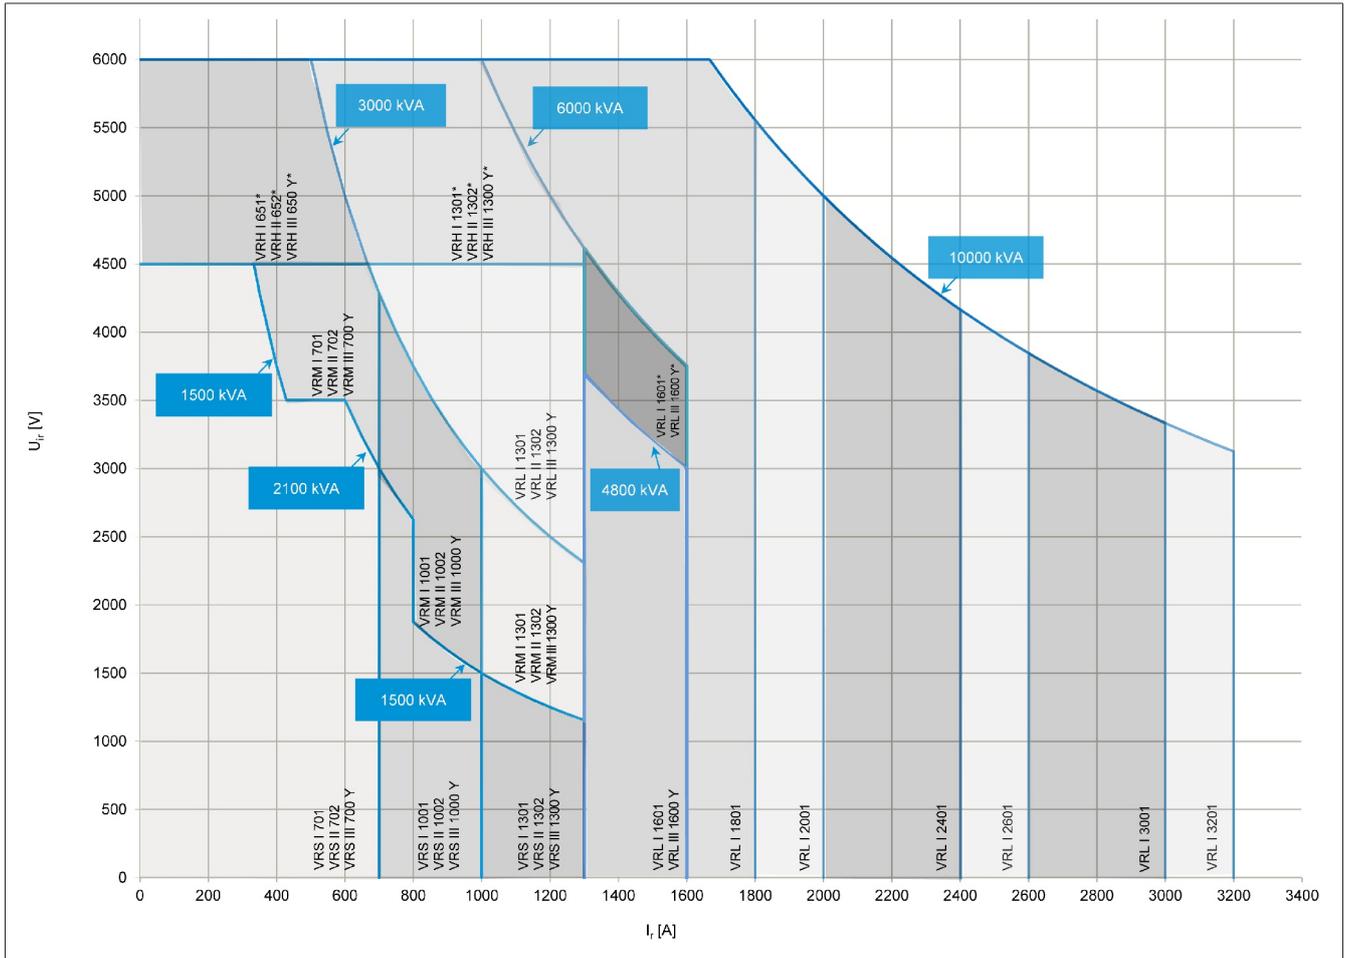


Figure 314: Step capacities (rated voltage  $U_r$ , rated through-current  $I_r$ ), on-load tap-changer types marked with \* are special applications and are only available on request.

## 9.2 Technical data for protective relay

The technical data for the protective relay RS 2001 is listed in the following. In accordance with DIN EN 60255-1, operational accuracy = base accuracy

Housing	Outdoor model
Degree of protection	IP66
Relay actuation	Flap valve with aperture
Weight	approx. 3.5 kg
Oil flow speed of available types when tripping (oil temperature 20 °C)	0.65 ± 0.15 m/s 1.20 ± 0.20 m/s 3.00 ± 0.40 m/s 4.80 ± 0.60 m/s

Table 11: General technical data

### Tripping circuit

The protective relay can be supplied with either a normally open (NO) or a normally closed (NC) dry-reed magnetic switch (see dimensional drawing supplied). Other contact combinations are available as a special version.

### Electrical data for normally closed (NC) dry-reed magnetic switch

Electrical data	
DC switching capacity	1.2 W...200 W
AC switching capacity (50 Hz)	1.2 VA...400 VA
Switching voltage AC/DC	24 V...250 V
Switched current AC/DC	4.8 mA...2 A

Table 12: Electrical data

Switching capacity (switching load on an off)	
Minimum switched current AC/DC (lowest voltage)	50 mA (at 24 V)
Minimum switched current AC/DC (highest voltage)	4.8 mA (at 250 V)
Maximum switched current DC (highest current)	1.6 A (at 125 V with L/R = 40 ms)
Maximum switched current DC (highest voltage)	0.9 A (at 250 V with L/R = 40 ms)
Maximum switched current AC (highest current)	2 A (at 125 V with $\cos \varphi = 0.6$ )
Maximum switched current AC (highest voltage)	1.6 A (at 250 V with $\cos \varphi = 0.6$ )
Switching operations	1,000 cycles

Table 13: Switching capacity (switching load on an off)

Dielectric strength	
AC dielectric strength between all voltage-carrying connections and the grounded parts	2,500 V, 50 Hz, test duration 1 minute
AC dielectric strength between the opened contacts	2,000 V, 50 Hz, test duration 1 minute

Table 14: Dielectric strength

### Electrical data for normally open (NO) dry-reed magnetic switch

Electrical data	
DC switching capacity	1.2 W...250 W
AC switching capacity (50 Hz)	1.2 VA...400 VA
Switching voltage AC/DC	24 V...250 V
Switched current AC/DC	4.8 mA...2 A

Table 15: Electrical data

Switching capacity (switching load on an off)	
Minimum switched current AC/DC (lowest voltage)	50 mA (at 24 V)
Minimum switched current AC/DC (highest voltage)	4.8 mA (at 250 V)
Maximum switched current DC (highest current)	2 A (at 125 V with L/R = 40 ms)
Maximum switched current DC (highest voltage)	1 A (at 250 V with L/R = 40 ms)
Maximum switched current AC (highest current)	2 A (at 125 V with $\cos \varphi = 0.6$ )
Maximum switched current AC (highest voltage)	1.6 A (at 250 V with $\cos \varphi = 0.6$ )
Switching operations	1,000 cycles

Table 16: Switching capacity (switching load on an off)

Dielectric strength	
AC dielectric strength between all voltage-carrying connections and the grounded parts	2,500 V, 50 Hz, test duration 1 minute
AC dielectric strength between the opened contacts	2,000 V, 50 Hz, test duration 1 minute

Table 17: Dielectric strength

### Ambient conditions

Ambient temperature Ta	-40°C...+50°C
Oil temperature	<130 °C
Air pressure	Corresponds to 0 m...4,000 m above sea level

Table 18: Ambient conditions

## 9.3 Special models of protective relay

### 9.3.1 Protective relay with CO change-over contact as tripping switch

The protective relay can be supplied with a dry-reed magnetic switch, CO change-over (variant 3) (see dimensional drawing supplied).

#### Electrical data for CO change-over dry-reed magnetic switch

Electrical data	
DC switching capacity	1.2 W...150 W
AC switching capacity (50 Hz)	1.2 VA...200 VA
Switching voltage AC/DC	24 V...250 V
Switched current AC/DC	4.8 mA...1 A

Table 19: Electrical data

Switching capacity (switching load on an off)	
Minimum switched current AC/DC (lowest voltage)	50 mA (at 24 V)
Minimum switched current AC/DC (highest voltage)	4.8 mA (at 250 V)
Maximum switched current DC (highest current)	1.0 A (at 150 V with L/R = 40 ms)
Maximum switched current DC (highest voltage)	0.6 A (at 250 V with L/R = 40 ms)
Maximum switched current AC (highest current)	1 A (at 200 V with $\cos \varphi = 0.6$ )
Maximum switched current AC (highest voltage)	0.8 A (at 250 V with $\cos \varphi = 0.6$ )
Switching operations	1,000 cycles

Table 20: Switching capacity (switching load on an off)

Dielectric strength	
AC dielectric strength between all voltage-carrying connections and the grounded parts	2,500 V, 50 Hz, test duration 1 minute
AC dielectric strength between the opened contacts	1,150 V, 50 Hz, test duration 1 minute

Table 21: Dielectric strength

### 9.3.2 Protective relay with several dry-reed magnetic switches

The protective relay can be supplied with several independent dry-reed magnetic switches. These can be designed as normally open (NO) or normally closed (NC) contacts and are electrically isolated (see dimensional drawing supplied).

Electrical data for normally open (NO) and normally closed (NC) dry-reed magnetic switch

## 9.4 Technical data for pressure monitoring device

### General technical data

Setup	Outdoor model
Ambient temperature	-40 °C...+80 °C (mechanical)
Cable gland	M25x1.5
Degree of protection	IP55 in accordance with IEC 60529 (enclosed device)
Relay actuation	Corrugated tubing with counter-pressure spring
Oil temperature	-40 °C...+100 °C
Weight	approx. 1.2 kg
Equipment	For standard insulating fluids (IEC60296 and IEC60422)
Sealing material (oil – air)	VITON
Permitted pressure range (absolute pressure)	1 bar...6 bar, vacuum not permitted
Upper switching pressure	3.8 ± 0.2 bar (trip pressure)
Lower switching pressure	2,8 ± 0,2 bar
<b>Snap-action switch</b>	
Connection terminals	Lead connection: 1 or 2 leads per terminal (Ø 0.75...2.5 mm <sup>2</sup> )
Contacts	1xNO (normally open), 1xNC (normally closed)
Utilization category	IEC 60947-5-1: AC 15: 230 V/1 A DC 13: 60 V/0.5 A
Maximum continuous current	10 A
Rated insulation voltage	AC: 2.5 kV/min

Table 22: General technical data

## 9.5 Limit values for dielectric strength and water content of insulating fluids

Limit values for insulating fluids in accordance with IEC 60296	$U_d$	H <sub>2</sub> O
When commissioning the transformer for the first time	> 60 kV/2.5 mm	< 12 ppm
During operation	> 30 kV/2.5 mm	< 30 ppm
After maintenance	> 50 kV/2.5 mm	< 15 ppm

Table 23: Limit values for insulating fluids in accordance with IEC 60296, dielectric strength measured in accordance with IEC 60156, water content measured in accordance with IEC 60814

Limit values for natural esters in accordance with IEC 62770	$U_d$	H <sub>2</sub> O
When commissioning the transformer for the first time	> 60 kV/2.5 mm	≤ 100 ppm
During operation	> 30 kV/2.5 mm	≤ 200 ppm
After maintenance	> 50 kV/2.5 mm	≤ 100 ppm

Table 24: Limit values for natural esters in accordance with IEC 62770, dielectric strength measured in accordance with IEC 60156, water content measured in accordance with IEC 60814

Limit values for synthetic esters in accordance with IEC 61099	$U_d$	H <sub>2</sub> O
When commissioning the transformer for the first time	> 60 kV/2.5 mm	≤ 100 ppm
During operation	> 30 kV/2.5 mm	≤ 400 ppm
After maintenance	> 50 kV/2.5 mm	≤ 150 ppm

Table 25: Limit values for synthetic esters in accordance with IEC 61099, dielectric strength measured in accordance with IEC 60156, water content measured in accordance with IEC 60814

## 9.6 On-load tap-changer for Y connection with open neutral point

If on-load tap-changers have an open neutral point, **only current transformers** may be connected to the open neutral point. Otherwise impermissible overvoltages arise at the neutral point.



Reactors must not be connected.

Connection of three oil vessel outputs (= open neutral point)	VACUTAP® VRS/VRM/VRL III 700/1000/1300/1600 Y VACUTAP® VRH III 650/1300 Y	
Current transformer connection and neutral point formation outside on-load tap-changer	A) Test voltages permitted between the oil vessel output contacts	
	– Rated lightning impulse withstand voltage	< 140 kV (1.2/50 µS) <sup>1)</sup>
	– Rated short-duration power frequency withstand voltage	1 kV (50 Hz, 1 min)
	B) Permissible maximum operating voltage between oil vessel output contacts	1 kV (50...60 Hz)
<sup>1)</sup> varistor response voltage at 1.2/50 µs lightning impulse: > 1.4 kV, residual voltage at 1000 A (8/20 µs) peak withstand current: < 3 kV, maximum permissible energy load of the varistor < 100 J		


Table 26: Permissible test voltages and operating voltages for VACUTAP® VRS/VRM/VRL III 700/1000/1300/1600 Y and VACUTAP® VRH III 650/1300 Y

# 10 Drawings

## 10.1 Dimensional drawings

MASCHINENFABRIK REINHAUSEN GMBH COPYRIGHT RESERVED  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF A PATENT, UTILITY MODEL OR DESIGN.

DATE	26.07.2022	DOCUMENT NO.	SED 8914339 001 00
DFTR.	27.07.2022	NAME	BUTERUS
CHKD.	27.07.2022	WREDE	KLEYN
STAND	27.07.2022	CHANGE NO.	1116192
		SCALE	

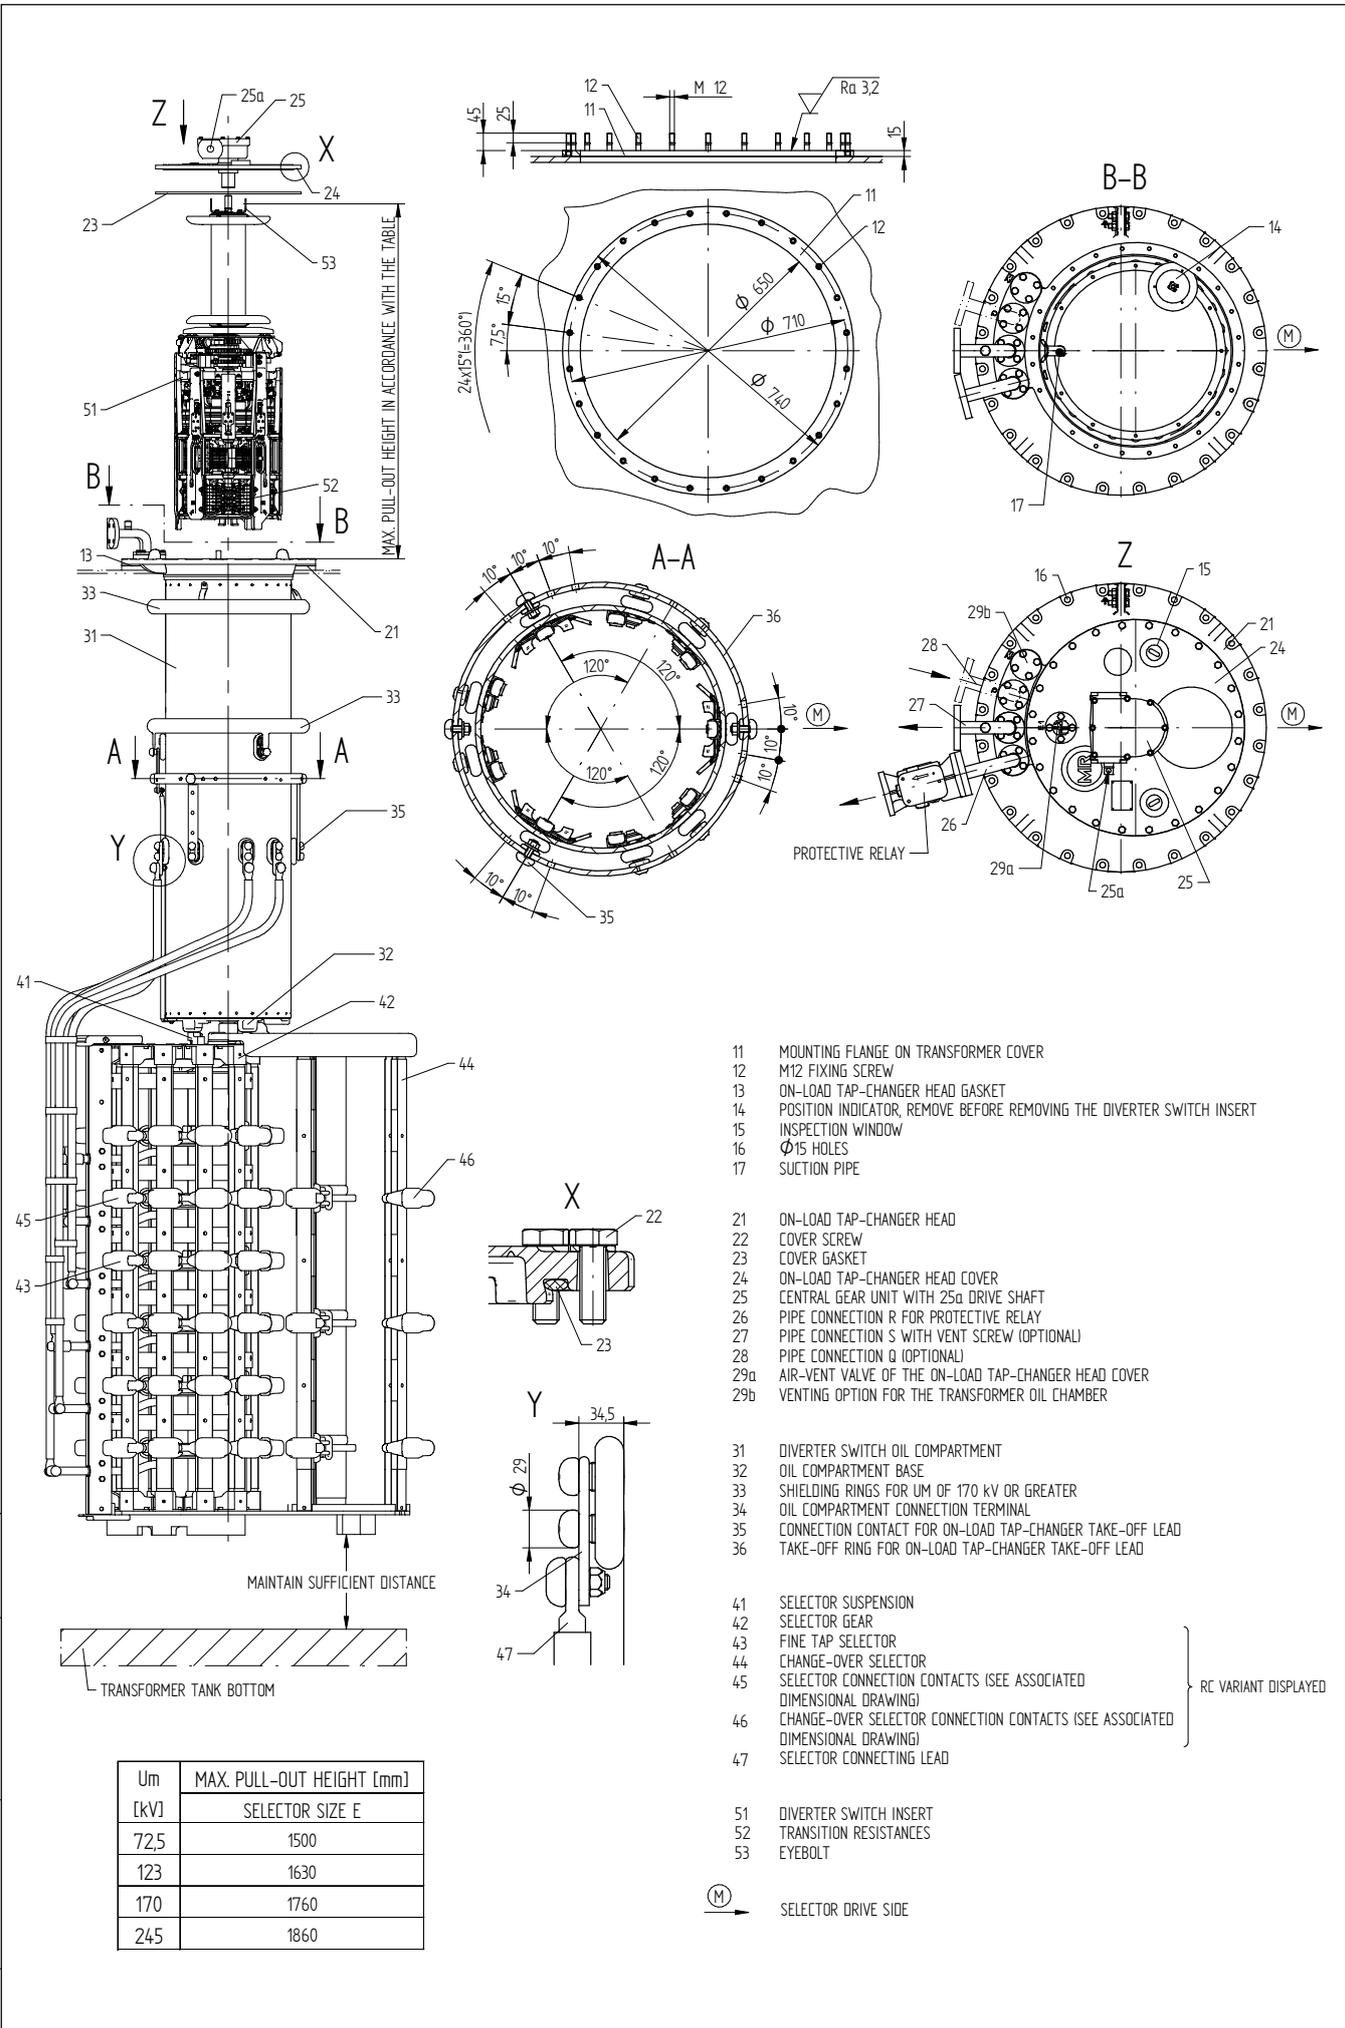

Um [kV]	MAX. PULL-OUT HEIGHT [mm]
	SELECTOR SIZE E
72,5	1500
123	1630
170	1760
245	1860

- 11 MOUNTING FLANGE ON TRANSFORMER COVER
  - 12 M12 FIXING SCREW
  - 13 ON-LOAD TAP-CHANGER HEAD GASKET
  - 14 POSITION INDICATOR, REMOVE BEFORE REMOVING THE DIVERTER SWITCH INSERT
  - 15 INSPECTION WINDOW
  - 16 Ø15 HOLES
  - 17 SUCTION PIPE
  
  - 21 ON-LOAD TAP-CHANGER HEAD
  - 22 COVER SCREW
  - 23 COVER GASKET
  - 24 ON-LOAD TAP-CHANGER HEAD COVER
  - 25 CENTRAL GEAR UNIT WITH 25a DRIVE SHAFT
  - 26 PIPE CONNECTION R FOR PROTECTIVE RELAY
  - 27 PIPE CONNECTION S WITH VENT SCREW (OPTIONAL)
  - 28 PIPE CONNECTION Q (OPTIONAL)
  - 29a AIR-VENT VALVE OF THE ON-LOAD TAP-CHANGER HEAD COVER
  - 29b VENTING OPTION FOR THE TRANSFORMER OIL CHAMBER
  
  - 31 DIVERTER SWITCH OIL COMPARTMENT
  - 32 OIL COMPARTMENT BASE
  - 33 SHIELDING RINGS FOR UM OF 170 kV OR GREATER
  - 34 OIL COMPARTMENT CONNECTION TERMINAL
  - 35 CONNECTION CONTACT FOR ON-LOAD TAP-CHANGER TAKE-OFF LEAD
  - 36 TAKE-OFF RING FOR ON-LOAD TAP-CHANGER TAKE-OFF LEAD
  
  - 41 SELECTOR SUSPENSION
  - 42 SELECTOR GEAR
  - 43 FINE TAP SELECTOR
  - 44 CHANGE-OVER SELECTOR
  - 45 SELECTOR CONNECTION CONTACTS (SEE ASSOCIATED DIMENSIONAL DRAWING)
  - 46 CHANGE-OVER SELECTOR CONNECTION CONTACTS (SEE ASSOCIATED DIMENSIONAL DRAWING)
  - 47 SELECTOR CONNECTING LEAD
- } RC VARIANT DISPLAYED
- 
- 51 DIVERTER SWITCH INSERT
  - 52 TRANSITION RESISTANCES
  - 53 EYEBOLT
- SELECTOR DRIVE SIDE

DIMENSION IN mm EXCEPT AS NOTED





**ON-LOAD TAP-CHANGER VACUTAP® VR®**  
**INSTALLATION DRAWING VRL III 1600 - E**  
**DIMENSION DRAWING**

SERIAL NUMBER	
-	
MATERIAL NUMBER	SHEET
101714730E	1/1

## 10.2 On-load tap-changer head

© MASCHINENFABRIK REINHAUSEN GMBH 2018  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF THE GRANT OF A PATENT, UTILITY MODEL OR DESIGN.

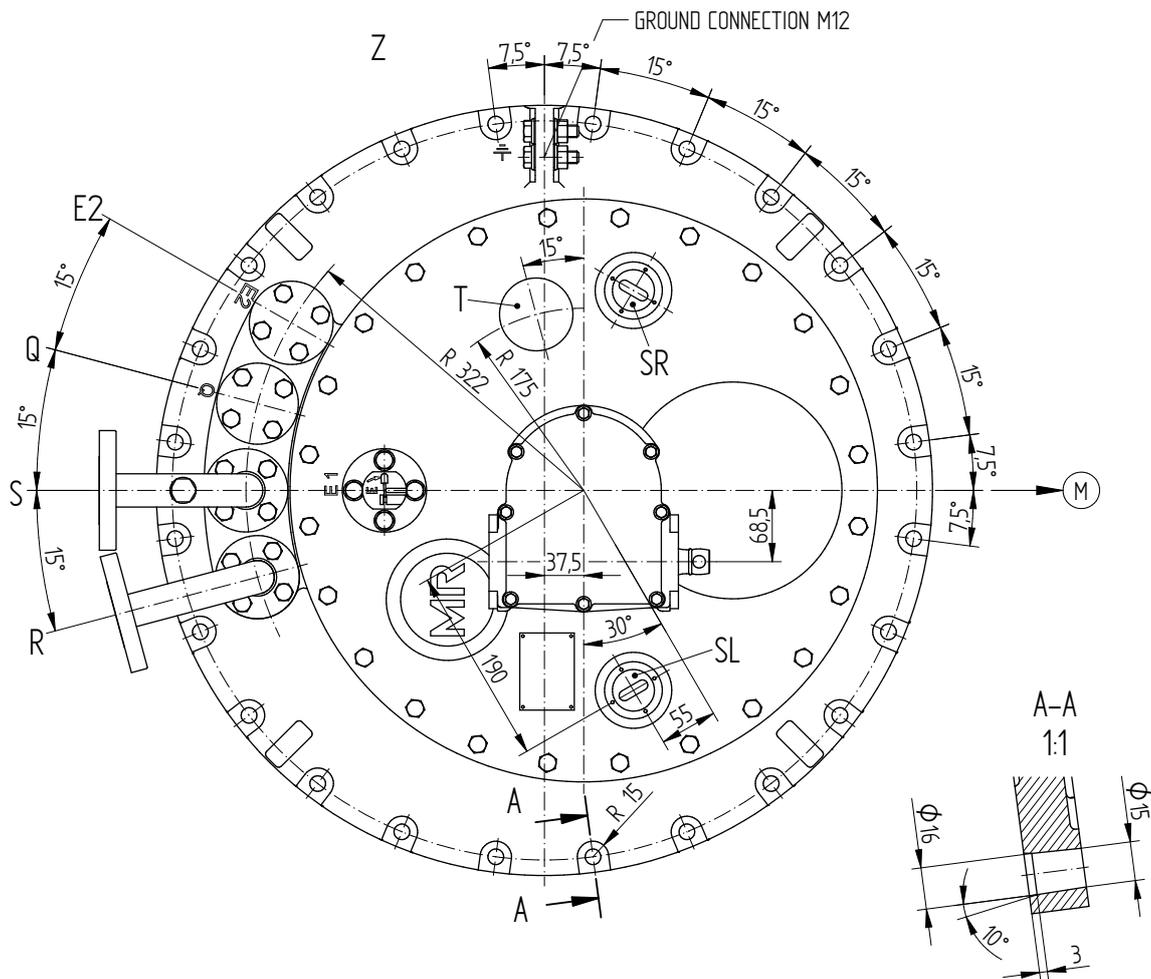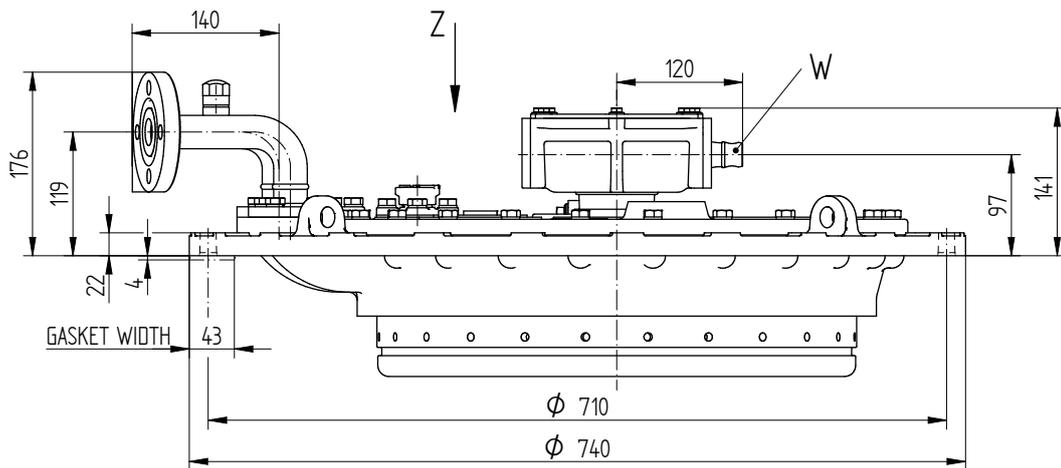

E1 = BLEEDING FACILITY FOR ON-LOAD TAP-CHANGER HEAD

E2 = BLEEDING FACILITY FOR SPACE UNDER THE HEAD OUTSIDE

THE TAP-CHANGER OIL COMPARTMENT (SAME PIPE CONNECTION AS R, S, Q OR BLEEDER SCREW CAN BE USED)

Q = CONNECTION FOR OIL RETURN PIPE OR TAP-CHANGE SUPERVISORY CONTROL

S = CONNECTION FOR SUCTION PIPE

R = CONNECTION FOR PROTECTIVE RELAY (EXCHANGEABLE WITH CONNECTION Q)

T = THERMOMETER BAG / TEMPERATURE SENSOR (OPTIONALLY)

SR = INSPECTION WINDOW, RIGHT

SL = INSPECTION WINDOW, LEFT

W = DRIVE SHAFT

(M) DRIVE SIDE OF SELECTOR

CONNECTIONS SWIVELING  
 DIMENSIONS AND SELECTION 899496: / 899497.

DATE	NAME	DOCUMENT NO.
DFTR. 11.07.2018	BUTERUS	SED 1661272 001 04
CHKD. 16.07.2018	WILHELM	SCALE 1:2,5
STAND. 16.07.2018	PRODASTSCHUK	CHANGE NO. 1086956

DIMENSION  
 IN mm  
 EXCEPT AS  
 NOTED



ON-LOAD TAP-CHANGER  
 OILTAP® M, MS, R, RM AND VACUTAP® VR®, VM®, VMS®  
 ON-LOAD TAP-CHANGER HEAD, CENTRIC DRIVE

SERIAL NUMBER

MATERIAL NUMBER  
 893899FE

SHEET  
 1/1



© MASCHINENFABRIK REINHAUSEN GMBH 2018  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF A PATENT, UTILITY MODEL OR DESIGN.

DFTR.	11.07.2018	DATE	NAME	DOCUMENT NO.
CHKD.	16.07.2018		BUTERUS	SED 1661250 001 03
STAND.	16.07.2018		WILHELM	CHANGE NO. SCALE
			PRODASTSCHUK	1086956 1:2,5

DIMENSION  
 IN mm  
 EXCEPT AS  
 NOTED




ON-LOAD TAP-CHANGER  
 OILTAP® M, MS, R, RM AND VACUTAP® VR®, VM®, VMS®  
 WITH MOUNTING FLANGE FOR PRESSURE RELIEF DEVICE

SERIAL NUMBER

MATERIAL NUMBER  
 8951689E

SHEET  
 1/1

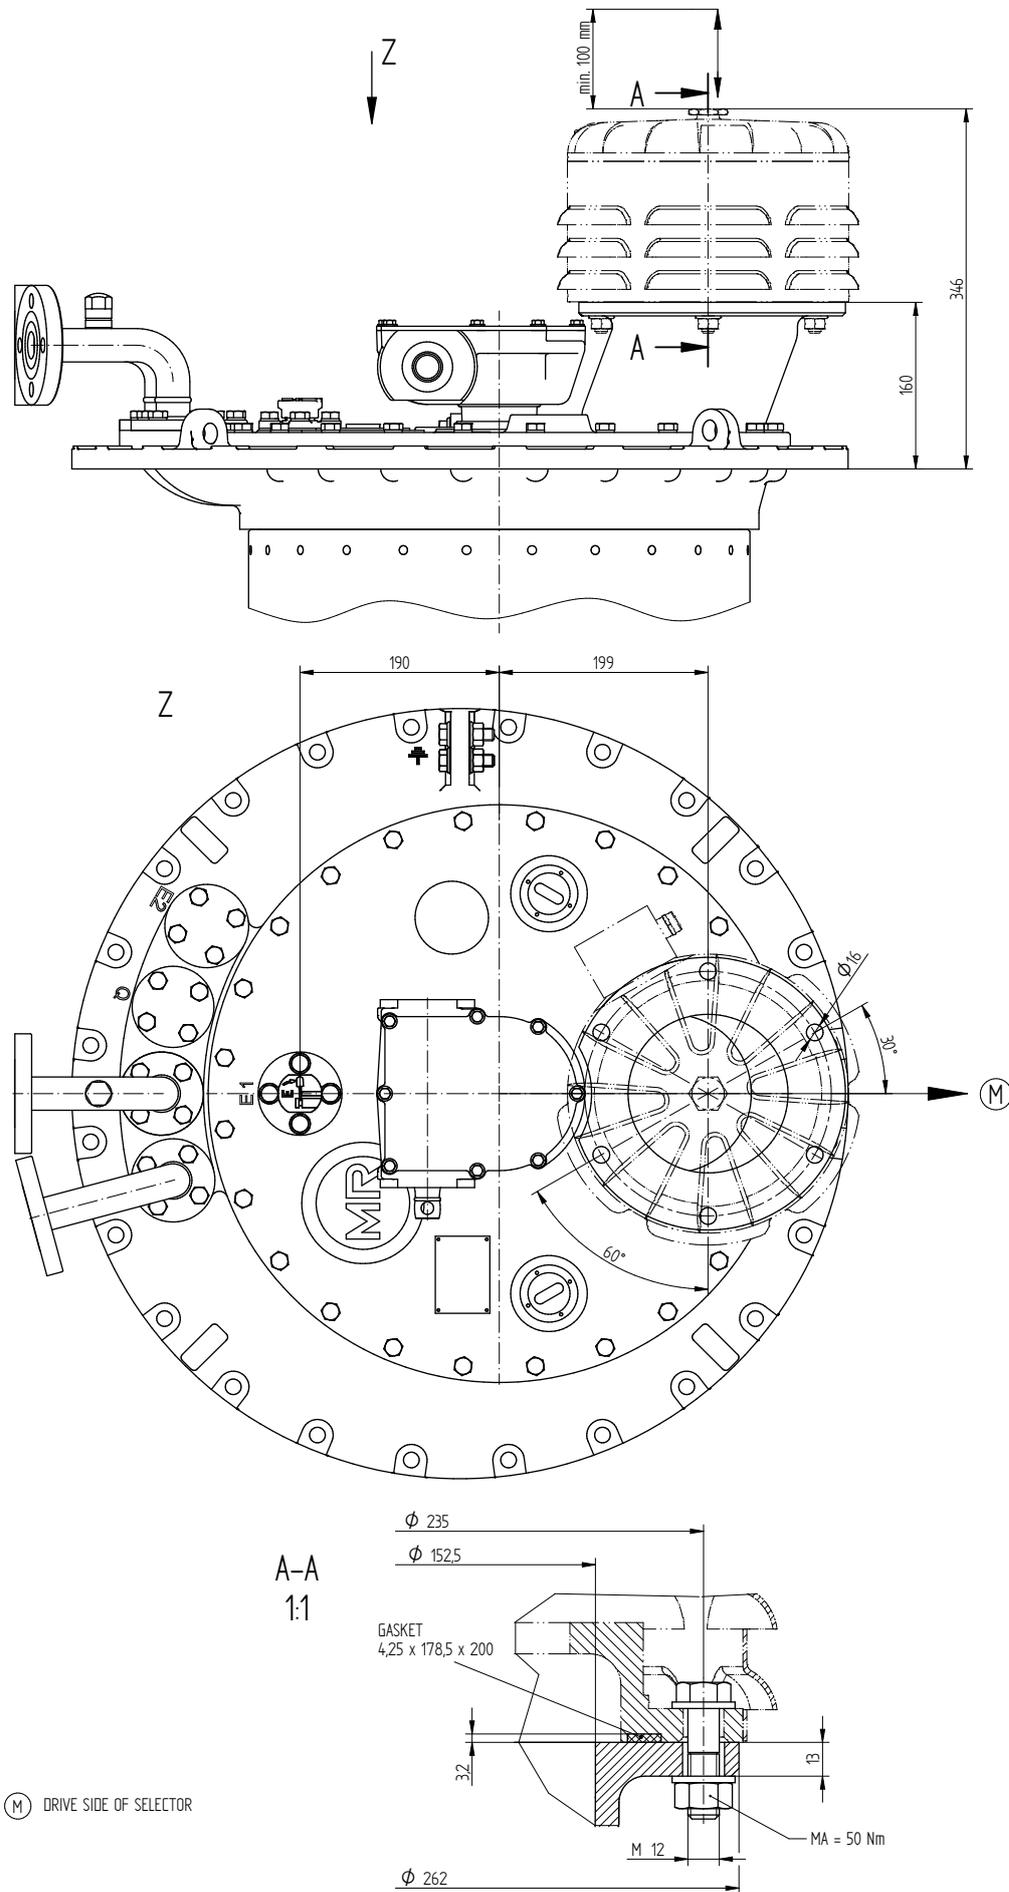

© MASCHINENFABRIK REINHAUSEN GMBH 2016

Weitergabe sowie Vervielfältigung dieses Dokuments, Verwertung und Mitteilung seines Inhaltes sind verboten, soweit nicht ausdrücklich gestattet. Zuwiderhandlungen verpflichten zu Schadensersatz. Alle Rechte für den Fall der Patent-, Gebrauchsmuster- oder Geschmacksustereintragung vorbehalten.

Datum	01.06.2016	Name	BRANDL	Dokumentnummer	SED 2127250 000 02
Gez.	01.06.2016	Huberth	HUBERTH	Änderungsnummer	Maßstab
Norm.	01.06.2016	Prodastrichuk	PRODASTRICHUK	1074942	1:2

Maßangaben  
in mm, soweit  
nicht anders  
angegeben




Zubehör Stufenschalter  
Winkeltrieb CD6400BEVEL GEAR CD6400  
Maßzeichnung


Serialnummer

Materialnummer  
8929167M


Blatt  
1 / 1

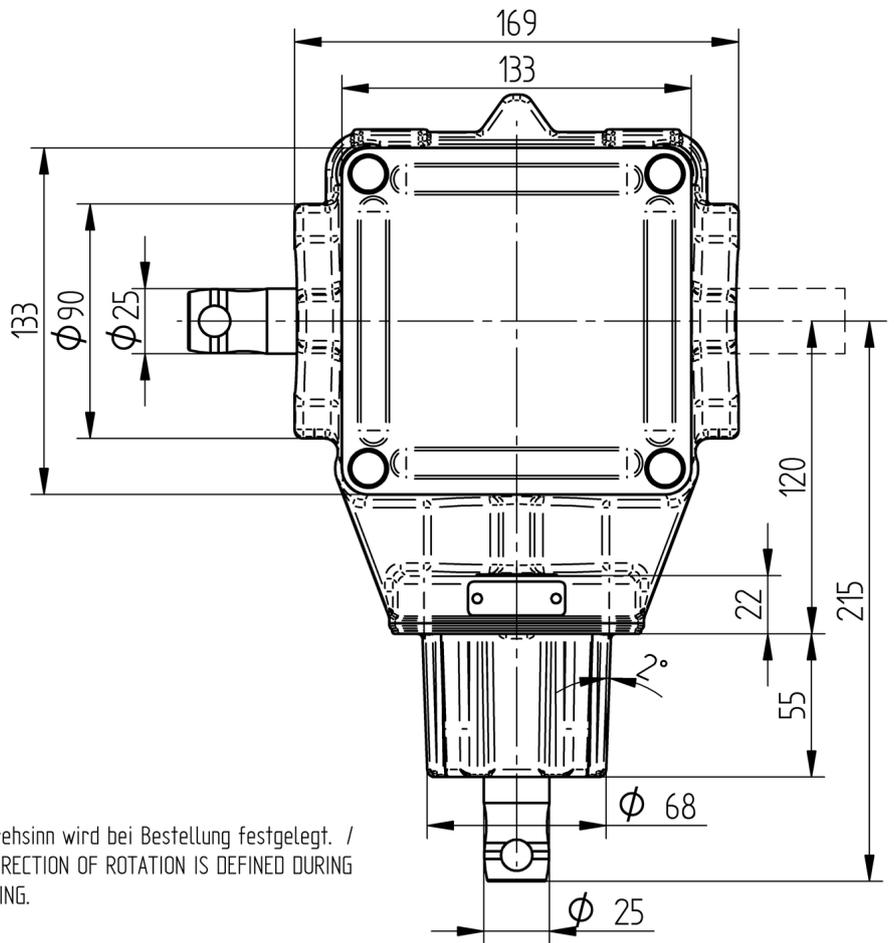

Der Drehsinn wird bei Bestellung festgelegt. /  
THE DIRECTION OF ROTATION IS DEFINED DURING  
ORDERING.

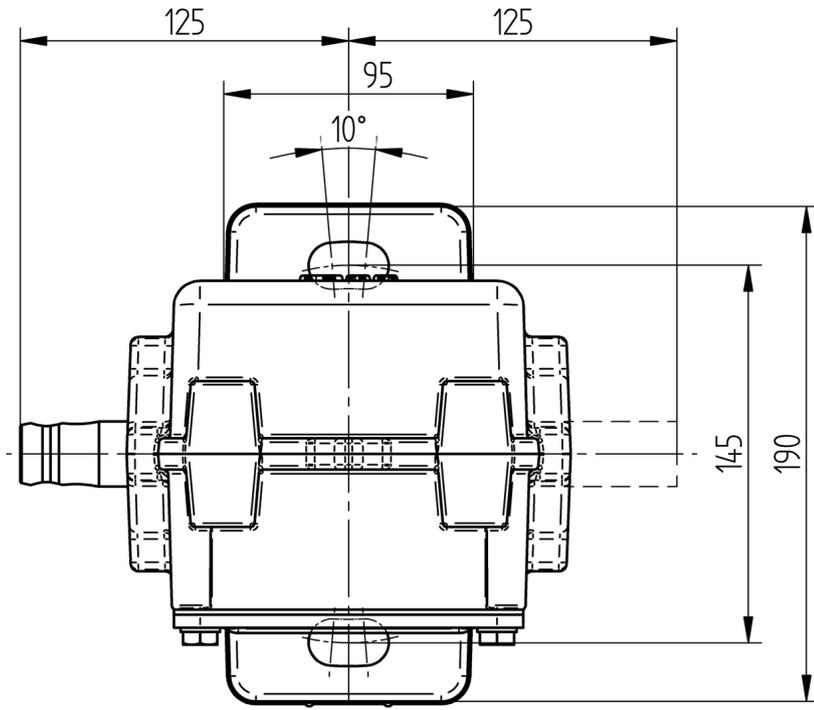

The copying, distribution and utilization of this document as well as the communication of its contents to others without expressed authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or ornamental design registration.

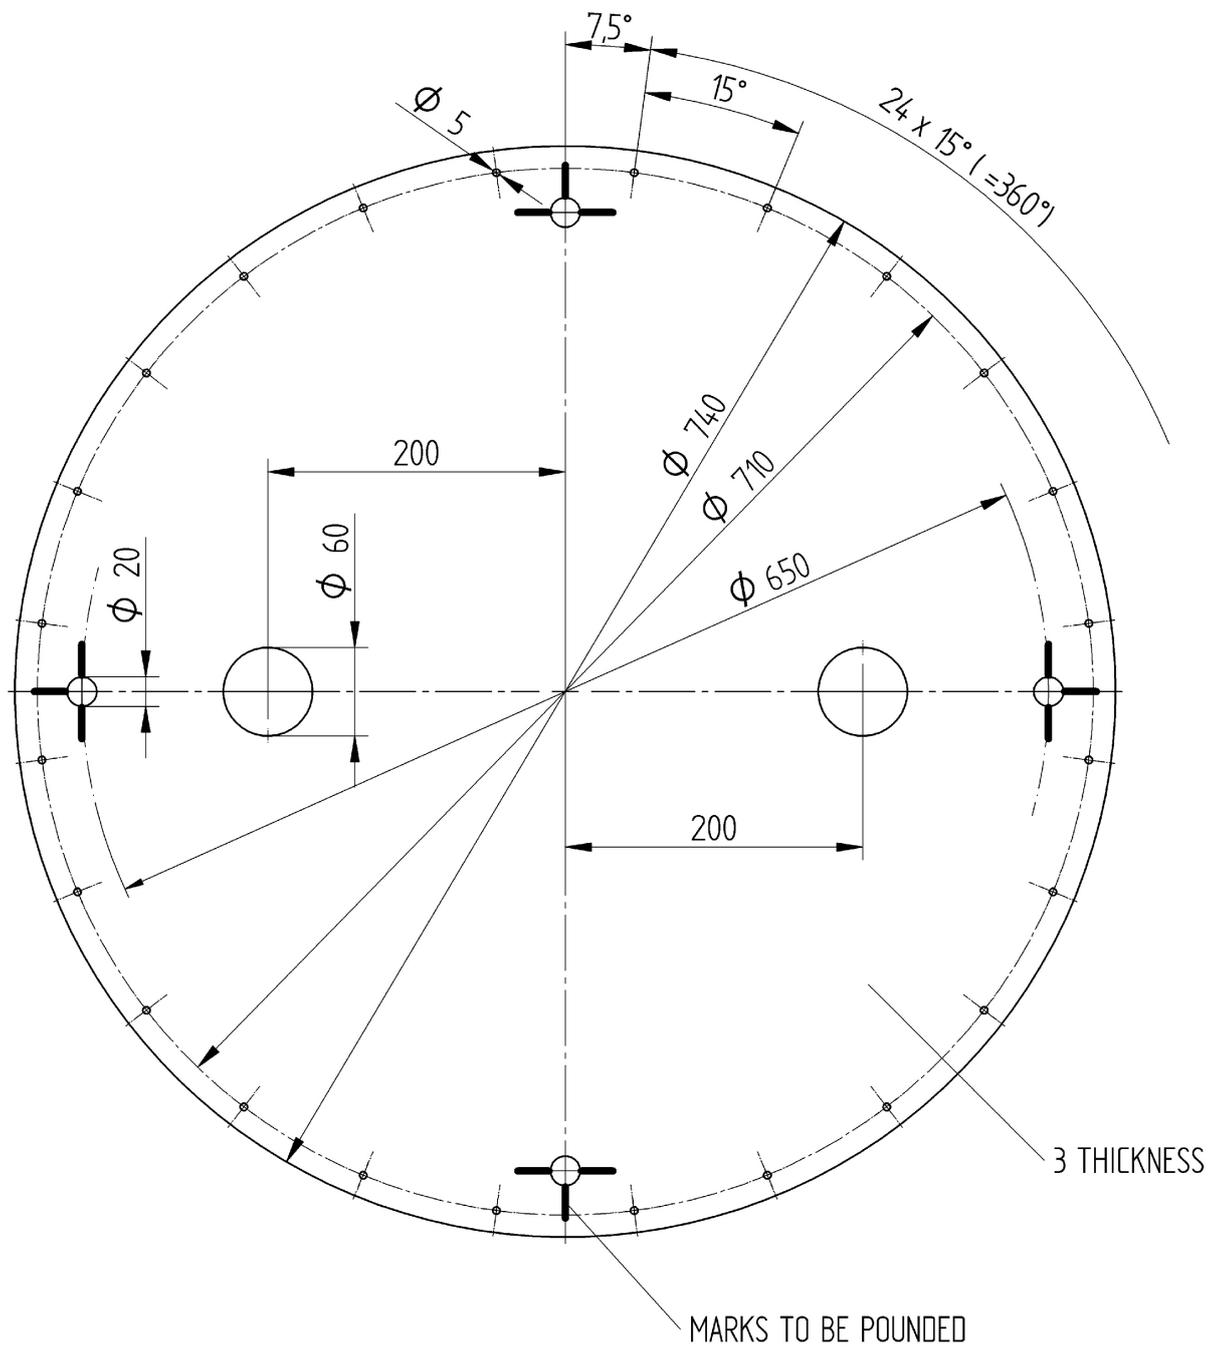

gez	BHA	08.09.04	Meier
01	016623	1107108	BM
00	052749	08/05/04	BAK
			Fig
			Name
			Part No.



ON-LOAD TAP-CHANGER VACUTAP<sup>®</sup>, OILTAP<sup>®</sup>  
 DRILLING TEMPLATE FOR  
 ON-LOAD TAP-CHANGER HEAD

8901838E



© MASCHINENFABRIK REINHAUSEN GMBH 2015  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF THE GRANT OF A PATENT, UTILITY MODEL OR DESIGN.

DATE	NAME	DOCUMENT NO.
06.07.2015	RAEDLINGER	SED 1324333 001 03
06.08.2015	NERRETER	CHANGE NO.
07.08.2015	PRODASTSCHUK	1066507
		SCALE
		1:3

DIMENSION  
 IN mm  
 EXCEPT AS  
 NOTED




ON-LOAD TAP-CHANGER VACUTAP® VR®  
 LIFTING DEVICE F. BELL-TYPE TANK WITH DIVERTER SWITCH INSERT

SERIAL NUMBER

MATERIAL NUMBER  
 7208453E


SHEET  
 1/1

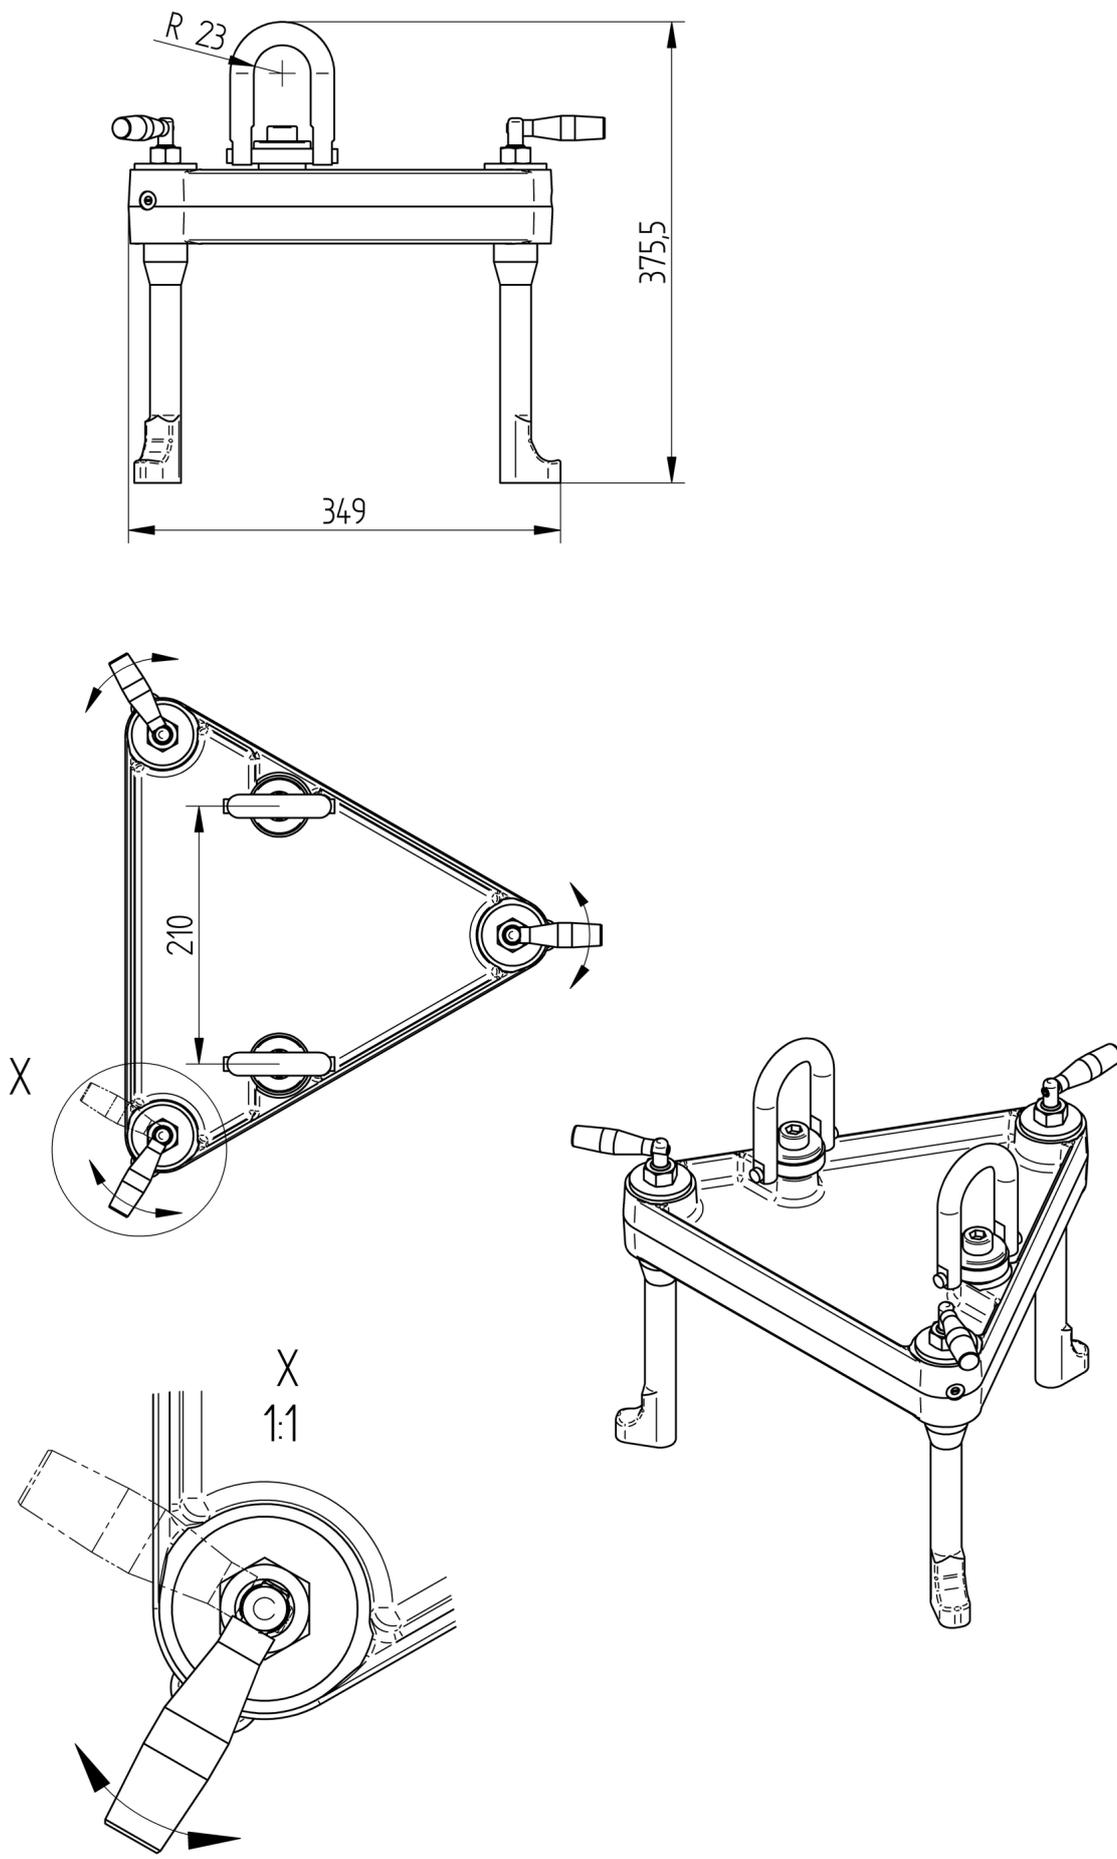

© MASCHINENFABRIK REINHAUSEN GMBH 2016  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF A PATENT, UTILITY MODEL OR DESIGN.

## PIPE CONNECTION WITH TAP-CHANGE SUPERVISORY CONTROL BUSHING WITHOUT OIL FILTER UNIT


NOTICE!  
 THE VENT SCREW ② OF THE MOUNTED HOUSING ① HAS TO BE ON THE TOP

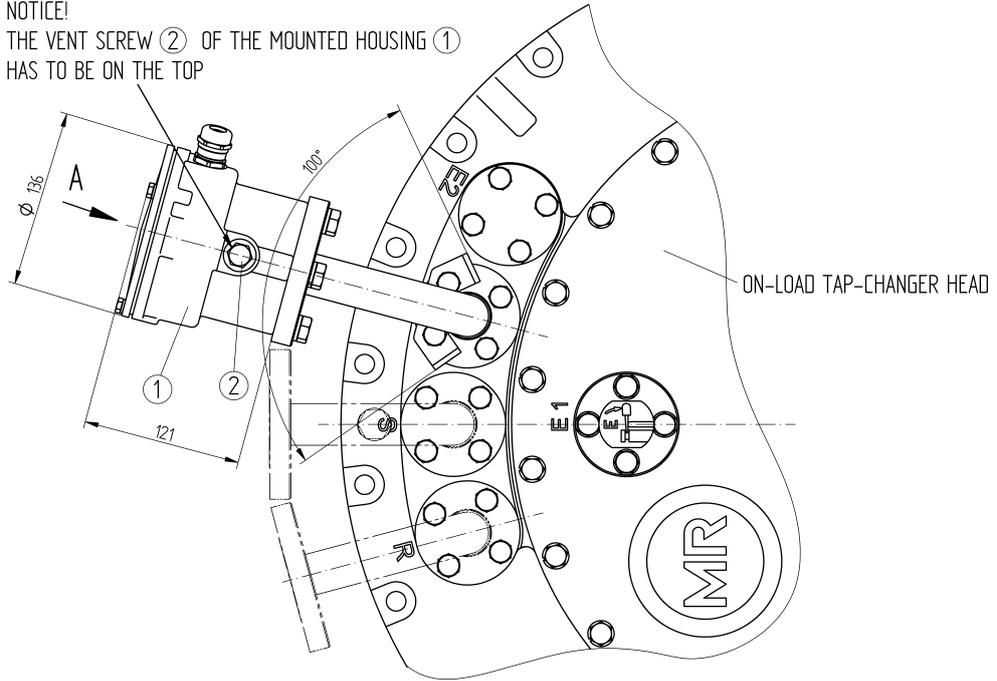

A ↷ 1:1

REPRESENTED WITHOUT COVER

M20x1.5  
 CLAMPING RANGE FOR CONNECTION CABLE:  
 EXTERNAL DIAMETER: 7 - 13 mm

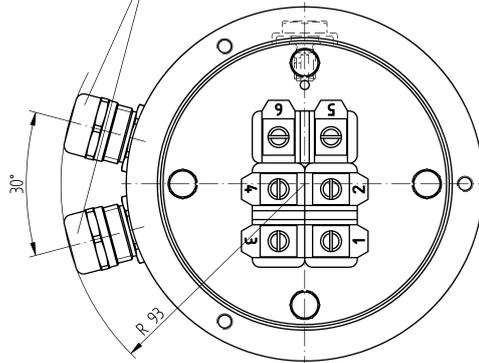

CONNECTION TERMINALS FOR TAP-CHANGE SUPERVISORY CONTROL

WIRING SEE CONNECTION DIAGRAM OF THE MOTOR-DRIVE UNIT

FUNCTION DIAGRAM FOR TAP-CHANGE SUPERVISORY CONTROL SEE MOTOR-DRIVE CONNECTION DIAGRAM

RATED CONTINUOUS CURRENT: 2A  
 RATED VOLTAGE DC/AC (50HZ): 24V ... 250V  
 DIELECTRIC STRENGTH: 1150V / 50HZ / 1 MIN.

DIELECTRIC TEST OF ALL VOLTAGE CARRYING TERMINALS TO GROUND:  
 2000V AC , 50HZ , TEST-DURATION 1 MIN.

DATE	NAME	DOCUMENT NO.
03.11.2016	RAEDLINGER	SED 2425358 001 02
04.11.2016	NERRETER	CHANGE NO.
04.11.2016	PRODASTSCHUK	1078202
DFTR.	SCALE	1:2
CHKD.		
STAND.		

DIMENSION  
 IN mm  
 EXCEPT AS  
 NOTED



ON-LOAD TAP-CHANGER VACUTAP® VM, VR  
 PIPE CONNECTION WITH TAP-CHANGE SUPERVISORY CONTROL

SERIAL NUMBER

MATERIAL NUMBER  
 7661612E

SHEET  
 1/1

## 10.3 Adjustment plans


MASCHINENFABRIK REINHAUSEN GMBH COPYRIGHT RESERVED  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF THE GRANT OF A PATENT, UTILITY MODEL OR DESIGN.

Verbindlich für die Bezeichnung und Bestückung der Anschlusskontakte und Phasen ist das Ausführungsschaltbild. / THE CONNECTION DIAGRAM OF THE ON-LOAD TAP-CHANGER IS BINDING FOR THE DESIGNATION AND THE EQUIPMENT OF THE TERMINALS AND PHASES.


(M) = Antriebsseite des Wählers / DRIVE SIDE OF THE SELECTOR  
 (A) = Laststufenschalterableitung / ON-LOAD TAP-CHANGER TAKE-OFF LEAD

Laststufenschalterkopf mit Kopfantrieb / ON-LOAD TAP-CHANGER HEAD WITH TOP DRIVE


Laststufenschalterkopf mit seitlichem Antrieb / ON-LOAD TAP-CHANGER HEAD WITH SIDE DRIVE

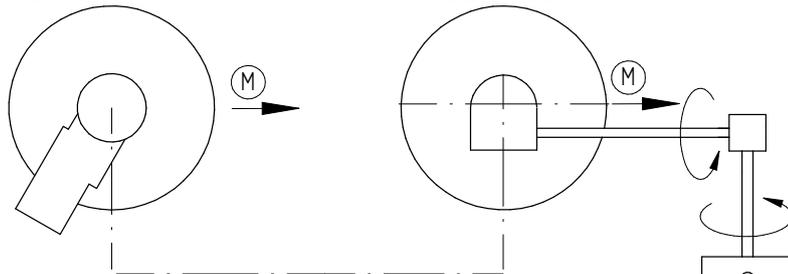


Lastumschalttereinsatz  
 Draufsicht /  
 DIVERTER SWITCH INSERT  
 TOP VIEW

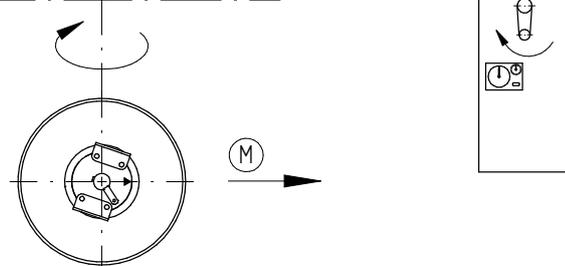

Lastumschalter /  
 DIVERTER SWITCH

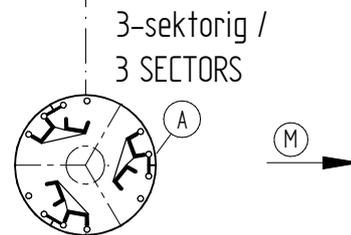


Wählerkupplung /  
 SELECTOR COUPLING

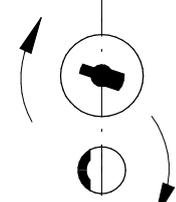


Wählergetriebe /  
 SELECTOR GEAR

Malteserrad oben /  
 UPPER GENEVA WHEEL

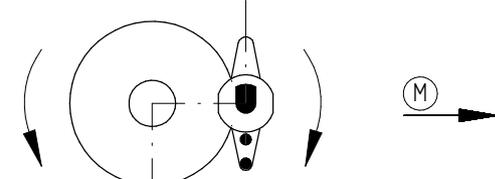

Wähler / SELECTOR

10-teilig dargestellt / 10 PITCH REPRESENTATION

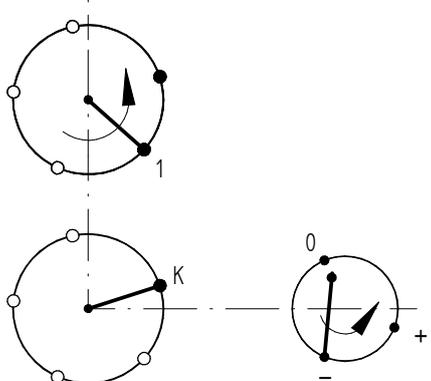

Wählerebene I /  
 SELECTOR PLANE I

Wählerebene II /  
 SELECTOR PLANE II

DOCUMENT NO.	NAME	DATE
SED 8905825 000 00	BUTERUS	26.07.2022
SCALE	WREDE	27.07.2022
CHANGE NO.	KLEYN	27.07.2022
116192		

DIMENSION  
 IN mm  
 EXCEPT AS  
 NOTED



Laststufenschalter / ON-LOAD TAP-CHANGER VACUTAP® VR®  
 VRL III 1600 - E - W  
 Justierplan / ADJUSTMENT PLAN

SERIAL NUMBER

MATERIAL NUMBER  
 101712490M

SHEET  
 1/1

MASCHINENFABRIK REINHAUSEN GMBH COPYRIGHT RESERVED  
 THE REPRODUCTION, DISTRIBUTION AND UTILIZATION OF THIS DOCUMENT AS WELL AS THE COMMUNICATION OF ITS CONTENTS TO OTHERS WITHOUT EXPRESS AUTHORIZATION IS PROHIBITED. OFFENDERS WILL BE HELD LIABLE FOR THE PAYMENT OF DAMAGES. ALL RIGHTS RESERVED IN THE EVENT OF THE GRANT OF A PATENT, UTILITY MODEL OR DESIGN.


DATE	NAME	DOCUMENT NO.
26.07.2022	BUTERUS	SED 8905828 000 00
27.07.2022	WREDE	CHANGE NO.
27.07.2022	KLEYN	1116192
DFTR.	SCALE	
CHKO.		
STAND		

Verbindlich für die Bezeichnung und Bestückung der Anschlusskontakte und Phasen ist das Ausführungsschaltbild. / THE CONNECTION DIAGRAM OF THE ON-LOAD TAP-CHANGER IS BINDING FOR THE DESIGNATION AND THE EQUIPMENT OF THE TERMINALS AND PHASES.


(M) = Antriebsseite des Wählers / DRIVE SIDE OF THE SELECTOR  
 (A) = Laststufenschalterableitung / ON-LOAD TAP-CHANGER TAKE-OFF LEAD

Laststufenschalterkopf mit Kopfantrieb / ON-LOAD TAP-CHANGER HEAD WITH TOP DRIVE


Laststufenschalterkopf mit seitlichem Antrieb / ON-LOAD TAP-CHANGER HEAD WITH SIDE DRIVE

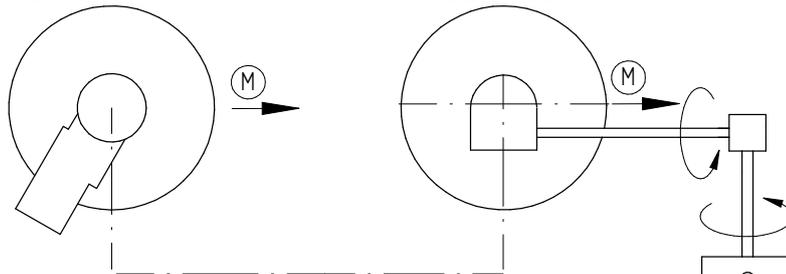


Lastumschalttereinsatz Draufsicht / DIVERTER SWITCH INSERT TOP VIEW

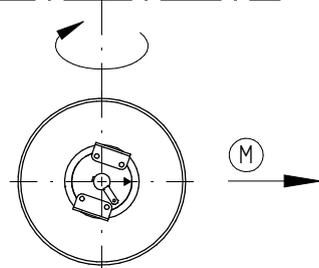

Lastumschalter / DIVERTER SWITCH

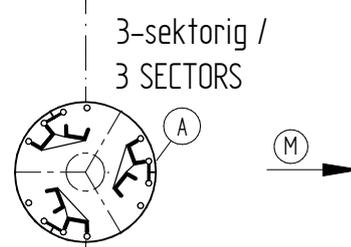


Wählerkupplung / SELECTOR COUPLING

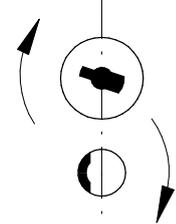


Wählergetriebe / SELECTOR GEAR

Malteserrad oben / UPPER GENEVA WHEEL

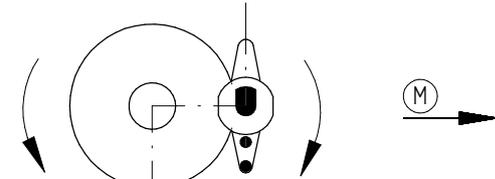


Wähler / SELECTOR  
 10-teilig dargestellt / 10 PITCH REPRESENTATION

Wählerebene I / SELECTOR PLANE I

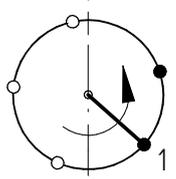

Wählerebene II / SELECTOR PLANE II

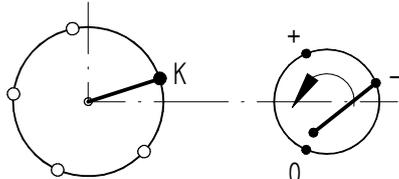

DIMENSION IN mm EXCEPT AS NOTED



Laststufenschalter / ON-LOAD TAP-CHANGER VACUTAP® VR®  
 VRL III 1600 - E - G  
 Justierplan / ADJUSTMENT PLAN

SERIAL NUMBER

MATERIAL NUMBER 101712500M  
 SHEET 1/1

# Glossary

## CO

Change-Over contact

## DC

Direct current

## Dielectric strength

Material-specific property of isolators [kV/2.5 mm]; maximum electrical field strength without a breakdown (arc)

## IEC

The International Electrotechnical Commission (IEC for short) is involved in the preparation and publication of international standards for electrical, electronic and related technologies.

## IP

Ingress protection

## MR

Maschinenfabrik Reinhausen GmbH

## NC

Normally Closed contact

## NO

Normally Open contact

## NPT

National Pipe Thread (US thread standard)





**Maschinenfabrik Reinhausen GmbH**

Falkensteinstrasse 8  
93059 Regensburg  
Germany  
+49 941 4090-0  
info@reinhausen.com  
[reinhausen.com](https://www.reinhausen.com)

Please note:  
The data in our publications may differ from the data of the devices delivered.  
We reserve the right to make changes without notice.  
8958780/00 EN - VACUTAP<sup>®</sup> VR<sup>®</sup> Installation and commissioning instructions -  
06/23  
Maschinenfabrik Reinhausen GmbH 2022

THE POWER BEHIND POWER.